



iVAM1-SUM16-G

Multi-Channel Audio/Video Monitor/Mixers

User Guide

Part Number 821851, Revision D

This publication is protected by federal copyright law. No part of this publication may be copied or distributed, stored in a retrieval system, or translated into any human or computer language in any form or by any means electronic, mechanical, manual, magnetic, or otherwise, or disclosed to third parties without the express written permission of Wohler Technologies.

Reproduction

Licensed users and authorized distributors of Wohler Technologies, Inc. products may copy this document for use with Wohler Technologies, Inc. products provided that the copyright notice above is included in all reproductions.

Customer Support

Wohler Technologies, Inc.
1280 San Luis Obispo Ave
Hayward, CA, 94544
Phone: 510-870-0810
Web: www.wohler.com
Sales: sales@wohler.com
Support: support@wohler.com

Disclaimers

Even though Wohler Technologies, Inc. has tested its equipment and software, and reviewed the documentation, Wohler Technologies, Inc. makes no warranty or representation, either express or implied, with respect to software, documentation, their quality, performance, merchantability, or fitness for a particular purpose.

In no event will Wohler Technologies, Inc. be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect in the hardware, software, or its documentation, even if advised of the possibility of such damages.

Some states do not allow the exclusion or limitation for incidental or consequential damages, so the above exclusion or limitation may not apply to you.

PDF

All text strings appearing in [this shade of blue](#) are hyperlinks.

Other Technologies and Products

Google Chrome is a registered trademark of Alphabet Inc.
Microsoft Windows and Internet Explorer are registered trademarks of Microsoft Corporation.
Dante and Brooklyn are registered trademarks of Audinate Pty Ltd.
Ravenna is a registered trademark of ALC NetworX GmbH.
ZMAN and Aneman are registered trademarks of Merging Technologies.
Evertz and Quartz are registered trademarks of Evertz.
HDMI™, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

All product names, logos, and brands are property of their respective owners. All company, product and service names used in this document are for identification purposes only. Use of these names, logos, and brands does not imply endorsement.

Last Update

August 7, 2026

TABLE OF CONTENTS

Table of Contents

User Guide	1
TABLE OF CONTENTS	3
Table of Contents	3
CHAPTER 1: Installation	7
Introduction	7
Overview	7
Safety	7
Instructions	7
Safety Symbols	8
LCD Display Care & Safety	8
LCD Display Cleaning	8
Mounting	9
Heat Dissipation	9
Sympathetic Vibration	9
Mechanical Bracing	9
Electrical Interference	9
Power	10
Compliance	10
FCC	10
ICES-003	10
CHAPTER 2: Local Operation	11
Operation	11
Startup	11
Front Panel	11
Rear Panel	13
SFP-2022-6 / SFP-2110 Address Setup	19
Channel Meter Screen	20
Operating the Monitor	21
Add or remove Clusters from the Monitor Mix	21
Solo a Cluster	21
Adjust the Trim of a Cluster	22
Selecting the Loudness Cluster	22
Video Screen	23
Menu / Option Touchscreen	24
Main Menu	25
Loudness Menu	25
Loudness Meter	25
Loudness Settings	28
Source Select	29
Presets	31
All Presets	31

Preset Favorites.....	33
Unit Settings	34
Speaker Options	34
Unit Configuration.....	35
Meter Scales	37
Phase Configuration	39
HDMI Settings	40
Analog Configuration	41
System Options Menu.....	42
Network Settings	42
System Reboot.....	44
System Update.....	45
Factory Reset	46
System Information	47
Passcode Settings	48
Forgotten Passcode	50
CHAPTER 3: Technical Info	51
CHAPTER 4: /VAM1-SUM16-G Web GUI	56
Web Browser / Control Device	56
First Time IP Assignments.....	56
Peer-to-Peer Connection	56
Network Connection	57
Network Setup	58
Dashboard	59
Audio Meters.....	63
System Preferences	64
System Audio Clock Reference.....	64
Loudness Configuration Tab	65
Phase Indicator Configuration Tab.....	66
GPI Action Settings	67
Front Panel Configuration Tab.....	69
NA Input Signal Tab	71
Volume Scale Settings Tab.....	72
Preset Management	73
Output Routing.....	77
Destination Outputs	78
Source Inputs	79
Output Options	80
Typical Questions Regarding Output Routing	80
What signal outputs can be controlled using the Output Routing feature?	80
How do the outputs behave if I do not purchase OPT-OUTPUT-ROUTING license?	80
What is the difference between Global Output Routing and Output Routing in Presets?	81
How do I route whatever is being monitored to the XLR and AES outputs?...81	
How do I have a downmixed pre-fade output on AES Pair-1 combined with a post-fade output on the Analog XLRs?	81
How do I make the XLR outputs follow the Audio Meter screen solos & mutes while the AES Pair-1 does not?	82
How do I route only specific monitored channels to the Analog XLR outputs?	82
The optional Global Output Routing feature works great. But what if we don't	

want to create any Presets and want to monitor audio only using Source Select? How would I configure different outputs for Source Select choices? .83	
How do I keep the internal speakers muted and have audio only on the analog XLR outputs?	83
How do I ensure that the outputs are automatically muted when the Headphone jack is inserted?	84
What are AoIP-Pair 9 and AoIP Pair 10?	84
How do I ensure that my outputs are pre-faded but follow the solo-mutes on the web interface? This will allow us to monitor only the unmuted/solo Audio Meter channels on amplified stereo speakers connected to the Analog XLR's.	84
Global Evertz Routing	86
Preset Replication	89
Import/Export Presets	91
Export Configuration	91
Import Configuration	92
System	94
System Information	94
SFP Information	95
Licenses	96
Factory Reset	97
Reboot System	98
APPENDIX A: Software Upgrades.....	99
Introduction	99
Download the Software	99
Update Methods	99
Local Update from the Front Panel	100
Updating via the Web GUI using a Flash Drive	102
Updating an iVAM1-SUM16-G Remotely	104
Updating Multiple Units Remotely.....	106
APPENDIX B: Dante Network Setup	109
Introduction	109
What is in the iVAM1-SUM16-G for Dante?	109
Dante™ Device Setup.....	111
Dante Clock Selection.....	113
Channel Names	113
AES67.....	114
Device Lock	116
Dante Firmware Upgrades.....	116
Additional Information	117
Dante™ Legal Disclosures	117
APPENDIX D: Ravenna (ZMAN) Setup	118
Introduction	118
What is in the iAM or iVAM for Ravenna?.....	118
RAVENNA-Compatible Talker/Listener.....	118
AVB Ethernet Features	118
Configuring the AOIP Merging Option Card	119

Getting Started General Settings	120
Getting Started Out-Of-Band NMOS for ST-2110-30 & Ravenna	121
Getting Started PTP	124
Getting Started Session Sources	125
Getting Started Session Sinks	126
Getting Started Session Info	127
Getting Started Ins/Outs	128
Getting Started I/O Router.....	128
Operation:	129
Connecting Remote Source to Local Sink.....	129
ZMAN Session Sinks.....	129
ZMAN Session Sources	131
ZMAN Updating	132
APPENDIX E: API Documentation	135
Introduction	135
API: Presets.....	135
APPENDIX F: Out of Band Control.....	149
Introduction	149
SFP IP Address Configuration	149
SFP System Configuration	150
SFP 2110 Configuration	151
SFP 2110 Preset Config	154
Diagnostic Information	155
APPENDIX G: 2110 SFP Personalities	157
Introduction	157
Personality Change	157

CHAPTER 1: Installation

Introduction

Overview

The /VAM1-SUM16-G Series is a well featured easy to use and competitively priced IP ready 16 channel audio monitor /mixer. It can be configured to operate in channel mode and/or pair mode. Standard features include 3G-SDI and a pair of Analog inputs and outputs. Upgrade/license other signal formats and processing options, as and when needed, either initially or after purchase. Refer to the Specifications section of this manual or contact Wohler Sales for more information.

The /VAM1-SUM16-G is compact and simple to operate, with straightforward controls. It has a very wide format touch screen LCD display providing up to 16 high resolution level meters. Any audio channels (or channel pairs) from any audio/video source stream may be monitored.

The /VAM1-SUM16-G includes two 3G SDI inputs and it can monitor both video and audio from them. It also includes one switched 3G SDI output, and a pair of analog inputs and outputs. Optional modules will allow decoding of an additional SDI input, MADI, AES3, SMPTE 2110, SMPTE 2022-6, and AES streams. It contains APIs for remote management.

Optional Output routing enables the flexibility to route input signals to various outputs. Optional I/O for AES3 on HD-15 (including selected audio source converted to AES3 out), MADI on BNC (and looped output), and SMPTE 2110 or SMPTE 2022 via SFP is offered. Option cards will allow choice between AoIP, an additional 8 channels of analog inputs and outputs, or 2 additional SFP cages.

Setups are created and configured using local menus and a web browser over a network connection to the integral web server of the /VAM1-SUM16-G. Up to 64 Presets are accommodated. The web server will also allow you to view the audio meters remotely.

Safety

Instructions


1. Read, keep, and follow all of these instructions; heed all warnings.
2. Do not use this equipment near water.
3. Use only a dry cloth to clean the equipment.
4. Do not block any ventilation openings.
5. Do not install near any heat source such as a radiator, heat register, amplifier, or stove.
6. Do not attempt to plug the unit into a two-blade outlet (with only two prongs of equal width).

Important:

By design, the supplied AC mains power cord will only plug into a three-prong grounded outlet for your safety. If the plug does not fit into the outlet, contact an electrician to replace the obsolete outlet.

7. Protect the power cord from being walked on or pinched, particularly at plug connection on the equipment and at the socket.
8. Use only the attachments/accessories specified by the manufacturer.
9. Unplug the equipment during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing will be required under all of the following conditions:
 - a. The equipment has been damaged in any way, such as when the power-supply cord or plug is damaged.
 - b. Liquid had been spilled or objects have fallen onto the equipment.
 - c. The equipment has been exposed to rain or moisture.
 - d. The equipment does not operate normally.
 - e. The equipment has been dropped.

Safety Symbols

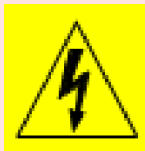WARNING:

The symbol to the left warns of electric shock hazard inside the unit. Disconnect the power cord before removing access panels when installing upgrades. Only qualified service personnel are to operate the equipment with covers removed, and are to exercise caution to avoid personal injury.

LCD Display Care & Safety

Be gentle with the LCD screen. Do not let hard objects strike it or touch it.

- If the display screen should crack or break, causing the internal organic substance to leak out, do not inhale it or let it touch any part of your body.
- If the internal organic substance should touch your skin or clothing, immediately wash it off using soap and plenty of water.

LCD Display Cleaning

Do not use the following to clean the display screen. They may damage the polarizer.

- Water
- Ketone solvents (Ketone or acetone)
- Aromatic solvents (toluene or xylene)
- Ethyl alcohol

- Your breath

Wipe the screen with a very soft cloth or use Scotch 810 Magic Tape to adhere to the soiled surface of the LCD screen and then carefully peel it off along with the soil.

Mounting

The unit is designed for a standard 19" rack. Install it at ear/eye level for best high frequency response and visual observation of the display screens. Please adhere to the following clearances:

Table 1-1: Clearance Recommendations

Clearance	Surface
24"	Front
3"	Rear
2"	Sides
1.75"	Top and Bottom (if either radiates heat)
0"	Top and Bottom (if no heat)

Heat Dissipation

The ambient temperature inside the mounting enclosure should not exceed 40° Celsius (104° Fahrenheit). Adjacent devices can be rack mounted (or stacked) in proximity to the unit if this temperature is not exceeded. Otherwise, allow a 1RU (1.75"/44.45mm) space above and below the unit for air circulation.

Important

Heat generated by the class D power amplifiers, power supplies, and other components is vented by slots in the sides and back of the unit. Therefore, as a safety precaution, you must allow proper ventilation on these surfaces.

Sympathetic Vibration

Sympathetic vibration from other equipment (cables, etc.) in the rack may be serious enough to interfere with the unit's sound quality. If you experience sympathetic vibrations, use thin card stock, felt, foam, or weather-stripping between the vibrating surfaces. Tie loose cables securely with cable ties.

Mechanical Bracing

The 1RU chassis is securely attached to the front panel. In addition, the chassis has mounting tabs through which you attach it to the rack rail. This feature will reduce or eliminate rear bracing requirements in many mobile/portable applications. The weight of internal components is distributed fairly evenly around the unit.

Electrical Interference

Be careful to avoid mismatched cable types and other similar causes of undesired

reflections in digital signal systems. If severe enough, such reflections can result in corruption of the digital data stream. As with any audio equipment, maximum immunity from electrical interference requires the use of shielded cable; however, satisfactory results can sometimes be obtained without it. The internal circuitry ground is connected to the chassis.

Power

The unit connects to an AC mains power source (100 to 240 VAC, 65W, 50/60Hz) using an IEC power cord.

When the mains plug or appliance coupler is used as the disconnect device, the disconnect device should remain operable.

Compliance

FCC

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

ICES-003

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

CHAPTER 2: Local Operation

Operation

The /VAM1-SUM16-G can be operated easily and simply from controls on its front panel, as described in this chapter. It may be accessed remotely in two ways, via the Wohler Web GUI for administrative purposes or by third party equipment via Application Programming Interface (API) commands. The Wohler Web GUI is described in Chapter 4 of this manual. The API commands are described in Appendix E of this manual.

Startup


The /VAM1-SUM16-G will begin its startup process when it is connected to power. There is no power switch. It is normal for the product to require about 45 seconds to start up and be ready to use.

When the /VAM1-SUM16-G completes its startup, the **Status** indicator will turn green. Depending upon optional settings, all channel pairs will either be in the muted condition or set in a predetermined way. You may then use the **Source** and **Channel** controls to enable only the program channels you want to hear.

Front Panel

The front panel is shown in Figure 2-1.

Figure 2-1: /VAM1-SUM16-G Front Panel

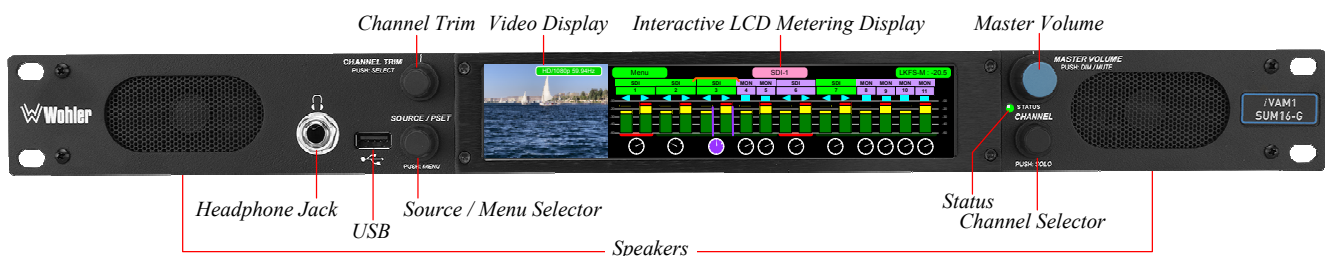

1. **Interactive LCD Metering Display:** A widescreen LCD touch screen allows monitoring of bar graph meters of up to 16 channels as well as selecting which channels to monitor audibly. The monitored and unmonitored channels can be shown in distinctive colors, selected according to Preset. Refer to the **Preset Management: Preset Input Routing** section of Chapter 4. This screen can also be configured to monitor video or loudness.
2. **Speakers:** Local near field audio monitoring is achieved through the use of Class D amplifiers. There are two (left/right) speakers.

3. **Video Screen:** This screen allows monitoring of video present on the selected 3G/HD/SD-SDI stream.
4. **Headphone Jack:** A 1/4" jack for an optional headphone is provided on the front panel. Speaker audio can be optioned to either mute or not mute when headphones are plugged in. This is set in the **Speaker Options** menu. If the speaker audio is set to mute with headphone insertion, and a headphone is plugged into the Headphone Jack, the following icon will appear at the center top of the

display: 

5. **Master Volume:** This controls the speakers, the headphone and the analog outputs. As the **Master Volume** control is turned, a graphic appears on the upper part of the screen as follows:



Depending upon the chosen settings in the Volume Scale Settings tab of the System Preferences screen as described in Chapter 4 of this manual, pressing the **Master Volume** control dims the audio and a second press mutes the audio. When the audio is muted, a speaker muted icon appears at the center top the display:




This icon also displays whenever the **Volume** control is turned all the way counterclockwise. Rotating the **Master Volume** immediately removes the dim or mute.

6. **Channel Trim:** This control lets you adjust the volume level of individual channels or pairs in the mix.
7. **Source/Preset/Menu Selector:** Turning this control right or left selects between the available licensed input sources. Pressing the **Source/Preset** control for 2 seconds proceeds to the **Main Menu**. Alternatively, rotating the **Source/Preset** control can be set to No Operation, so that rotating it will have no effect at all. Refer to the **Source Knob Select** setting in the **Unit Config** menu.
8. **Channel Selector:** This is used to select individual channels or channel pairs for the purposes of soloing, adding to the monitored mix or removing from the mix, or trimming their volume level.
9. **USB:** This USB 2.0 Type A connector allows use of a flash drive (not supplied) to perform software updates.
10. **Status:** This indicator lights green when the system is powered and ready for use. A solid or blinking yellow color indicates that the product is starting up. A red color indicates that a system update is taking place.

Rear Panel

The rear panel is shown in Figure 2-2.

Figure 2-2: /VAM1-SUM16-G Rear Panel & Option Cards

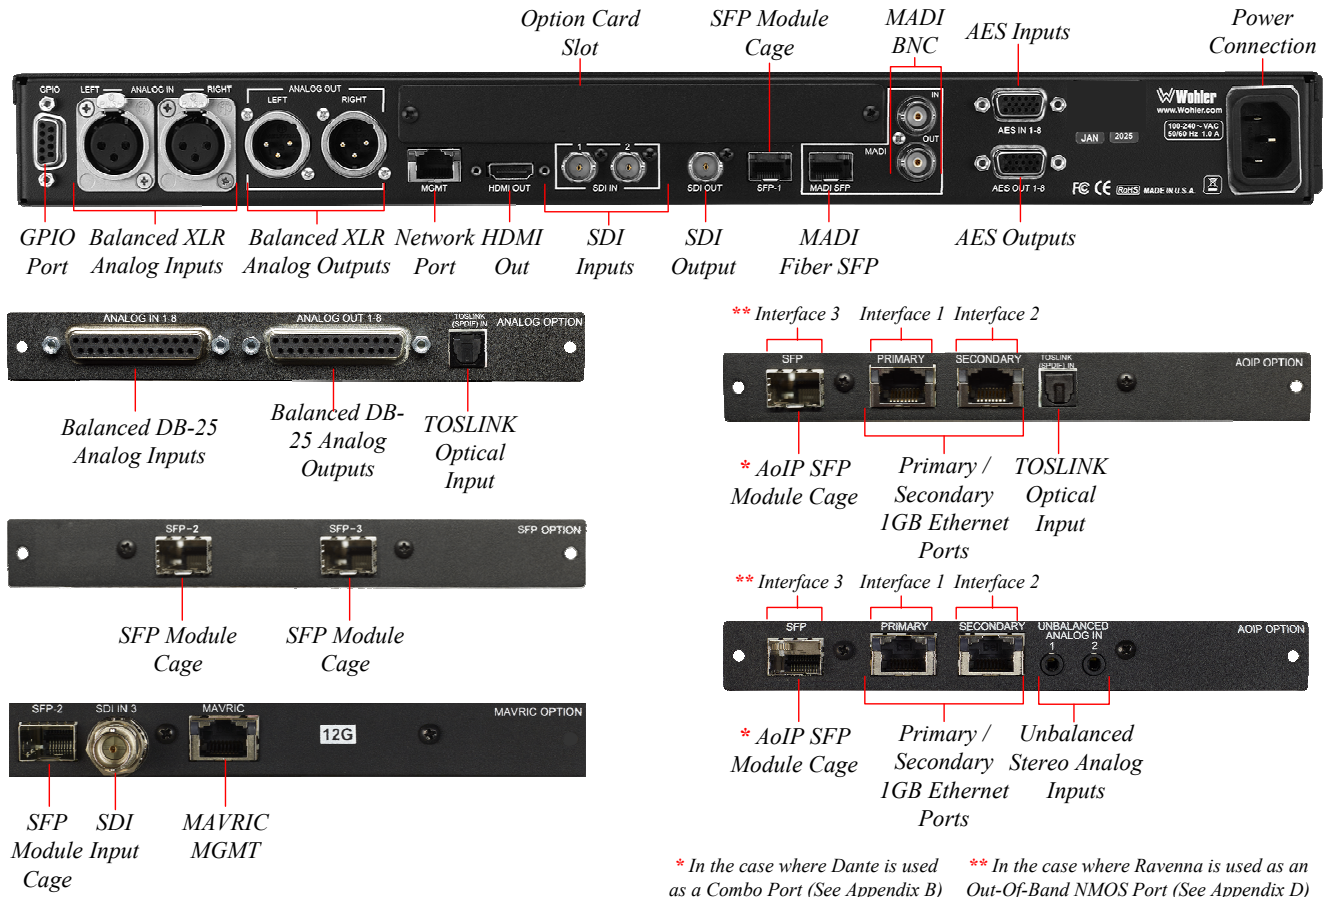

Power Connection: The /VAM1-SUM16-G receives power from an AC inlet, which is a standard IEC receptacle for 100 to 240 VAC $\pm 10\%$, 50/60 Hz power connection. Four regional AC power cords, supplied according to shipping region, are available.


Important:

By design, the supplied AC mains power cord will only plug into a three-prong grounded outlet for your safety. If the plug does not fit into the outlet, contact an electrician to replace the obsolete outlet.

1. **SDI Inputs:** These two BNC connectors accept the two 3G/HD/SD-SDI input signals containing audio and video to be monitored. This is a standard feature.
2. **SDI Output:** This BNC connector outputs the selected 3G/HD/SD-SDI or SFP module input signal.
3. **HDMI Output:** An HDMI output of the monitored 3G/HD/SD-SDI or SFP module video source is available from this connection.

4. **Network Port:** This Ethernet port can connect to either a LAN or to a PC to let you perform administrative tasks remotely. The Wohler Web GUI is described in Chapter 4 of this manual. Third party equipment, connecting to the /VAM1-SUM16-G via a LAN plugged into this port and using an API commands, can view and change product options, as well. This API is described in Appendix E of this manual.
5. **MADI BNC:** (optional) The COAX input accepts an AES10 64-channel signal at 48 kHz sample rate. An optional license key must be purchased to enable this function. The COAX output is reclocked from the MADI source. When power to the /VAM1-SUM16-G is not present, the COAX input and output are automatically connected together to allow the MADI signal to pass through. A software license must be installed for this input to function. Refer to the **System Setup** section in Chapter 4 to install software licenses.
6. **MADI Fiber SFP:** (optional) This input module accepts an optical AES10 64-channel MADI input signal at 48 kHz sample rate. An optional license key must be purchased to enable this function. A software license must be installed for SFP ports to function. Refer to the **System Setup** section in Chapter 4 to install software licenses.
7. **AES Inputs:** (optional) This HD-15F connector accepts 4 AES3id digital audio pairs (8 channels) at a 48 kHz sample rate. Refer to Figure 2-3 for the pinout of this connector. The easiest way to interface with this connector is to use an HD-15 to VGA adaptor cable. Channels are selected as AES 1-8. A software license must be installed for these inputs to function. Refer to the **System Setup** section in Chapter 4 to install software licenses.

Figure 2-3: AES HD-15F Connector Pinout

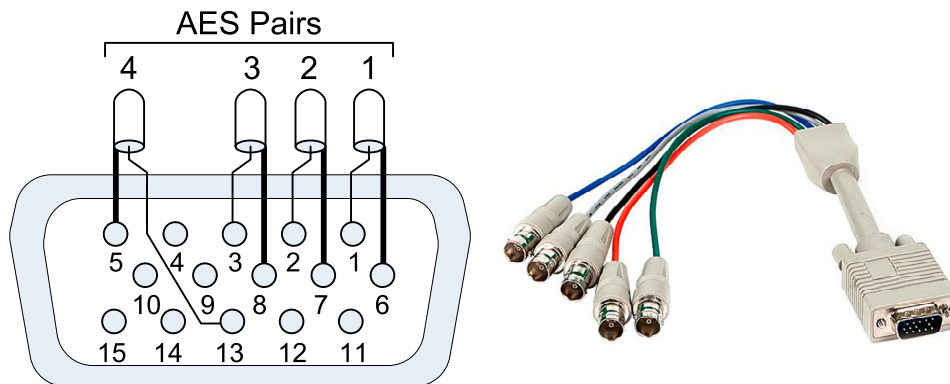


8. **AES Outputs:** This HD-15F connector provides 4 AES3id digital audio pairs (8 channels) at a 48 kHz sample rate from selected monitored sources. Refer to Figure 2-3 for the pinout of this connector. The easiest way to interface with this connector is to use an HD-15 to VGA adaptor cable. These outputs are not controlled by the **Volume** control. Monitored channels 1 and 2 are sent from AES-1, channels 3 and 4 are sent from AES-2, channels 5 and 6 are sent from AES-3, and channels 7 and 8 are

sent from AES-4.

9. **SFP Module Cage:** An SFP cage is provided to accept one optional SFP module compatible with SDI coaxial or optical signals. The SFP modules are hot swappable for convenience. An optional license key must be purchased to enable each module. A software license must be installed for the SFP port to function. Refer to the **System Setup** section in Chapter 4 to install software licenses. The following SFP modules are offered:
 - a. **3G/HD/SD-SDI Single Video Receiver with Active Loopback:** This uses HD-BNC connectors.
 - b. **3G/HD/SD-SDI Video SFP with Optical Input:** This uses LC fiber connectors. It is a Single-Mode Receiver, Medium Haul, Non-MSA, and no output.
 - c. **SMPTE 2022-6 Receiver:** This uses Multi-Mode 850 NM, LC fiber connectors. It allows the /VAM1-SUM16-G to monitor SDI audio transmitted in real time over Ethernet. You must use the MN-Set configuration software to set up this option. It is available from Wohler Technologies Technical Service.
 - d. **SMPTE 2110 Receiver:** This uses Multi-Mode 850 NM, LC fiber connectors. It allows the /VAM1-SUM16-G to monitor SDI audio transmitted in real time over Ethernet. You must use the MN-Set configuration software to set up this option. It is available from Wohler Technologies Technical Service.
 - e. **SMPTE 2110 or 2022-6 Receiver:** This uses Multi-Mode 850 NM, LC fiber connectors. It allows the /VAM1-SUM16-G to monitor SDI audio transmitted in real time over Ethernet. You must use the MN-Set configuration software to set up this option. It is available from Wohler Technologies Technical Service.
10. **Analog Inputs:** These female XLR connectors provide two balanced analog inputs: Left and Right. The **Analog Inputs** are standard on the /VAM1-SUM16-G. Refer to Figure 2-4 for the pinout of this connector.


Figure 2-4: Analog XLR-F Output Connections

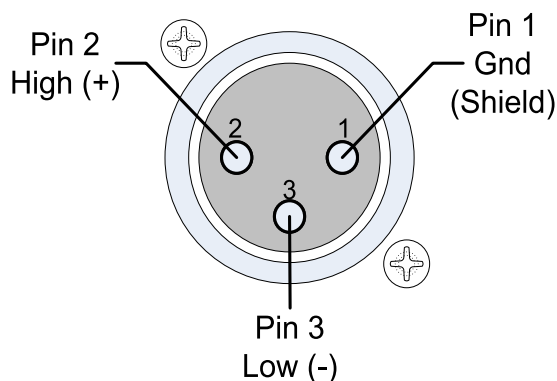

11. **Analog Outputs:** These male XLR connectors provide two balanced

analog outputs: Left and Right. The source of these signals is the mix of audio as monitored by the internal speakers and is adjusted by the **Volume** control. The **Analog Outputs** are standard on the *iVAM1-SUM16-G*. Refer to Figure 2-5 for the pinout of this connector.

Figure 2-5: Analog XLR-M Output Connections

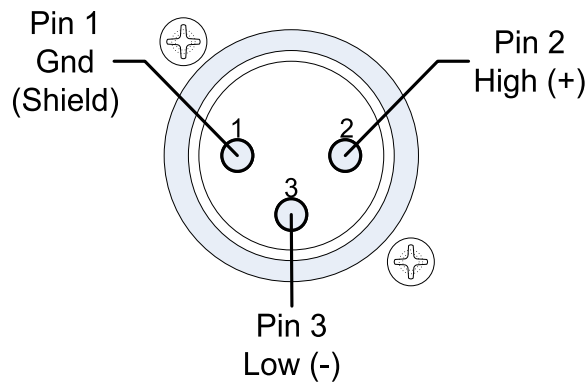

12. **Option Card Slot:** This metal plate can be removed to reveal a location in which future optional modules can be installed.
13. **TOSLINK Optical Input** (optional): This connector is located on the panel of the optional OPT-iVAM ANALOG Option card, as well as on the panels of the optional 829171 or 829172 AoIP Option cards. It provides an optical stereo pair input.
14. **Unbalanced Stereo Analog Inputs** (optional): These 1/8" jacks are located on the on the panels of the optional 829171-1 or 829172-1 AoIP Option cards. They provide connections for left and right unbalanced stereo input channels.
15. **Balanced Analog DB-25 Outputs** (optional): This DB-25 female connector outputs 8 channels of +10dBu broadcast level balanced audio. This connector is located on the panel of the optional OPT-iVAM ANALOG Option card. The source of these signals is the monitored audio channels as shown on meters 1 - 8. Tascam cables may be used, and can be purchased by contacting Wohler Sales. Refer to Figure 2-6 for the pinout of this connector.


Note: PCM channels marked as data channels (such as those containing encoded Dolby streams) are automatically muted from being sent out to the external amplifier and speakers.

Note: When these outputs are used to connect to an external amplifier and speakers, the external amplifier should be muted whenever the *iVAM1-SUM16-G* is being powered up or powered down.

16. **Balanced Analog DB-25 Inputs** (optional): This DB-25 female connector inputs 8 channels of up to +10dBu broadcast level balanced audio. This connector is located on the panel of the optional OPT-iVAM ANALOG Option card. These signals are monitored on meters 1 - 8 by default. Tascam cables may be used, and can be purchased by contacting

Wohler Sales. Refer to Figure 2-6 for the pinout of this connector.


Figure 2-6: Analog DB-25F Input and Output Connections

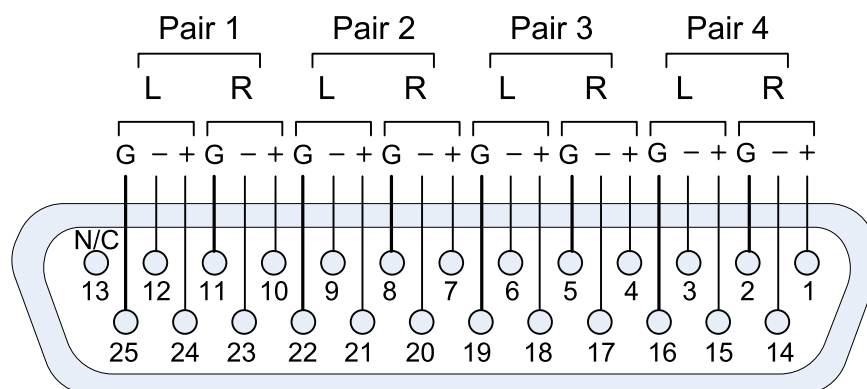

17. **AoIP SFP Module Cage** (optional): This provides a location in which to insert the AoIP Module supplied with the OPT-DANTE (iVAM) and OPT RAVENNA 64 (iVAM) options.
18. **Primary / Secondary 1GB ENET** (optional): Primary and Secondary Gigabit Ethernet interfaces are provided with the AoIP option module for use with Dante64, Ravenna64 or SMPTE 2110-30/AES67. The two gigabit Ethernet interfaces provide hitless/SMPTE 2022-7 processing options.
19. **Combo Port** (optional): An optional 1GB Fiber Ethernet SFP module and the Primary RJ-45 Ethernet port on the option card operate as a combo port, that is, they provide two different physical layers, optical fiber or electrical, but share the same Ethernet characteristics. However, the two different ports cannot be used simultaneously. You must choose to connect either one or the other.
20. **GPIO Port:** This DB-9 female connector contains 4 General Purpose Inputs (GPI) and 2 General Purpose Outputs (GPO), as well as common ground connections. A software license must be installed for the GPIO port to function. Refer to the **System Setup** section in Chapter 4 to install software licenses. Refer to the **GPIO Port Actions** section of Chapter 4 for uses of this interface. Refer to Figure 2-7 for the pinout of this connector.

Normally, each GPI is internally pulled to a high (5 VDC) level when not actuated. Pull a GPI to a low (ground) level to activate it. A dry contact closure can be used to achieve this, as can a 0 to 5 volt logic level. Do not exceed 5 VDC or less than 0 VDC if driven from a logic level to avoid possible damage to the GPI input.

Figure 2-7 – GPIO Port Pinout

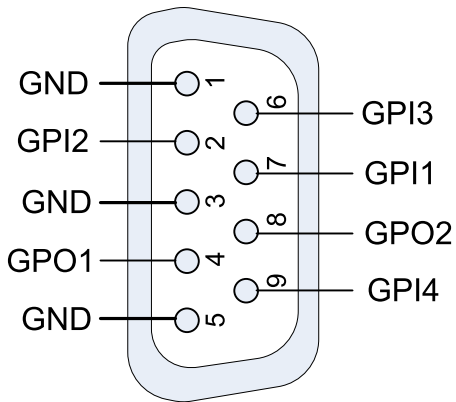


21. **MAVRIC RMoC Option Card** (optional): This optional module enables MAVRIC functionality, adds another SDI BNC input which supports 12G SDI signals, and adds an SFP slot for 12G/3G SDI or ST2110 input. Separate SFP Purchase required. The 12G BNC input can be selected using the **SDI-3** selection from the **Source Select** menu. The SFP input can be selected by using the **SFP-2** selection from the **Source Select** menu. The SDI output from the unit will be 3G (1920x1080) when a 3G/6G/12G SDI signal is being monitored from the inputs of this option card.

SFP-2022-6 / SFP-2110 Address Setup

While the optional SFP-2022-6 and SFP-2110 modules monitor program audio created from distinctly different technologies, both are connected to the network in the same way and have the same requirements for addressing. Figure 2-8 illustrates the network connections they need.

Figure 2-8: SFP-2022-6 and SFP2110 Network Diagram

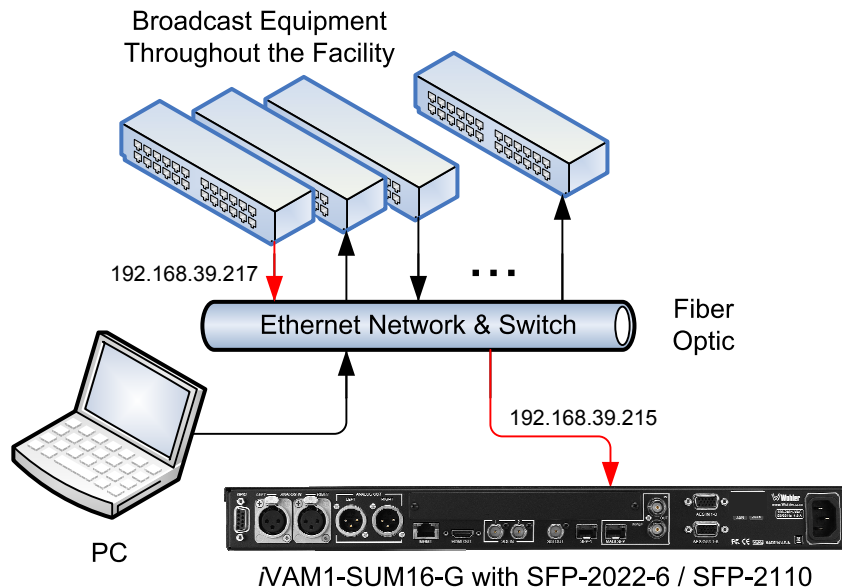



The optional SFP-2022-6 or SFP-2110 module furnished by Wohler Technologies is manufactured by Embrionix and comes from the factory with a default IP address. To integrate it into your digital network, you need to set its address to the source to be monitored. You must use the MN-Set configuration software to set up this option. It is available from Wohler Technologies Technical Service. The procedure to accomplish this is described in the **SFP-2022-6 / SFP-2110 Setup Guide** (part number 821822), which is available at <https://wohler.com/downloads/>.

Channel Meter Screen

Audio meters, as well as other indicators are displayed on the wide touchscreen LCD display in Clusters which can be set up as single channels or stereo pairs, as shown in Figure 2-9.

Figure 2-9: Audio Level Meter Screen

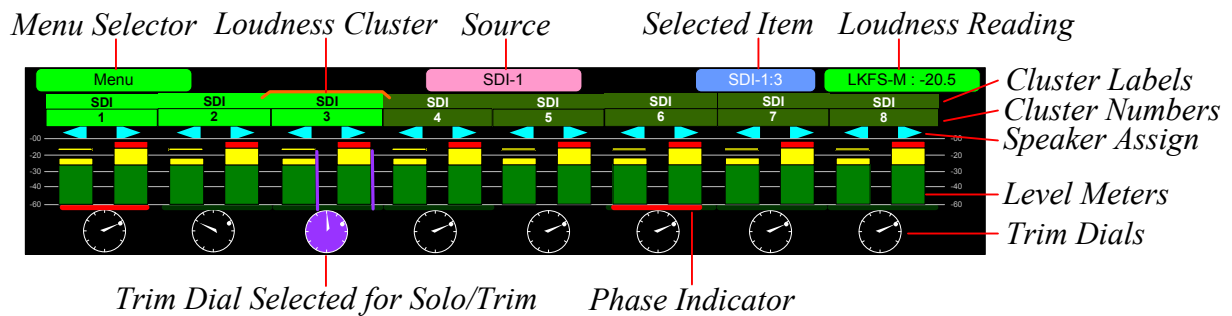

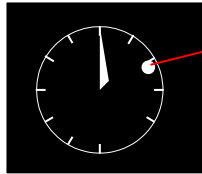1. **Cluster Labels and Numbers:** The name or input source of each Cluster as well as its associated number is shown. As shown in Figure 2-9, if the background is dark, the Cluster is not included in the audio mix. However, if the block containing the name and number is bright, then the Cluster is part of the mix. The text of the Cluster Labels may be set using the Web GUI. The color of the Cluster Labels may also be adjusted for sources that are included in a Preset. Refer to the **Preset Management: Preset Input Routing** section of Chapter 4.
2. **Speaker Assignment:** The destination of each channel is shown:
 - ◀ Indicates the channel will be monitored from the left speaker.
 - ▶ Indicates the channel will be monitored from the right speaker.
 - Indicates the channel will be monitored from both speakers.
3. **Level Meters:** A Level Meter is shown for each channel.
4. **Trim Dials:** At the bottom of each channel pair is the round **Trim Dial** indicator. Its rotational position shows the whether the Cluster has been trimmed and relatively how much: The adjustment range is -60dB to +12dB, and the dot indicates where 0dB is located in the range.
 
5. **Channel Trim:** The channel gain of a particular Cluster can be changed dynamically. When a Cluster can be adjusted, the **Trim Dial** will highlight in purple:  The rotational position of the indicator within the **Trim Dial** shows the adjustment.

Note: To undo all Cluster trims and reset them to the default value in the

Preset, press and hold the **Channel Trim** knob for 3 seconds.

6. **Loudness Cluster Indicator:** The current selected Cluster which is undergoing Loudness analysis is indicated by an orange bracket.
7. **Loudness Reading:** This indicator displays the Loudness of the selected Cluster. This is also a button which allows you to select which Cluster will receive Loudness analysis.
8. **Phase Indicator:** This indicator will normally be dark green if the two channels are in phase. If the two channels are out of phase, the indicator will light red. Note that the Phase Indicator does not appear for Clusters that only contain a single channel.
9. **Source:** The input source of the displayed channels is displayed.
10. **Selected Item:** The number of the channel or cluster currently being selected either by touching the screen or rotating the Channel knob will appear here for 10 seconds.
11. **Menu Selector:** Touch the **Menu** button to cause the **Main Menu** to appear.

Operating the Monitor

The audio mixer terminology of “solo” is used in this manual when referring to muting all but a specific Cluster or channel listening only to that cluster or channel.

Add or remove Clusters from the Monitor Mix

To add a Cluster to the monitor mix, simply touch the channel meters for that Cluster. Touch that Cluster’s channel meters again to remove it.

Alternatively, rotate the **Channel** knob so that the white box surrounds that Cluster and then press the **Channel** knob. Press the **Channel** knob again to remove the Cluster.

The channel number(s) being selected will appear for 10 seconds in blue at the top of the screen to verify.

Solo a Cluster

To solo a Cluster, simply touch and hold the channel meters for that Cluster for 3 seconds. A blue box will surround the cluster and it will be the only Cluster heard. Touch that Cluster’s channel meters again to remove the solo and return to monitoring the Clusters the way they were before the solo.

Alternatively, to solo a Cluster, rotate the **Channel** knob until a white box surrounds the meters of the cluster to be soloed. Press the **Channel** knob for 3 seconds. A blue box will then surround the cluster and it will be the only Cluster heard. At this point you may rotate the **Channel** knob to move the blue box to solo other Clusters. Press the **Channel** knob once again to remove the solo and return

to monitoring the Clusters the way they were before the solo.

Adjust the Trim of a Cluster

Select the Cluster to be trimmed using one of the above methods. With the **Trim Dial** highlighted, rotate the **Channel Trim** knob. Trim can be adjusted in 1 dB steps from -60 dB to +12 dB. The relative trim level will be indicated on the **Trim Dial**. Changing channel gain affects all the outputs that have "Volume Control" enabled in the Web GUI. Refer to Chapter 4. For stereo Clusters, trim is applied to both channels. To end the adjustment, remove the Solo using one of the above methods.

Note: To undo all Cluster trims and reset them to the default value in the Preset, press and hold the **Channel Trim** knob for 3 seconds.


Selecting the Loudness Cluster

To select a different Cluster to be monitored for Loudness, touch the Loudness Reading button on the display. It will turn from green to orange. Then touch the cluster you would like to begin analyzing for Loudness. The orange Loudness Cluster Indicator will move to that Cluster. After 15 seconds, Loudness Reading button will time out and turn green again.

Video Screen

Information about the signal can be superimposed over the upper part of the video image. The **Video Info** selection in the **Unit Config Menu** determines whether this information is always displayed, never displayed, or is only displayed for the first 5 or 10 seconds after switching to the video screen. Figure 2-10 shows the Video Screen, which appears to the left of the meter display on the widescreen LCD.

Figure 2-10: Video Screen

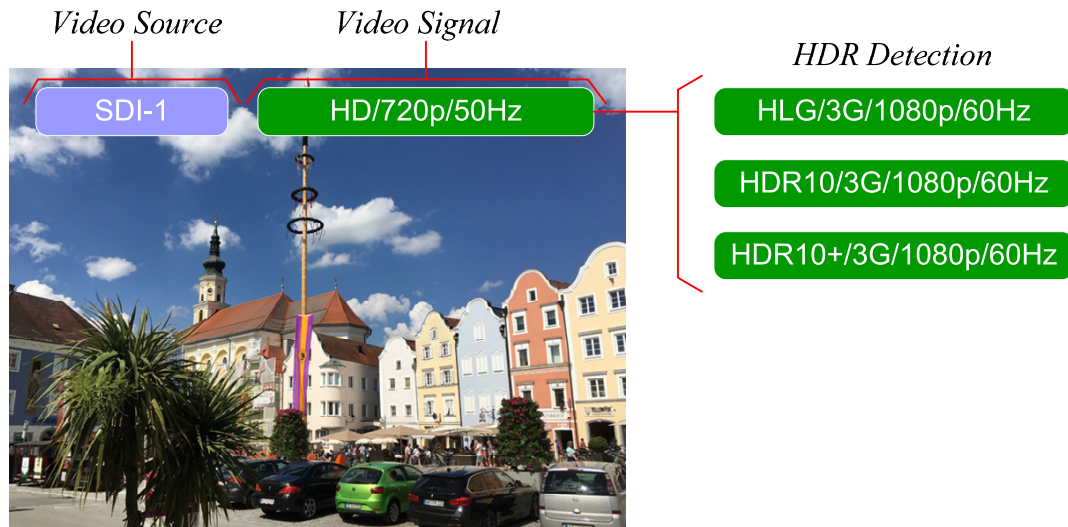


1. **Video Source:** This box displays the input source of the video signal.
2. **Video Signal:** This box displays the resolution and frame rate of the video signal. A large variety of signals are detected, including HDR.

Note: If the **Video Source** and **Video Signal** displays have been optioned to disappear after 5 or 10 seconds and you wish them to reappear, simply touch the video screen.

Menu / Option Touchscreen

You may set most options or view a variety of system information using the self-contained menus. To access the **Main Menu**, touch the **Menu** button which appears on the upper left of the level meter screen or press the **Source/Preset** knob for 2 seconds. To exit the Menus, either touch the **Hide Menu** button or hold the **Source/Preset** knob for 2 seconds. Figure 2-11 is a diagram of the menu arrangement, a tree showing how to reach any menu from the **Main Menu**. Figure 2-12 shows the **Main Menu**.


Figure 2-11: Menu Tree

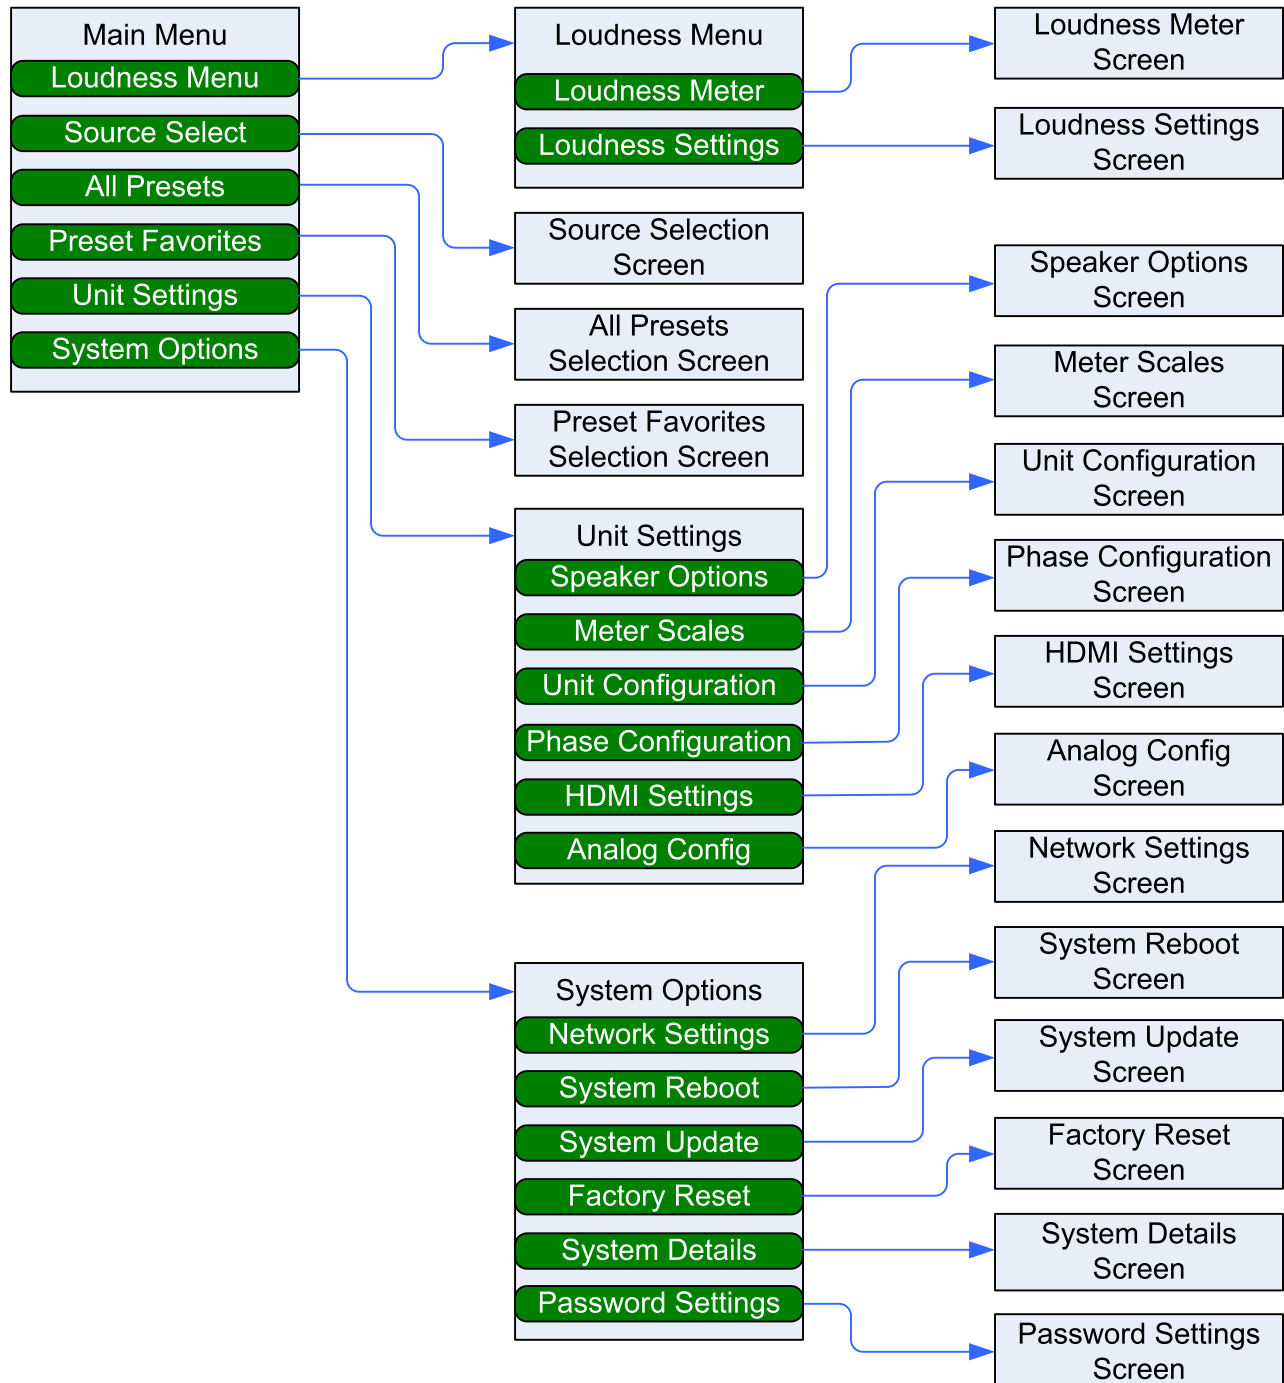

Main Menu

Touch the **Menu** button or press the **Source/Preset** knob to access the **Main Menu**. The **Main Menu** is shown in Figure 2-12. You may simply touch your selection or rotate the **Source/Preset** knob to navigate to your choice. As you rotate the **Source/Preset** knob, each selection button will highlight. Press the **Source/Preset** knob to make the selection. Touch **Exit** to close this menu or touch **Video** to close this menu and return this screen to displaying video.


Figure 2-12: Main Menu

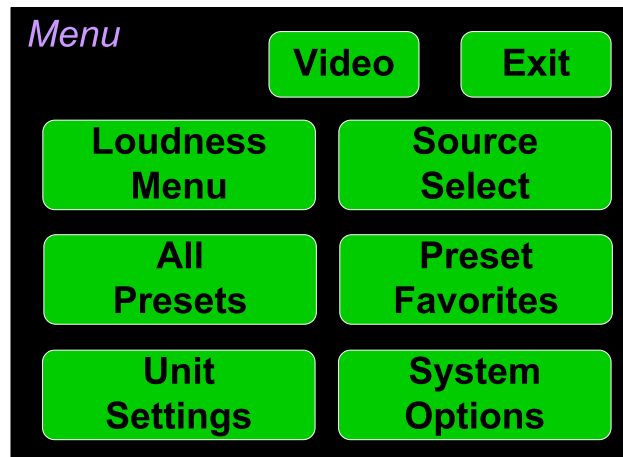

Loudness Menu

Touch the Loudness Menu button to reach the Loudness Menu Screen, which allows you to make a selection of either the Loudness Meter Screen or the Loudness Settings Screen. The Loudness Menu Screen is shown in Figure 2-13.

Figure 2-13: Loudness Menu Screen

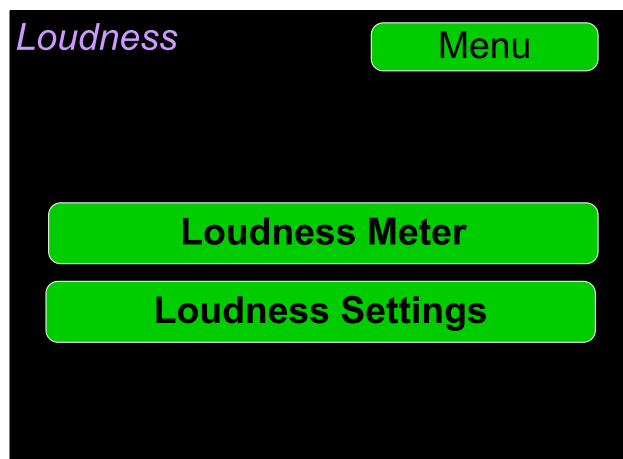


Loudness Meter

Touch the **Loudness Meter** button on the Loudness Menu screen to reach the Loudness Meter Screen. The Loudness Meter Screen is a more detailed view of the

Loudness Measurement. It is displayed along with the channel meter screen and is shown in Figure 2-14. You may touch your selection or rotate the **Source/Presets** knob to navigate to your choice.

As shown in Figure 2-14, the **Source** knob is located at the lower left of the Loudness Meter Screen. If the **Source Knob Select** setting in the **Unit Config** menu is set to **Cluster Select**, then rotating the **Source** knob will adjust the channel cluster source of the Loudness measurement. A box on the lower right of the screen shows the selected Loudness Source. Only one channel or channel pair may be selected at a time for measurement.

Figure 2-14: Loudness Meter Screen

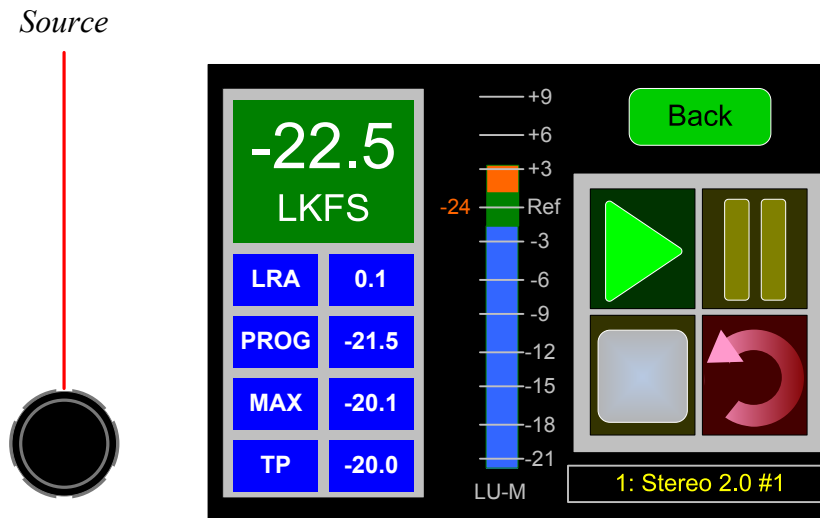

Note: In order to calculate loudness accurately, it is crucial that you correctly set the Channel Function for each channel. Depending upon the designated function of each channel, its signal levels will contribute differently to the Loudness calculation. Refer to the **Configuration | System Preference | Loudness Configuration** tab in the Web GUI.

The following data is available on the **Loudness Meter Screen**:

The Program Loudness (shown as -22.5 LKFS in the figure above) is shown digitally at the upper left of the screen as well as on the meter in the center. At the base of the meter in the center, one of three indications appears:

1. LU-M: This means that the Loudness Window is set to Momentary.
2. LU-S: This means that the Loudness Window is set to Short Term.
3. LU-C: This means that the Loudness Window is set to Custom. The Loudness Window is set in the Loudness tab in the Web GUI.

The LU Meter scale colors have the following meaning:

1. Blue: Loudness is lower than the Reference Level by the Alarm Tolerance.
2. Green: Loudness is within the Alarm Tolerance.
3. Orange: Loudness is greater than the Alarm Tolerance.




Below the digital Loudness meter, in the left column, the following parameters are also displayed:

1. The Loudness Range (LRA) is the measure of variation between the calculated loudest and softest passage over the program period (shown as LRA -0.1 above).
2. The Average Loudness is the average of all calculated loudness measurements made over the Program period (shown as PROG - 20.5 above).
3. The Maximum Loudness is the maximum calculated loudness over the program period (shown as MAX -20.1 above).
4. The Maximum True Peak Loudness is the absolute loudest peak waveform over the program period (shown as TP -20.0 above).

Note: Further and more detailed descriptions of all of the above Loudness terms may be found in the ITU-R BS.1770-3 loudness standard.

The controls available on the Loudness Meter Screen are:


1. **Cluster Select:** You may change which Cluster is being measured by simply rotating the **Source** knob to select any other monitored channel cluster. Alternately, touch the green Loudness reading on the Audio Meter screen. It will turn orange and you will be able to touch other clusters and read their Loudness. Changing clusters will reset the loudness readings and start a new calculation on the newly selected cluster.
2. **Start:** When **Manual Mode** is selected in the Loudness Settings screen, from a stopped condition, the **Start** button will reset the gathered loudness data and begin a new reading. From a paused condition, data will not reset as monitoring is resumed.
3. **Pause:** The **Pause** button will temporarily stop or continue gathering loudness data. Data will not be reset using this control. While paused, Loudness will not be measured.
4. **Reset:** The **Reset** button will reset the gathered loudness data. If it is pressed while a loudness measurement is in progress, a new reading will then immediately begin.
5. **Stop:** When **Manual Mode** is selected in the Loudness Settings screen, the **Stop** button will stop gathering loudness data. Data will be held for viewing and not be reset using this control.
6. **Back:** Touch the **Back** button to go to the Loudness Menu.

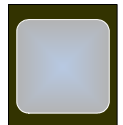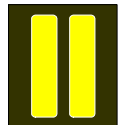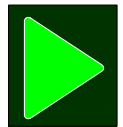

Loudness Settings

Touch the **Loudness Settings** button on the Loudness Menu to display the **Loudness Settings** screen. This screen allows you to change between **Manual** and **Continuous** Monitoring Modes, and also to set the Alarm mode. It also provides a summary of various Loudness settings, as set in the **Configuration | System Preference | Loudness Configuration** tab of the Web GUI. Refer to Figure 2-15.

Figure 2-15: Loudness Settings Screen

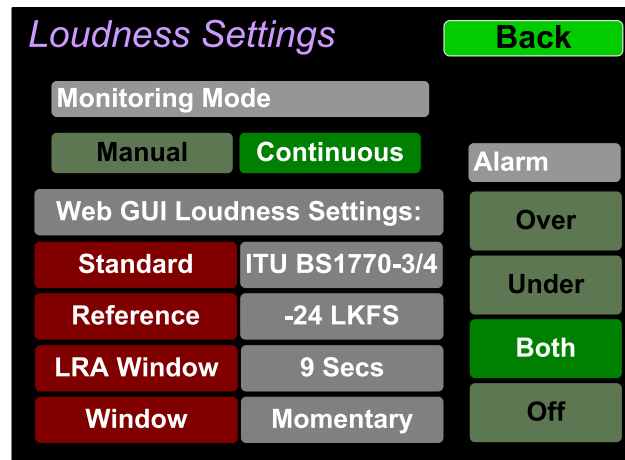

The controls and information available on the Loudness Meter Screen are:

Monitoring Mode:

1. **Manual:** Touch the Manual button to enable Manual Mode. This allows you to measure the loudness of a specific program or segment of a program, such as a commercial. In this mode, the **Start** and **Stop** button on the Loudness Meter screen can be manually used to begin and end a loudness measurement interval. The reading for that interval is then held on the Loudness Meter.
2. **Continuous:** Touch the **Continuous** button to enable Continuous Mode. In this mode, loudness readings are continually made. The **Stop** button on the Loudness Meter screen is not active.

Alarm:

1. **Over:** The Alarm indication will only appear when Loudness has exceeded the **Reference Level** by the **Tolerance** amount.
2. **Under:** The Alarm indication will only appear when Loudness is below the **Reference Level** by the **Tolerance** amount.
3. **Both:** The Alarm indication will only appear when Loudness has exceeded or is below the **Reference Level** by the **Tolerance** amount.
4. **Off:** The Alarm indication will not appear.

Web GUI Loudness Settings: These settings are included on this screen for reference only. They cannot be changed on this screen.

1. **Standard:** This is the loudness standard by which the loudness calculation is made.
2. **Reference:** This is the set point in the loudness measurement about which

the determination is made as to whether an alarm should be displayed.

3. **LRA Window:** This is a moving window of time over which the loudness measurement is made.
4. **Window:** This may be set to **Momentary**, **Short**, or one of 22 values, ranging from one second to two hours.

Note: Further and more detailed descriptions of all of the above Loudness terms may be found in the ITU-R BS.1770-3 loudness standard.

When you have completed reviewing or changing the settings, touch the **Back** button to return to the Loudness menu.


Source Select

If you have set the **Source Knob Selection** setting in the **Unit Config** menu to **Source Select**, you may change the monitored source by simply rotating the **Source** knob.

Alternatively, touching the **Source Select** selection on the **Main Menu** proceeds to the **Source Select** menu, which shows all of the possible sources. The selected source is shown in a light color. You may simply touch another source in this menu to switch to it or rotate the **Source/Preset** knob to navigate to your choice and then press it.

This screen also shows sources which are unlicensed and therefore nonfunctional. These sources are shown in a gray color. To license these sources so that they may be used, contact Wohler Technologies. Figure 2-15 shows the Source Select Menu.

Figure 2-15: Source Select Menu

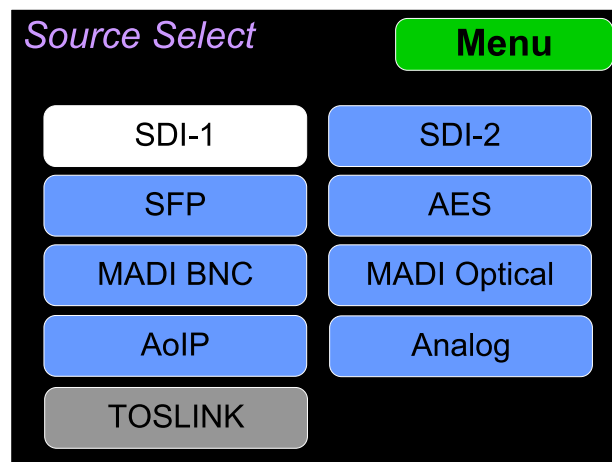


Touch **Menu** to exit this menu.

If you touch MADI BNC, MADI Optical, or SFP, an additional selection screen will be shown, asking you select which 8 MADI channels to monitor or which SFP functionality to monitor. An example of these screens is shown in Figure 2-16.

Note: AoIP, TosLink and/or Analog (DB25) sources are only available if the appropriate hardware option cards are installed on the unit. Refer to Table 3-3. If not installed, then the system will show message **Feature is not supported or requires valid hardware**, as illustrated in the last screen shown in Figure 2-16.

Figure 2-16: Additional Selection Screens:

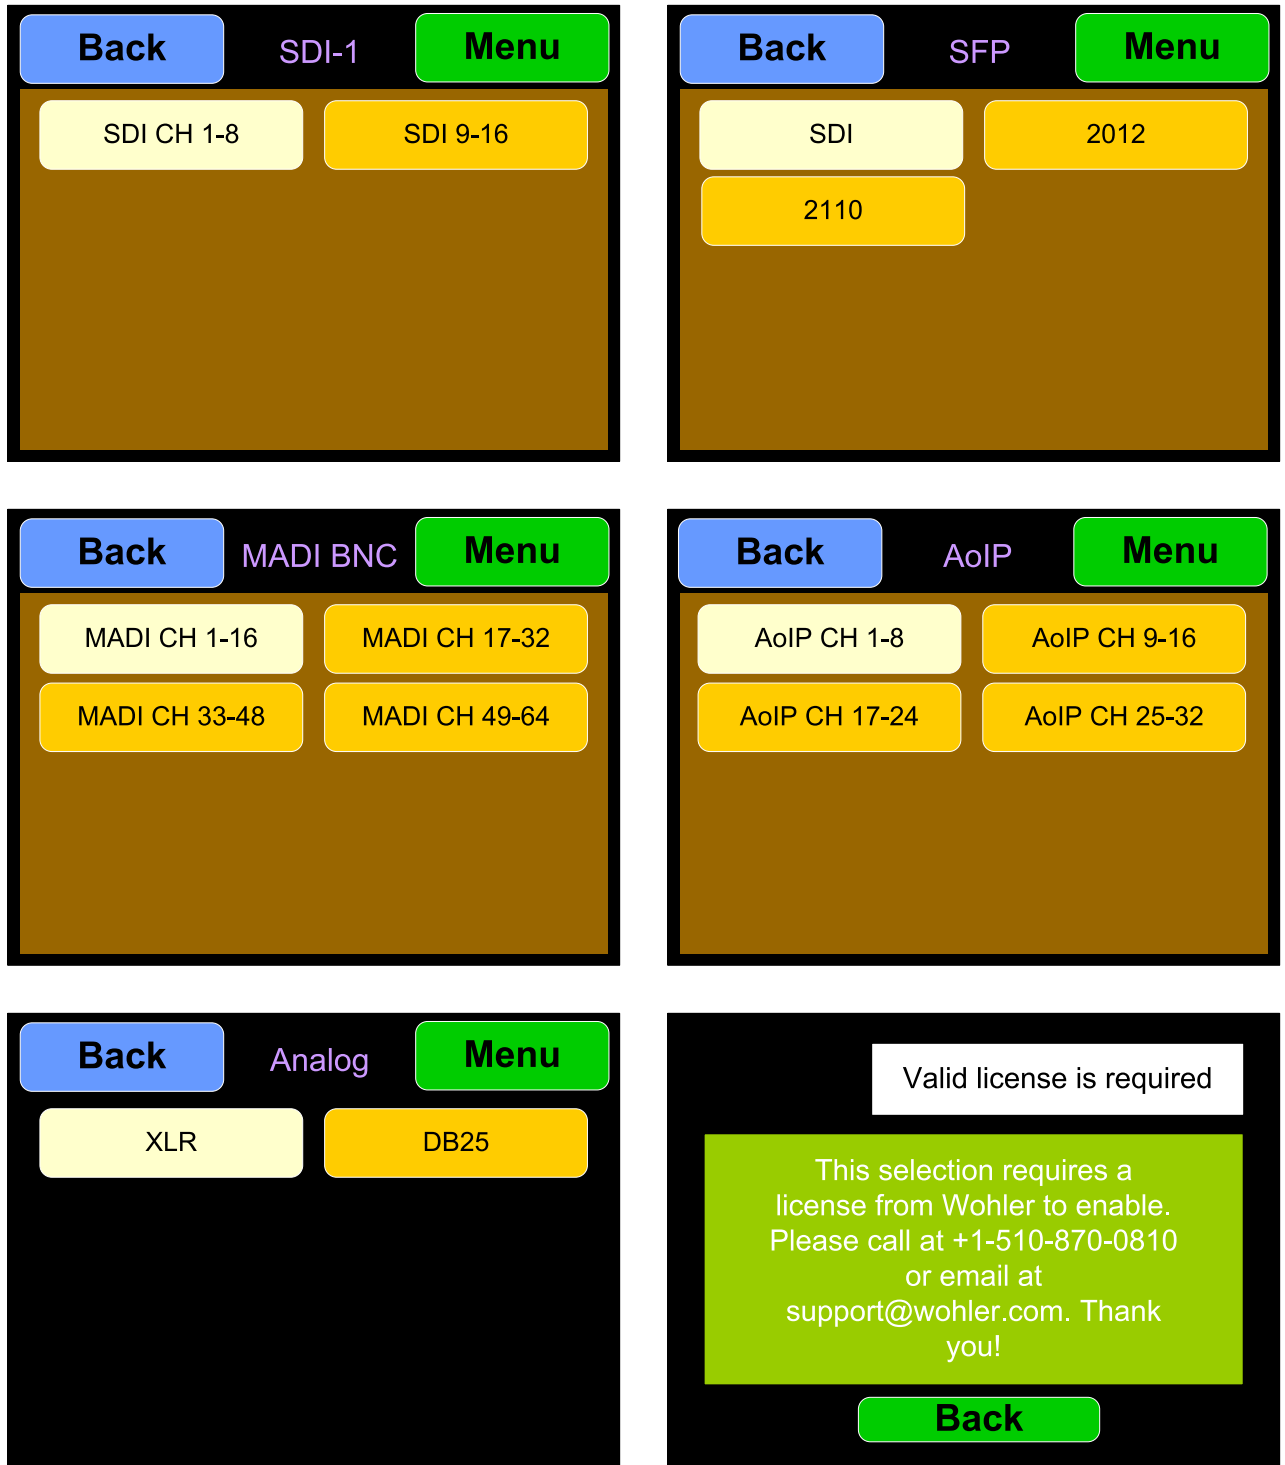

Touch **Back** to return to the **Source Select** menu or touch **Menu** to return to the **Main Menu**.

Presets


Presets are pre-arranged input and monitoring setups that can be used to monitor a variety of combinations of inputs. They may be set up to allow quick and easy selection of monitoring configurations for various productions and situations. If you have not set up any Presets, use the Configure Presets page in the Web GUI to do so. Refer to Chapter 4. Or, if you prefer not to set up any Presets, simply monitor the sources directly using the Source Select button in the Menu.

In addition to the menu access described in the following two sections, the **Source** control can be used to directly select any Preset or any Favorite Preset. Refer to the **Source Knob Select** setting in the **Unit Config** menu.

All Presets


Touch the **All Presets** button to display the All Presets Group Selection screen as shown in Figure 2-18. If no Presets have been created, the screen in Figure 2-20 appears instead. You may touch your selection or rotate the **Source/Preset** knob to navigate to your choice and then press it.

Figure 2-18: All Presets Screen - Group Selection

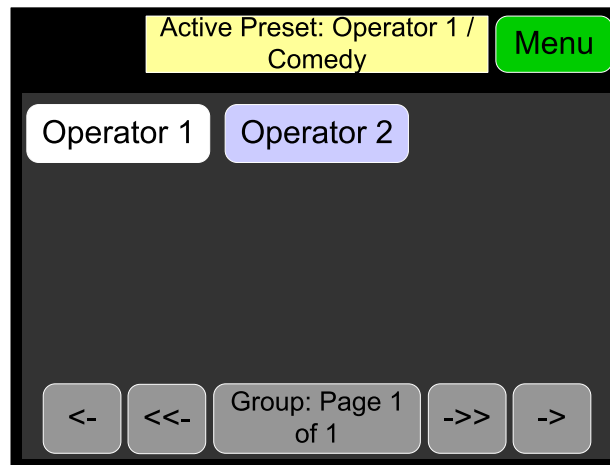

The Presets are normally arranged into Groups. Use this screen to select which Preset-containing Group to examine. After selecting one of the Groups, the Preset Selection screen shown in Figure 2-19 is shown.

Figure 2-19: All Presets Screen - Preset Selection

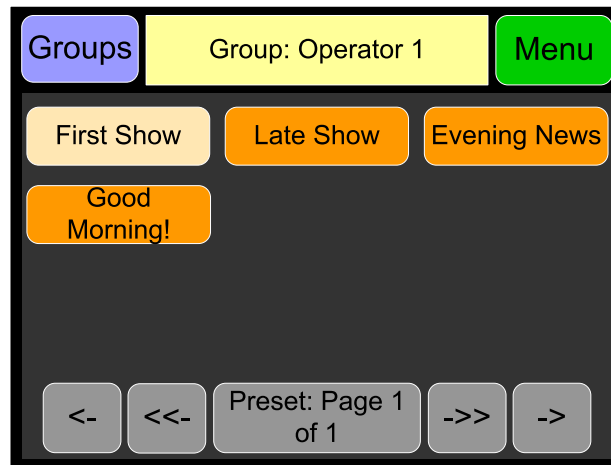


To select a Preset, touch your selection or rotate the **Source/Preset** knob to navigate to your choice and then press it.

touch the associated button. After a quick 2-second delay, the metering screen will display the channels contained in that source.

To return to the All Presets Group Selection screen instead, touch the **Groups** button. To return to the Menu without making a selection, touch the **Menu** button.

Figure 2-20: All Presets Screen - No Presets

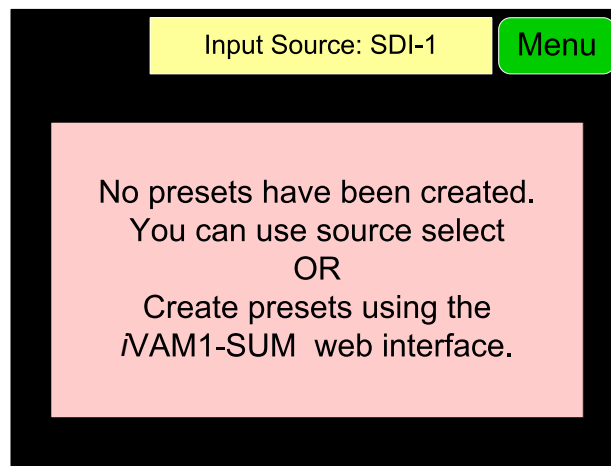

To return to the Menu from this screen, touch the **Menu** button.

Preset Favorites

Touch the **Preset Favorites** button to display the Preset Favorites screen. This shows the Presets that you have designated as Favorites. Refer to the Dashboard section of Chapter 4. Generally, these are frequently used Presets that you want to separate out from the possibly many other Presets in the system. The Preset Favorites screen is shown in Figure 2-21.


Figure 2-21: Preset Favorites Screen



In this screen, the currently selected Preset is shown in bright yellow. Touch any Preset to select it or rotate the **Source/Presets** knob to navigate to your choice and then press it.

To exit this screen without making a selection, touch **Menu**. If no Favorite Presets have been designated, this screen will appear as shown in Figure 2-22.

Figure 2-22: Preset Favorites Screen - No Favorites

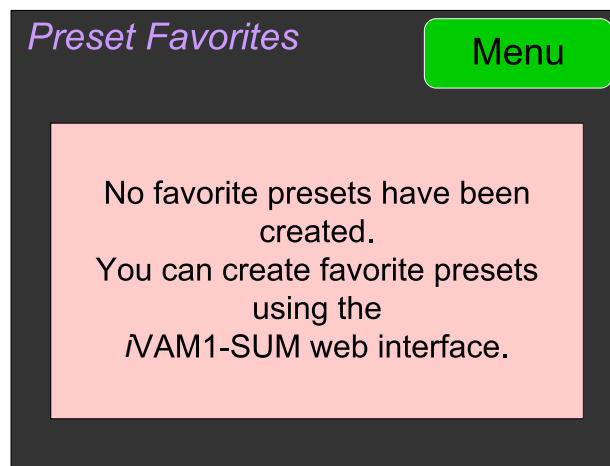


Unit Settings

Touching the **Unit Settings** selection on the **Main Menu** screen proceeds to the **Unit Settings Menu**, which contains additional menu selections. You may touch your selection or rotate the **Source/Preset** knob to navigate to your choice and then press it.

The **Unit Settings Menu** is shown in Figure 2-23. This is an intermediary menu which leads to other menus and screens.


Figure 2-23: Unit Settings Menu

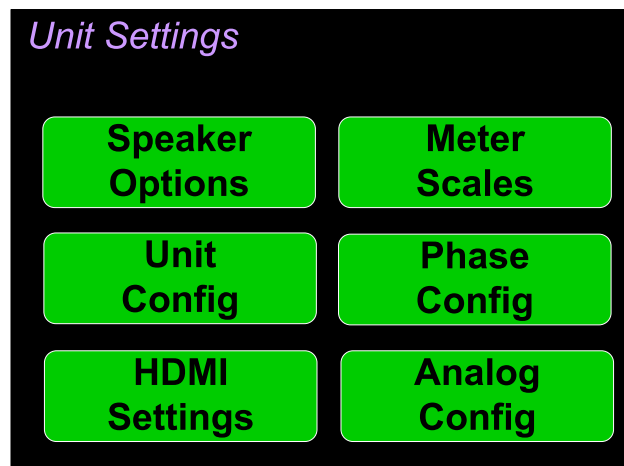

Speaker Options

Touching the **Speaker Options** selection on the **Unit Settings** Menu screen proceeds to the **Speaker Options** screen. The controls on this screen affect various characteristics of the monitored audio as heard on the /VAM1-SUM16-G. This screen is shown in Figure 2-24.

Figure 2-24: Speaker Options Screen

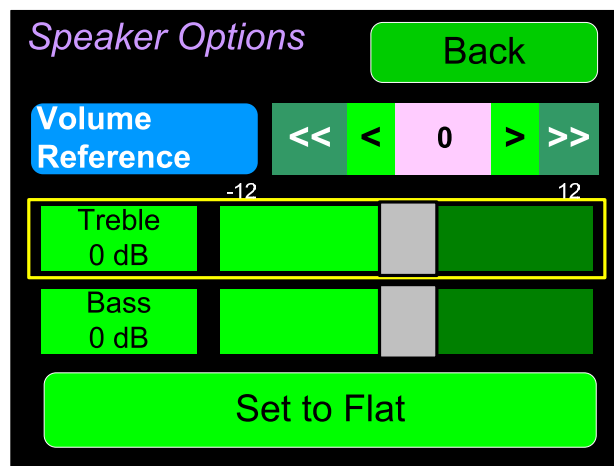

The controls function as follows:

1. **Volume Reference:** The **Volume Reference** setting controls the

attenuation level of the internal speakers. The value ranges from 0 to -255 dB. 0 results in full volume and -255 causes the speakers to be muted.


2. **Treble**: This tone control adjusts the high frequency speaker audio response from -12 dB to +12 dB. Lowering **Treble** compensates for high frequency pre-emphasis or removes sibilance effects. Increasing **Treble** will add "sizzle" to the sound and bring high-pitched sounds out of the mix. The control can be touched and moved left or right to adjust in 2 dB increments. After touching the **Treble** control, the **Channel** knob can also be turned to make the adjustment.
3. **Bass**: This tone control adjusts the low frequency speaker audio response from -12 dB to +12 dB. Lowering **Bass** will unmask midrange band sounds, while increasing **Bass** will make the sound "fatter". The control can be touched and moved left or right to adjust in 2 dB increments. After touching the **Bass** control, the **Channel** knob can also be turned to make the adjustment.
4. **Set to Flat**: Touching this button will set the **Treble** and **Bass** controls to their midpoint, resulting in a flat response with 0 dB increase or decrease in treble and bass response.

Touch **Back** to exit this screen.

Unit Configuration

Touching the **Unit Config** selection on the **Unit Settings** Menu proceeds to the **Unit Config Menu**. This menu is shown in Figure 2-25.

Figure 2-25: Unit Configuration Menu

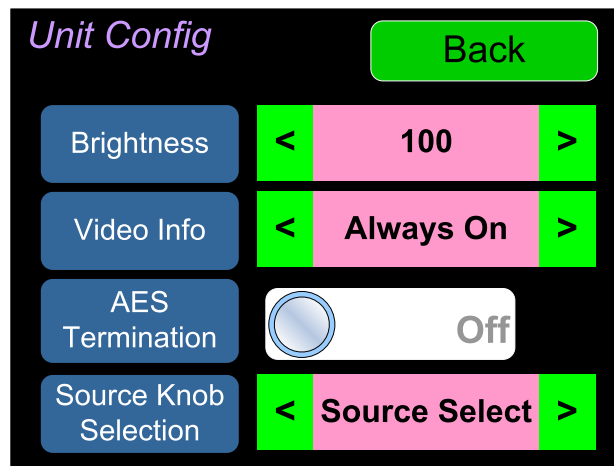

The controls function as follows:

1. **Brightness**: This setting adjusts the brightness of the display screen. Touch the left pointing arrow to dim the brightness or touch the right pointing arrow to increase the brightness.
2. **Video Info**: This setting determines if or how video information is displayed when the video screen is selected by pressing the **Source** knob. The possible selections are as follows:

- a. **Always On:** The video information is always displayed.
 - b. **Off:** The video information is never displayed.
 - c. **5 Secs:** The video information is displayed for 5 seconds after the video screen is selected and then it disappears.
 - d. **10 Secs:** The video information is displayed for 10 seconds after the video screen is selected and then it disappears.
3. **AES termination:** AES signals should have one and only one termination. This termination should physically be at the last destination of an AES coax cable. If the /VAM1-SUM16-G is the last connection in a series of AES connections, then its terminations should be turned on. A symptom of too many terminations (or no termination) is that no signal appears to be present on the AES input. Touch the On - Off switch to change the termination setting.
4. **Source Knob Selection:** This setting determines the function of the **Source** knob on the front panel. It may be set as follows, depending upon your needs:
- a. **Source Select:** The **Source** knob will select the input source to be monitored.
 - b. **All Presets:** The **Source** knob will select between any Presets present in the unit.
 - c. **Favorite Presets:** The **Source** knob will select between any of the Favorite Presets present in the unit.
 - d. **No Operation:** The **Source** knob will perform none of the above listed selection operations. If the **Source** knob is set to **No Operation** and is turned, the Audio Meters screen will display **No Operation** for 3 seconds at the top center, as a reminder.


Note: Regardless of the **Source Knob Selection**, the **Source** knob is used to select clusters when in the Loudness Meter Screen.

Touch **Cancel & Exit** or **Save & Exit** to exit this menu.

Meter Scales

Touching the **Meter Scales** button on the **Unit Settings** Menu displays the **Meter Scales** screen as shown in Figure 2-26. The controls on this screen select the scale standards as well as the ballistics that will be applied to the audio meters.

Figure 2-26: Meter Scales Screen

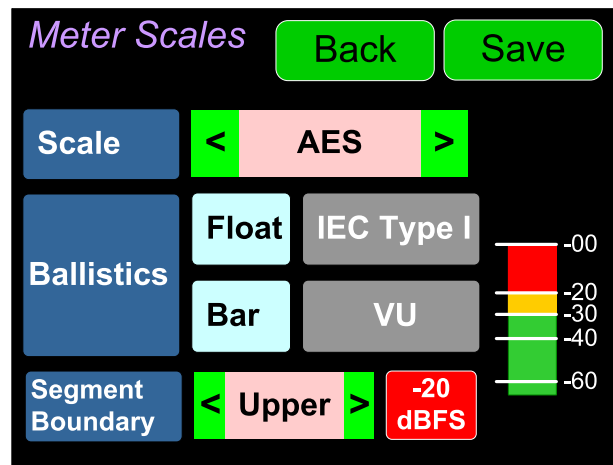

The controls function as follows:

1. **Scale:** This meter scales standard to be used when displaying audio levels. A choice of seven scales is available. Touch the left or right arrows to select the scale. A representation of the chosen scale will be shown at the right. The possible scales that can be selected are shown in Figure 2-27.

Figure 2-27: Meter Scale Selection

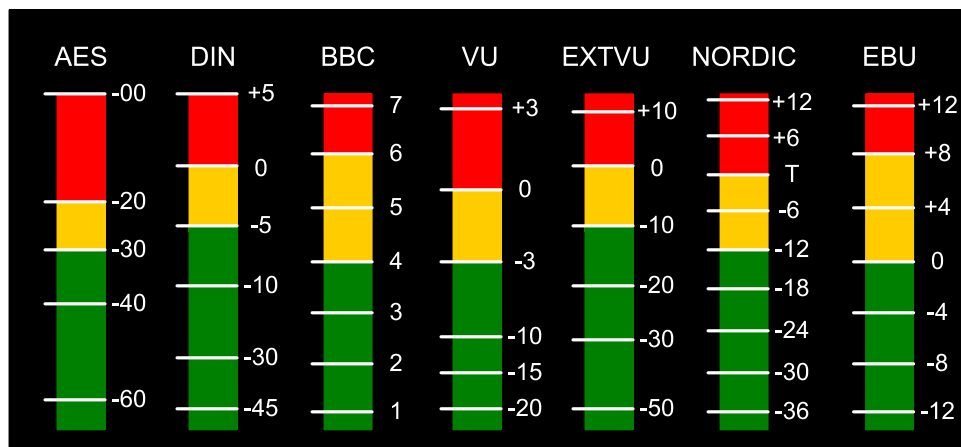


Table 2-4: Meter Limits and References

Scale	Bottom Limit	Top Limit	Default Reference	Default Color Bounds		Default Ballistics	
				Lower	Upper	Float	Bar
AES	-72 dBFS	0.0 dBFS	0 dBFS = 0 dBFS	-30 dBFS	-20 dBFS	IEC Type I	VU
DIN	-53 dBr	+5.5 dBr	-15 dBFS = 0 dBr	-5 dBr	0 dBr	—	IEC Type I
BBC	-13.25 dBr	+13.0 dBr	-18 dBFS = 0 dBr	0 dBr	8 dBr	—	IEC Type I
VU	-45 dBr	+3.5 dBr	-20 dBFS = 0 dBr	-3 dBr	0 dBr	—	VU
EXTVU	-56 dBr	+16.0 dBr	-20 dBFS = 0 dBr	-10 dBr	0 dBr	—	VU
NORDIC	-44 dBr	+12.5 dBr	-18 dBFS = 0 dBr	-10 dBr	0 dBr	—	IEC Type I
EBU	-13.25 dBr	+13.0 dBr	-18 dBFS = 0 dBr	0 dBr	8 dBr	—	IEC Type I

2. **Ballistics:** The Bar and Float ballistics associated with the selected meter scale are displayed. Refer to Table 2-5. Ballistic timings are valid only at 48 kHz.

Table 2-5: Meter Timings


Ballistics	Rise	Fall	
		Level Change	Time
VU	Not Specified		
IEC Type I	5 ms to reach -2 dB of settled reading	-20 dB	1.7 sec.
IEC Type II	10 ms to reach -2 dB of settled reading	-24 dB	2.8 sec.
None	Bar or Floating Segment Not Displayed		

3. **Segment Boundary:** The dBFS level for each boundary between the red/yellow and the yellow/green meter segments can be specified here. When you have made your choices, touch **Back** to exit this screen.

Phase Configuration

Touching the **Phase Config** selection on the **Unit Settings** Menu proceeds to the **Phase Config Menu**. This menu is shown in Figure 2-28:


Figure 2-28: Phase Configuration Menu

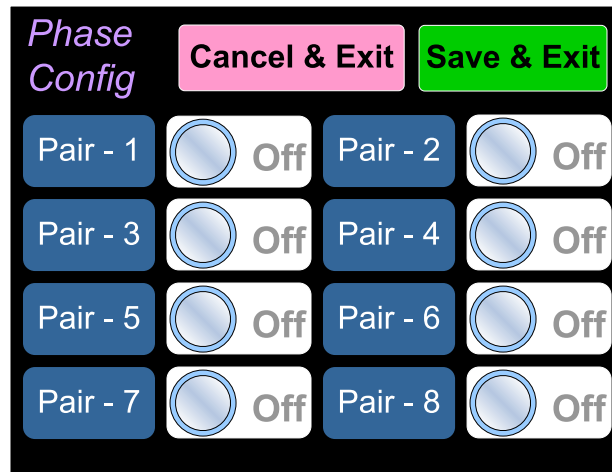

HDMI Settings

Touching the **HDMI Settings** selection on the **Main Menu** proceeds to the **HDMI Settings** menu, as shown in Figure 2-29.

Figure 2-29: HDMI Settings Menu

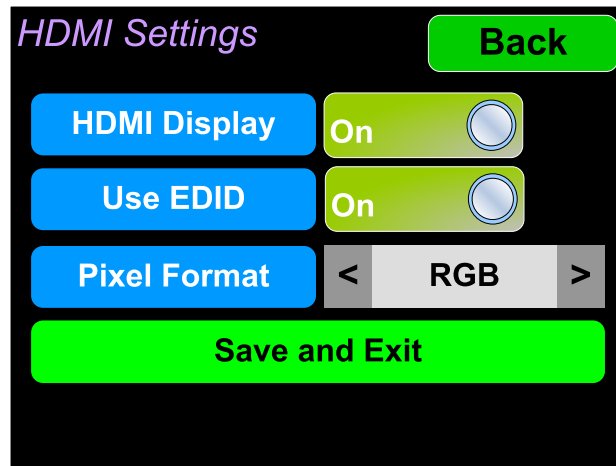

The controls in this menu function as follows:


1. **HDMI Display:** Set to **On** or **Off** to enable or disable the HDMI Output on the rear panel. The HDMI Output will allow you to view the monitored video on an external HDMI monitor.
2. **Use EDID:** HDMI monitors can produce Extended Display Identification Data (EDID) to disclose their capabilities to the video source. The iVAM1-SUM16-G can use this information to ensure its compatibility with the HDMI Monitor. If you decide that you do not want the iVAM1-SUM16-G to receive this information, set this switch to **Off**. By default this switch is set to **On**.
3. **Pixel Format:** This selection can only be adjusted if the **Use EDID** setting is set to **Off**. The possible choices are:
 - a. RGB
 - b. YCbCr444
 - c. YCbCr422
4. **Save & Exit:** When you have finished making the changes you want on this screen, touch the **Save & Exit** button to save the changes and return to the **Unit Settings** menu.

To exit this menu without saving, touch the **Back** button.

Analog Configuration

Touching the **Analog Config** button in the **System Options Menu** displays the **Analog Config** screen. Contained in this menu is an **Analog Reference** as illustrated in Figure 2-30. The parameters set on this screen pertain to the **Analog Input** and **Analog Output** DB25 and XLR connectors on the rear panel of the /VAM1-SUM16-G.

Figure 2-30: Analog Configuration Menu

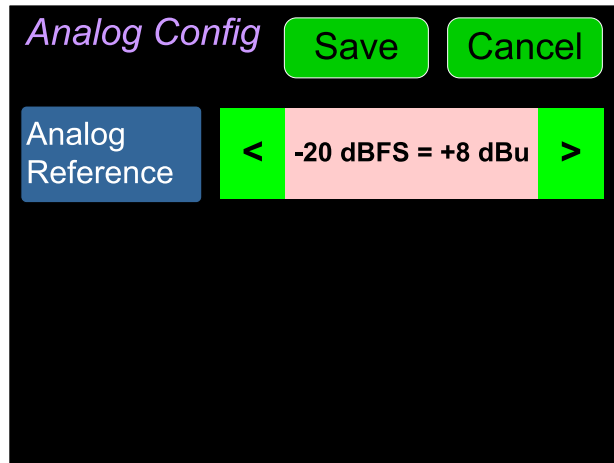

There is only one setting on the **Analog Reference** menu:


1. **Analog Reference:** This setting adjusts the relationship between the monitored digital signal level and the analog signal level that is output from both of the DB25 and both of the XLR connectors on the back panel. The default setting is -20 Dbfs = +8 dBu as shown in Figure 2-30. The range of possible settings is as follows:
 - a. -20 dBFS = +8 dBu
 - b. -20 dBFS = 0 dBu
 - c. -22 dBFS = +4 dBu
 - d. 0 dBFS = +15 dBu
 - e. -16 dBFS = +4 dBu
 - f. -18 dBFS = +4 dBu
 - g. -18 dBFS = 0 dBu
 - h. -20 dBFS = +4 dBu

Touching **Save** will save any changes made, or touching **Cancel** will return you to the **System Options** menu without saving.

System Options Menu

Touching System Options in the **Main Menu** proceeds to the **System Options** menu, which is an intermediate menu leading to other screens. This menu is shown in Figure 2-31.

Figure 2-31: System Options Menu

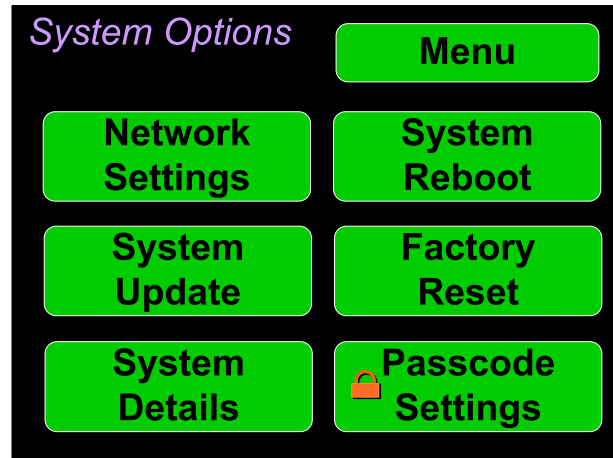


Touch **Menu** to exit this menu.

Network Settings

Touch the **Network Settings** selection on the **System Options** Menu displays the **Network Settings** menu as shown in Figure 2-32. This screen lets you view or change the product IP, the Net Mask, Gateway and DNS. It also lets you switch between a static (fixed) or a dynamic (DHCP) network address.

Figure 2-32: Network Settings Screen

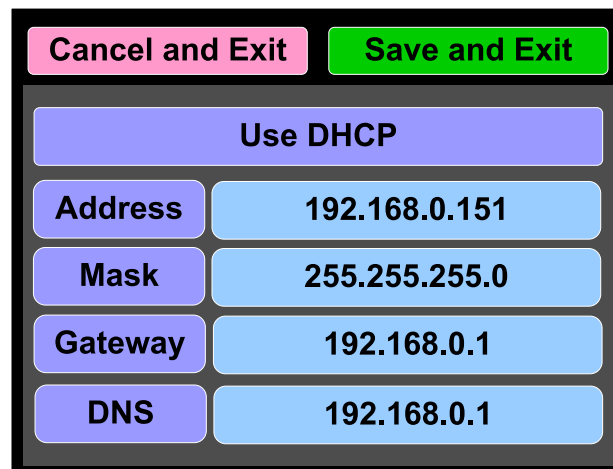

1. To change the IP Address, Net Mask, Gateway, or DNS, tap the item you would like to change. A keypad will appear, as shown in Figure 2-33.

Figure 2-33: Network Configuration: Setting Change

DNS		192.168.0.151	
1	2	3	Backspace
4	5	6	Clear
7	8	9	Cancel
255	0	.	Enter

2. Touch the digits to be entered and then touch the **Enter** button. The **Clear** button may be touched to erase any mistyped digits.
3. Now repeat steps 1 and 2 until you have replaced all of the necessary digits.
4. To save the newly entered address, touch the **Enter** button. Touch the **Cancel** button to return to the previous screen without saving any changes.

Important:

There is no confirmation for **Save**, so make sure you want to perform this action before taking it. The system does not need to reboot before it is once again ready for operation.

To change from a static (fixed) to a dynamic (DHCP) network address, touch the **DHCP** button. The screen will change, as shown in Figure 2-34. To change back to a static (fixed) network address, touch the **DHCP** button again. The colors of the buttons will return to the ones depicted in Figure 2-32.

Figure 2-34: Network Settings: DHCP

Use DHCP	
Address	192.168.0.151
Mask	255.255.255.0
Gateway	192.168.0.1
DNS	192.168.0.1

1. To complete the network addressing scheme change, touch the **Save** button.

- This will save the changes you selected.
2. Touch the **Cancel** button to return to the previous screen without saving any changes.

Important:


There is no confirmation for **Save and Exit**, so make sure you want to perform this action before taking it. The system will not need to reboot before it is once again ready for operation.

System Reboot

Touching the **System Reboot** selection on the **System Options** Menu displays the **System Reboot** screen as shown in Figure 2-35. This function is normally only used upon request from Wohler Technical Service to troubleshoot or correct an issue.

The **System Reboot** function should be used with a bit of forethought. It puts the system out of service for several minutes while it is rebooting.

Figure 2-35: System Reboot

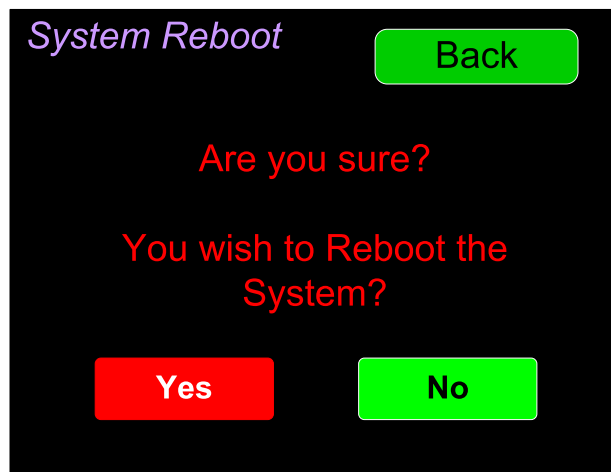


If you have any doubt as to whether you should press **Yes**, press **Back** or **No** instead, and contact Wohler Technical Service for advice. Pressing **Back** or **No** will return you to the **System Options** menu.

System Update

Touching the **System Update** selection in the **System Options** Menu displays **System Update** screen as shown in Figure 2-36, showing the current software version of the product. To update the system software locally from the iVAM1-SUM16-G front panel, follow the procedure in the **Local Update from the Front Panel** section of Appendix A.

Figure 2-36: System Update Screen

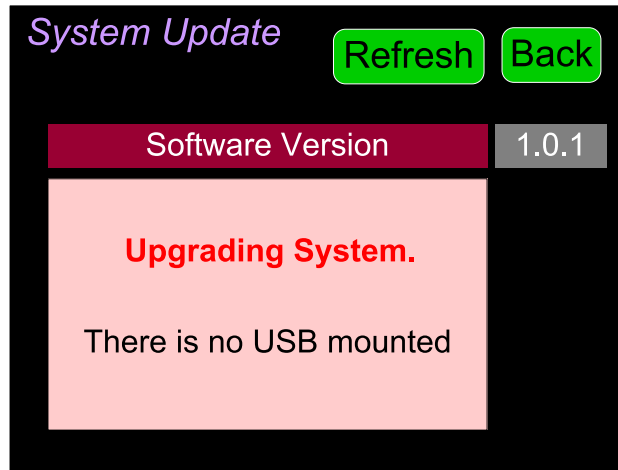

If you have just inserted a flash drive with a valid software upgrade package, press **Refresh** to see that package.


Touch the **Back** button return to the **System Options Menu**.

Factory Reset

Touching the **Factory Reset** selection in the **System Options** menu displays the **Factory Reset** screen as shown in Figure 2-37. Because of the large change this function is about to make to the product, it asks for you for verification that you really want to proceed.

The **Factory Reset** function should be used with caution. It deletes all of the settings you have programmed into the system. It returns the system to the way it was when received new from the factory. After using this function, you will need to use the Wohler Web GUI to reprogram everything from the start.

Figure 2-37: Factory Reset

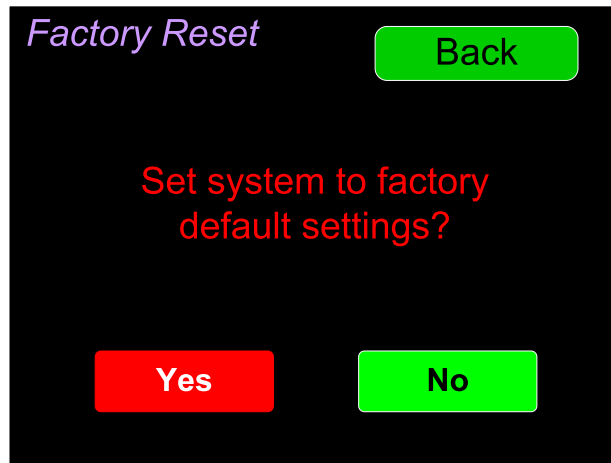


Note: **Factory Reset** will also reset your IP address to the default one. After a Factory Reset, the IP Settings will need to be updated. The default IP address for the unit is determined based upon the Mac address. It is 169.254.1.xx where xx is the last octet of the management Mac address. For example, if the Mac address is b4:ed:54:d0:04:28 then the IP address would be 169.254.1.40 (40 is the decimal equivalent for the last octet of Mac address 28.)

If you have any doubt as to whether you should press **Yes**, press **Back** or **No** instead, and contact Wohler Technical Service for advice. Pressing **Back** or **No** will return you to the **System Options** menu.

System Information

Touching the **System Details** selection in the **System Options** menu displays the **System Details** screen as shown in Figure 2-38. This screen lets you view the product Serial Number, Software Version, and various other information.

Figure 2-38: System Details Screen

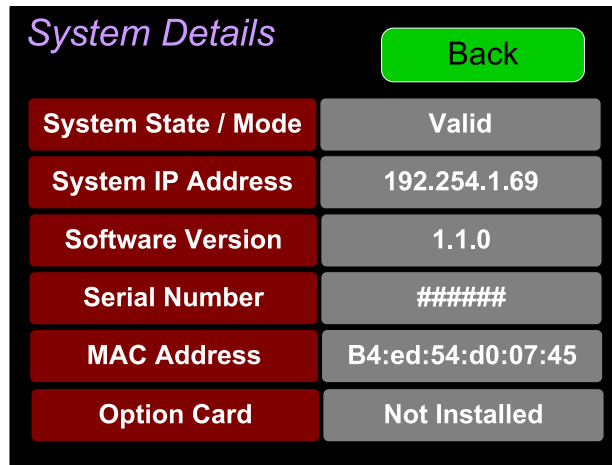

The screenshot shows a screen titled "System Details" with a green "Back" button in the top right corner. Below the title is a table with system information. The table has two columns: the left column lists system parameters, and the right column shows their current values. The parameters are: System State / Mode, System IP Address, Software Version, Serial Number, MAC Address, and Option Card. The values are: Valid, 192.254.1.69, 1.1.0, #####, B4:ed:54:d0:07:45, and Not Installed.

<i>System Details</i>	
System State / Mode	Valid
System IP Address	192.254.1.69
Software Version	1.1.0
Serial Number	#####
MAC Address	B4:ed:54:d0:07:45
Option Card	Not Installed


The information shown on this screen is read only and cannot be changed. Touch **Back** to return to the **System Options** Menu.

Passcode Settings

To prevent accidental or unauthorized changing of critical settings in some of the menus, it is possible to block or restrict access to various menus. The Wohler Web GUI can be used to limit access to the menus of your choice. Refer to Chapter 4, the **Front Panel Configuration** tab of **System Preferences**.


The /VAM1-SUM16-G contains a **Passcode Settings** screen. Access to this screen is always protected by a unique Passcode, which you can set. Note that the protection of the **Passcode Settings** selection is indicated by an orange lock icon:  The **Passcode Settings** button on the **System Options** screen contains this icon, as shown in Figure 2-39. The factory default Passcode is 0-0-0-0.

Figure 2-39: System Options - Passcode Settings Lock

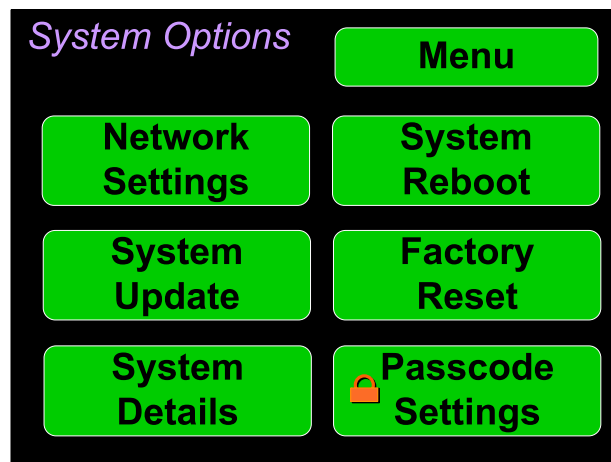

Touching the **Passcode Settings** selection in the **System Options** menu proceeds to the **Passcode Entry** screen as shown in the left image of Figure 2-40.


Figure 2-40: Passcode Entry Screen

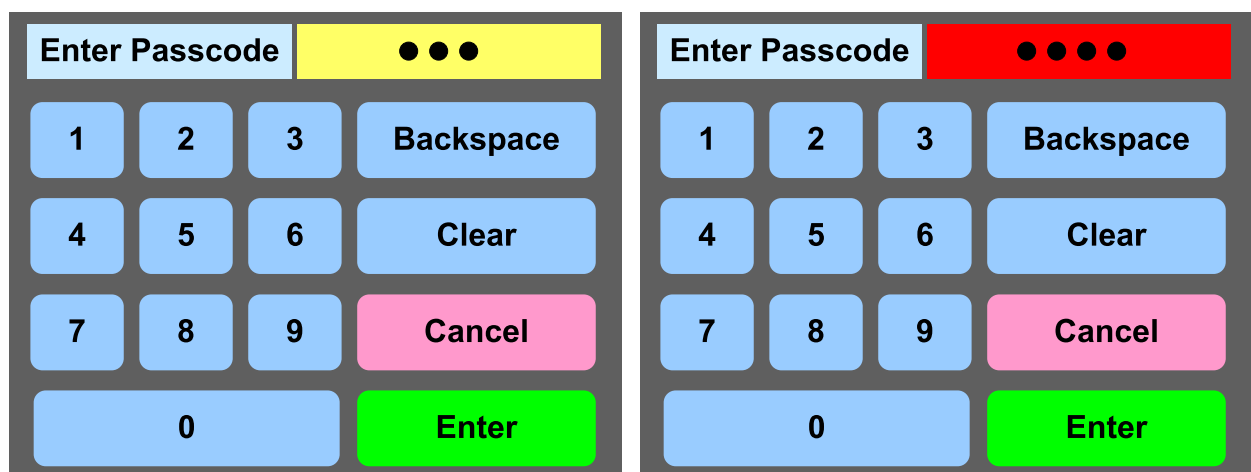

Enter the Passcode on the keypad and touch **Enter**. The numbers will display as bullets in the field. If you enter the wrong Passcode, the entry field will turn red, as shown on the right image of Figure 2-40. Press **Clear** and try again.

When you have successfully entered the Passcode, the Passcode Settings screen will appear, as shown in Figure 2-41.

Figure 2-41: Passcode Settings Screen

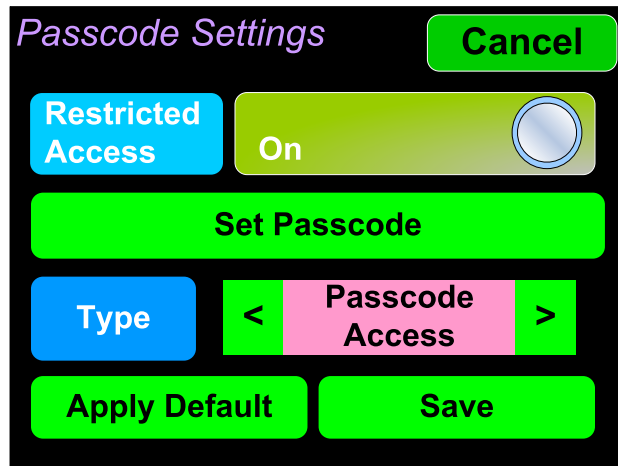


The functions on this screen are as follows:

Restricted Access: This switch will turn ON or OFF protection or blocking of any menus, except for the Passcode Settings menu, which is always Passcode protected.

Set Passcode: Touching this button proceeds to a keypad which allows you to enter a new Passcode. The screen shown in Figure 2-42 will appear. The Passcode can be any 4-digit number. Touch **Enter** to save the new Passcode or touch **Cancel** to keep the previous Passcode. Be sure to save the Passcode in a safe place for future reference.

Figure 2-42: Set Passcode Screen

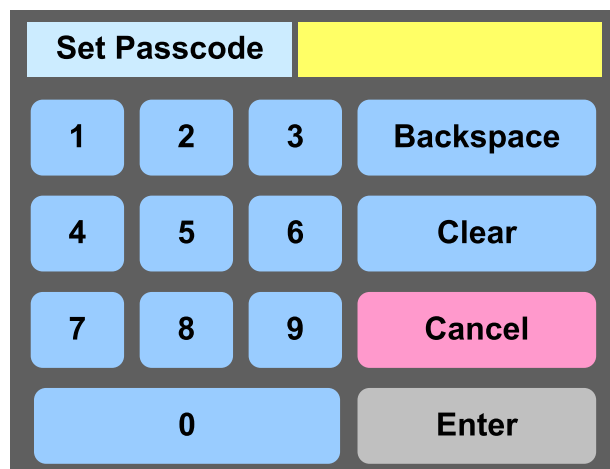


Type: Select the type of disabled button appearance using the **Type** button. The choices are:

Passcode Access: The Passcode protected function buttons include a small orange padlock icon within the buttons. This is shown in the left image of Figure 2-42. Touching these buttons will cause a Passcode entry screen to appear, as shown in the left image of Figure 2-40. The correct Passcode must

be entered to proceed.

No Access: If the function buttons are protected by No Access, the buttons are grayed out and non-functional, as shown in the right image of Figure 2-42. These buttons cannot be accessed at all unless the restricted protection is removed by switching OFF the **Restricted Access** setting in this menu.

Figure 2-42: Examples of Menu Protection

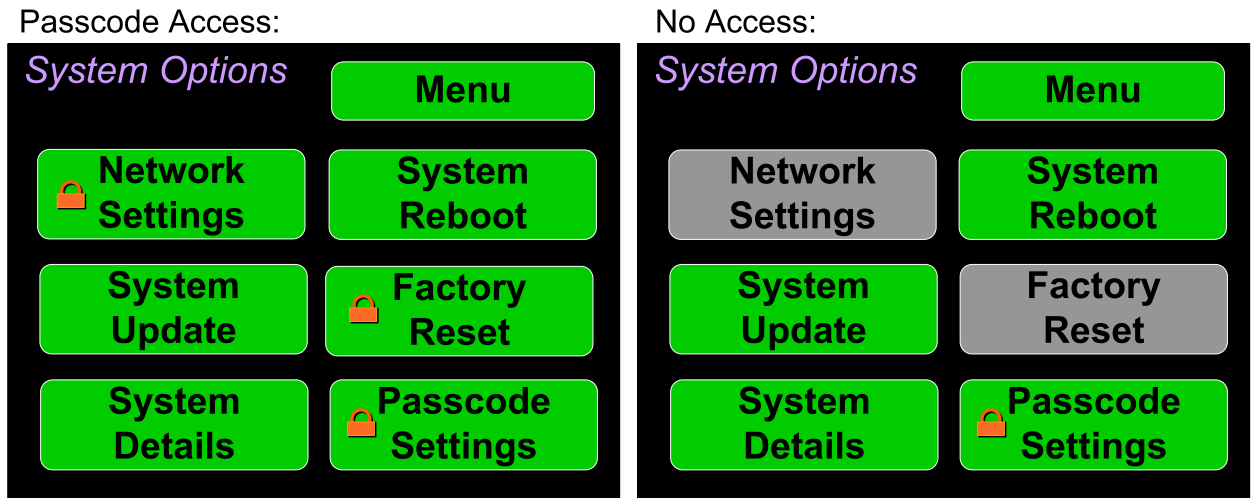

Apply Default: Touching this button returns the settings in this screen to the factory default values. The Passcode becomes 0-0-0-0.

Save: Touching this button saves the settings made in this screen and returns to the **System Options** screen.

Forgotten Passcode

Although the Passcode should be remembered or securely noted somewhere, it can happen that it is forgotten. This can be remedied by performing a Factory Reset from the Wohler Web GUI. Unfortunately, this will also erase all of the menu settings. You may also contact Wohler Technical Service for help.

CHAPTER 3: Technical Info

Table 3-1: /VAM1-SUM16-G Specifications

Specification	Values/Domains
Power Requirements	100 VAC to 240 VAC $\pm$ 10%, 50/60Hz
Power Consumption	65 Watts
Dimensions (H x W x D)	1.75" x 19" x 5.5" (44mm x 483mm x 140mm), standard 19" rack mounting
Shipping/Net Weight	8 lbs. (3.6 kg) / 5.5 lbs. (2.5kg)
Supplied Accessories	AC Power Cord
Display Type	7" Capacitive Touchscreen LCD
Screen Resolution	1242H x 280V
Viewing Angle	160 (H) x 160 (V)
Audio Channels	16
Level Meters	Simultaneous Average & PPM
Level Meter Scale	Choice of AES, BBC, DIN, EBU, EXTVU, NORDIC, or VU
Sample Rate	48kHz
De-Multiplexing	16 channels from: • 16-channel SD/HD/3G-SDI • 64-channel AES10 MADI
SDI Inputs / Outputs	• 2 SDI Inputs and 1 SDI Output Optional – Single SFP Transceiver: • HD-BNC Coax 3G/HD/SD-SDI • Multi-Mode Fiber: 1 SI Optical SC-Connector, 1300nm • Single-Mode Fiber: 1 SI Optical SC Connector, 1310nm
HDMI Output	• From SDI Inputs 1 or 2 or SFP Module
MADI Inputs / Outputs	• 1 MADI BNC, Standard Coax I/O Optional – SFP Transceiver: • Multi-Mode Fiber: 1 MADI Optical SC-Connector, 1300nm • Single-Mode Fiber: 1 MADI Optical SC Connector, 1310nm
SMPTE 2022-6 Receiver	Optional - SFP Receiver: • Multi-Mode Fiber: LC Connectors, 850nm

Specification	Values/Domains
SMPTE 2110 Receiver	Optional - SFP Receiver: Multi-Mode Fiber: LC Connectors, 850nm
Cable/Fiber Length (max)	COAX (such as Belden 1694A): > 150 m
	Single-mode fiber: 10 km
AES Inputs	8 AES channels on HD-15 are optional
AES Outputs	8 AES channels on HD-15
Upgrades	Via USB or GUI web interface
SDI Input Termination	75Ω unbalanced
AES/EBU Input Termination	75Ω unbalanced
AES/EBU/MADI Sampling Rate	48 kHz
Analog Inputs - Stereo	XLR-3 Female, balanced
Analog Input Impedance	40kΩ balanced
Analog Outputs - Stereo	XLR-3 Male, balanced +28 dBu max
Analog I/O – Multi-channel	8 Balanced Input Channels and 8 Balanced Output Channels on 2 x DB25F (optional)
Analog Output Frequency Response	40 Hz to 20 kHz (± 1 dB)
Analog Output Distortion	<0.02% THD+N
Analog Output Dynamic Range	> 100 dB
Analog Output Reference Level	-20 dBFS = +4 $\pm$ 1.0 dBu
Internal Speakers - Stereo	70mm Full Range
Peak Acoustic Output	90 dB SPL (@ 2 feet)
Hum and Noise	Better than -68 dB below full output
Power Output	5 Watts RMS, 12 Watts peak (each side)
Acoustic Frequency Response	150 Hz to 16 kHz (± 5 dB)
Headphone Out - Stereo	40 Hz to 20 kHz (± 1 dB)
Headphone Load	8Ω to 150Ω

Table 3–2: /VAM1-SUM16-G Options

Option	Part #	Description
SFP-MM-MADI-Fiber	829081	MADI optical fiber transceiver. Multi-Mode, LC (fiber) connectors. SFP module with software activation key.
SFP-SM-MADI-Fiber	829082	MADI optical fiber transceiver. Single-Mode, LC (fiber) connectors. SFP module with software activation key.
SFP-SDI	829089	3G/HD/SD-SDI single video receiver with active loopback, HD-BNC connectors. SFP module with software activation key.
SFP-SDI-Fiber	829084	3G/HD/SD-SDI video SFP optical input; LC (fiber) connectors; Single-Mode Receiver, Medium Haul, Non-MSA, no output.
SFP-2022-6	829088	SMTPE 2022-6 receiver; Multi-Mode 850 NM, LC (fiber) connectors. SFP module with software activation key. Use MN-Set** to configure SFP.
SFP-2110 w/Ember+	829086	SMTPE 2110 receiver; Multi-Mode 850 NM, LC (fiber) connectors. SFP module with software activation key. Use MN-Set** to configure SFP.
SFP-2110 w/NMOS	829086-1	SMTPE 2110 receiver; Multi-Mode 850 NM, LC (fiber) connectors. SFP module with software activation key. Use MN-Set** to configure SFP.
SFP-2110 w/Ember+ +2022-6	829087	SMTPE 2110 or 2022-6 receiver; Multi-Mode 850 NM, LC (fiber) connectors. SFP module with software activation key. Use MN-Set** to configure SFP.
SFP-2110 w/NMOS +2022-6	829087-1	SMTPE 2110 or 2022-6 receiver; Multi-Mode 850 NM, LC (fiber) connectors. SFP module with software activation key. Use MN-Set** to configure SFP.
OPT-AES	829080	Enables decoding and monitoring of 4 x AES inputs on an HD-15 connector and 1 AES output on BNC connector. Requires a software activation key.
OPT-MADI	829092	Enables decoding and monitoring of 1 x MADI64 input. BNC connectors. Requires a software activation key.


OPT-OUTPUT-ROUTING	829159	Enables the flexibility to route signals from any inputs to various outputs.
OPT-GPIO	829198	Enables 4 GPI's and 2 GPO's. Requires a software activation key.
OPT-RMOC-12G	829189	Adds another SDI BNC input which supports 12G SDI signals. Includes an SFP slot for 12G/3G SDI or ST2110 input. Separate SFP purchase required. Also enables MAVRIC functionality, capable of monitoring 16 channels of audio plus a single video input, selected from the input sources connected to the monitor.

****MN-Set** is configuration software that is necessary so that you can set up this module. It is available at no cost either from its manufacturer, Embrionix, or by contacting Wohler Technologies Technical Service.

Table 3–3: /VAM1-SUM16-G Option Cards

Option	Part #	Description
OPT-ANLG/TOS (iVAM)	829170	Enable monitoring of 8 Analog channels on DB-25. TOSLINK included.
OPT-DANTE (iVAM)	829171	Enable decoding and monitoring of Dante™ input streams. Includes AoIP card. Enables 2 x RJ-45 ports for 2022-7 support (for Dante, Ravenna and 2110-30) + SFP cage allowing MM and SM SFP's for AoIP Signals. TOSLINK included.
OPT-DANTE (iVAM)	829171-1	Enable decoding and monitoring of Dante™ input streams. Includes AoIP card. Enables 2 x RJ-45 ports for 2022-7 support (for Dante, Ravenna and 2110-30) + SFP cage allowing MM and SM SFP's for AoIP Signals. Left and right unbalanced analog input jacks included.
OPT-RAVENNA 64 (iVAM)	829172	Enable monitoring of up to 64 Ravenna™ / AES67 input. NMOS support. TOSLINK included.
OPT-RAVENNA 64 (iVAM)	829172-1	Enable monitoring of up to 64 Ravenna™ / AES67 input. NMOS support. Left and right unbalanced analog input jacks included.
OPT-SFP	829179	Adds two additional 3G inputs to 3G products, or two 12G inputs to 12G products.

Figure 3-1: /VAM1-SUM16-G Block Diagram

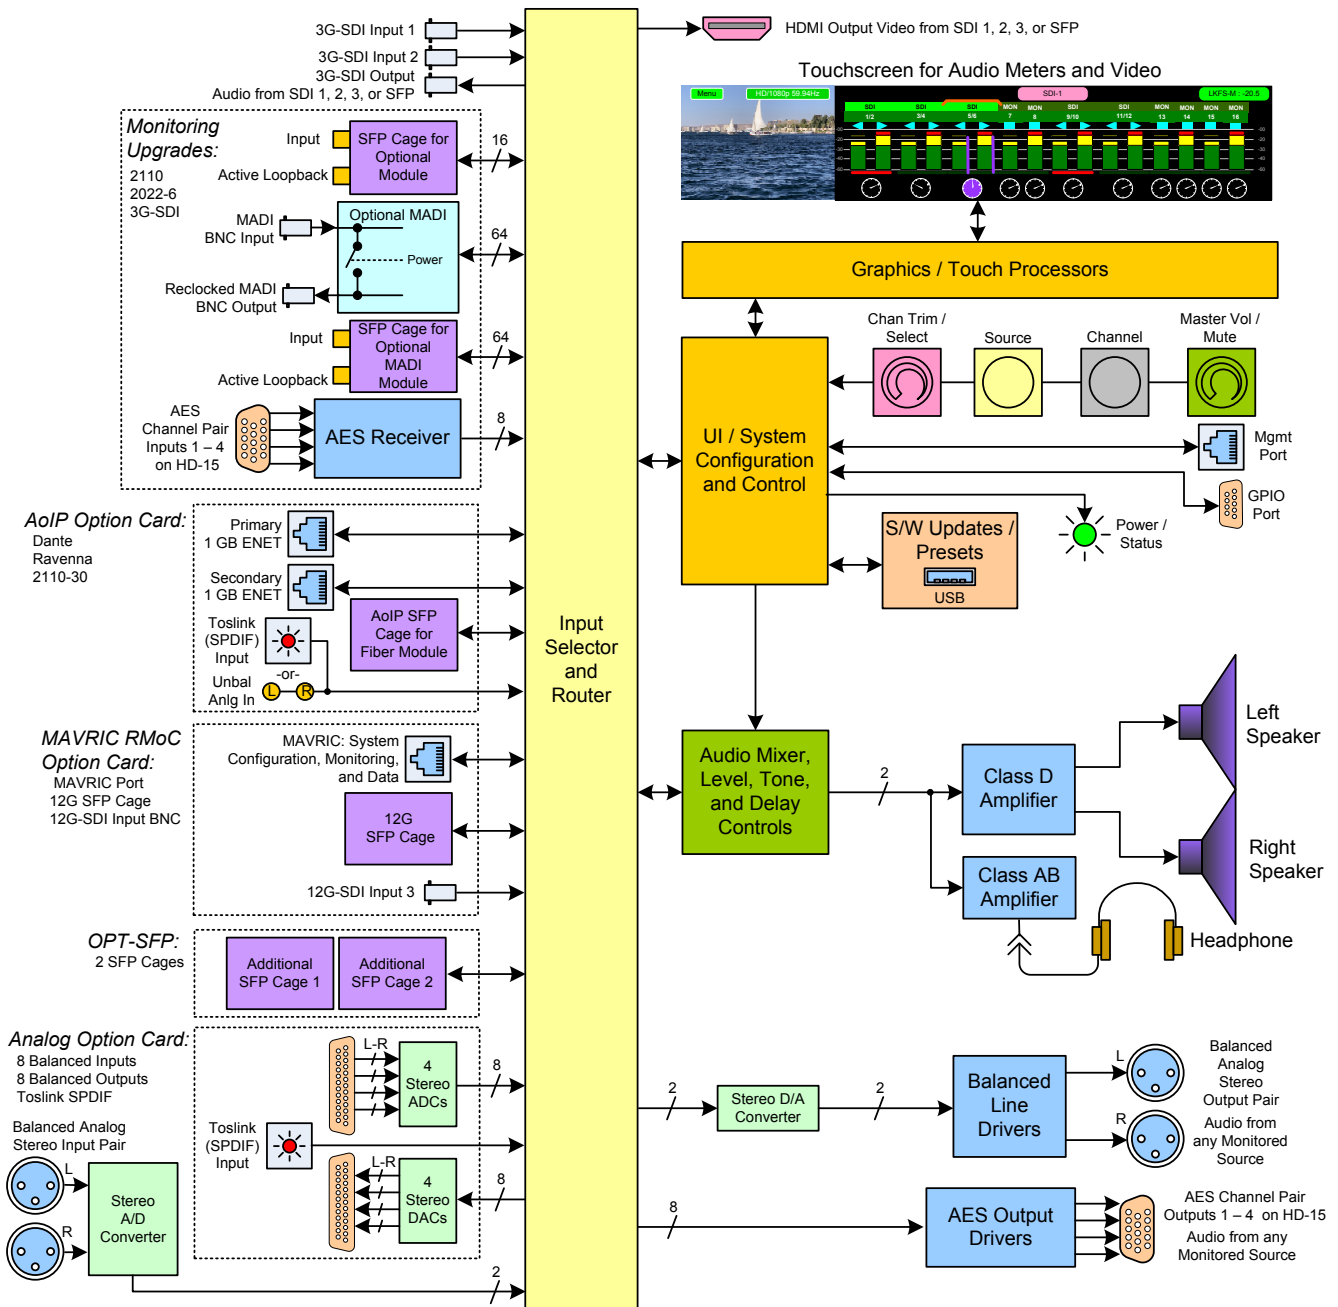

CHAPTER 4: /VAM1-SUM16-G Web GUI

The self-contained /VAM1-SUM16-G Web GUI allows you to customize the configuration of the /VAM1-SUM16-G to suit your needs. If the default configuration suits your needs and you prefer to use it that way, then you do not need to use the /VAM1-SUM16-G Web GUI.

The /VAM1-SUM16-G Web GUI also allows you to have a remote view of the Meter Screen. Refer to the Audio Meters section in this chapter.

Web Browser / Control Device

Any web browser application running on any networked device such as desktop or laptop computer, tablet or smart phone can be used with the /VAM1-SUM16-G Web GUI.

Tablets with no network connector need to be linked to a copper LAN through a Wi-Fi adapter.

Although they can be used, smart phones are not recommended because their smaller screen size would require more scrolling, making operation challenging.

The Chrome[®] web browser is recommended for speed and compatibility.

First Time IP Assignments


The /VAM1-SUM16-G can operate with a static (fixed) or dynamic (DHCP) IPv4 address. The default address will be **169.254.1.x** where x depends upon the MAC address of the unit, when received from the factory or when switched from DHCP to static addressing mode. The exact IP address is found on the **System IP Address** line of the **System Details** screen of the /VAM1-SUM16-G. There two basic types of connections that may be used to connect the /VAM1-SUM16-G to a web browser, a **Peer-to-Peer Connection** or a **Network Connection**.

Peer-to-Peer Connection

The most straightforward way to connect the /VAM1-SUM16-G to a web browser, free of possible network conflicts, is to establish a static peer-to-peer connection between the setup computer and the /VAM1-SUM16-G. A 10/100/1000 MHz Ethernet switch may be used in between, but is not required.

Figure 4-1 shows an example of suitable address settings for the host computer in a Windows control panel. For Peer-to-Peer the IP address of windows should be in 169.254.1.x domain. The exact IP address is found on the **System IP Address** line of the **System Details** screen of the /VAM1-SUM16-G.

Figure 4–1: Host IP Settings

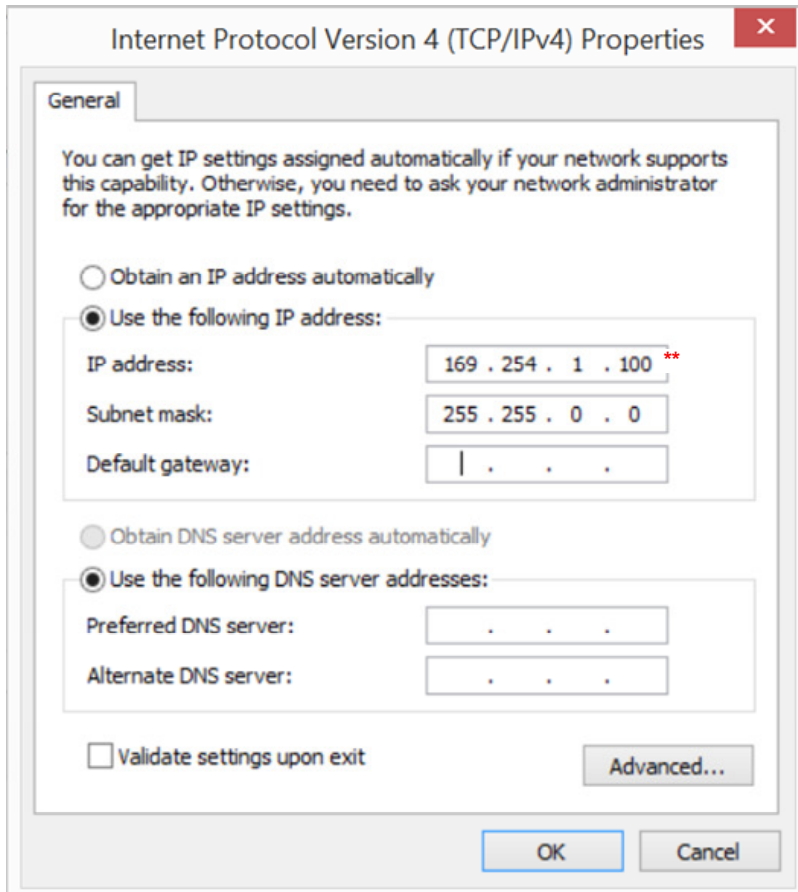

** The actual IP address to enter here is located on the System IP Address line of the System Details screen.

Close the control panel and reboot the host computer after making an IP address change to be sure the change takes effect. **Either reconnect to the installed network or continue with this direct connection to access the iVAM1-SUM16-G Web GUI.**

Network Connection

When connected to a network, the iVAM1-SUM16-G address will need to be changed to another address in order to be compatible with the address assignments for that particular network. Immediately after the host setup is complete, change the iVAM1-SUM16-G's address. Make the corresponding address, mask and gateway changes in the iVAM1-SUM16-G **Network Setup** page. Refer to the **Network Setup** section which follows.

Otherwise set the iVAM1-SUM16-G to DHCP address mode by checking the box for 'Use DHCP?' in Network Setup and have your IT administrator assign rights and settings for operation on the network. Allow enough time for your network's DHCP server to recognize a new network device and assign an address after booting.

The iVAM1-SUM16-G uses link local addressing for its internal network, so no accommodation for this need be made in the network.

Network Setup

Make network **IP Address** changes for the local /VAM1-SUM16-G **Management (MGMT) Port** here.

Figure 4–2: Set IP Addresses


The procedure for changing the IP Address information is as follows:

1. **Use DHCP?** Check this box if your network has a DHCP server and you want to use dynamic addressing. Otherwise, you must enter static IP address entries in the four fields which follow.
2. **IP Address:** Enter the network address. Leading zeroes are not required.
3. **IP Mask:** This should usually be 255.255.255.0 unless your network can work across multiple subnets.
4. **Gateway Address:** This should usually be the same domain and subnet address numbers as the IP Address, but with the last octet being .1.
5. **DNS-nameserver:** A default value is shown for reference only. DNS is not normally required for basic static IP network configurations to work. Your IT administrator will specify a value to work with mixed static/dynamic network setups.
6. **Apply:** When you have made all of the necessary entries, press **Apply** to apply the changes.
7. **Reset:** If you should start to make changes and then change your mind about making them, press **Reset** to return the settings back to where they were.

Dashboard

Throughout the Web GUI, pages are a click or two away using the list of selections on the left side. The **Dashboard** page shows all of the available Preset configurations at a glance. The iVAM1-SUM16-G allows you to assign Presets to particular groups. In Figure 4-3, two groups, Operator-1 and Operator-2 are shown.


Figure 4-3: Dashboard Preset Overview

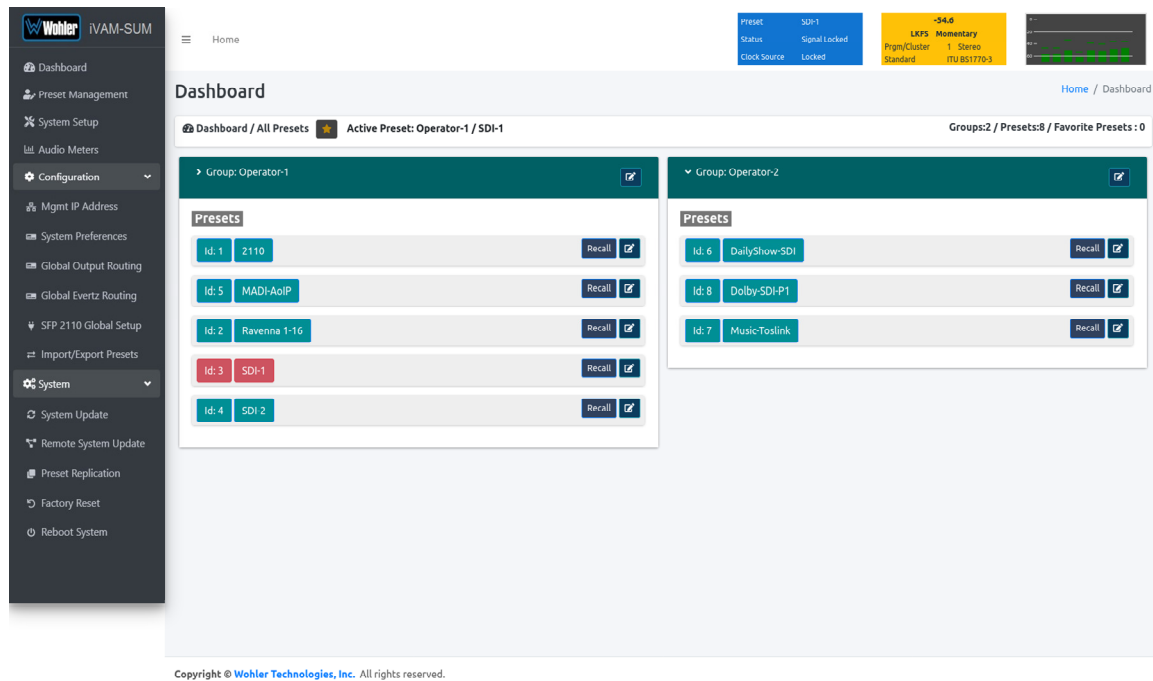

To view all of the Presets within a group, click on that group.

In Figure 4-4, it can be seen that there are five Presets in the Operator-1 group and no Presets in the Operator-2 group. The currently selected active Preset for local operation is shown in red. In Figure 4-4, this is the Preset named SDI-1.

Figure 4-4: Dashboard Preset Recall / Edit

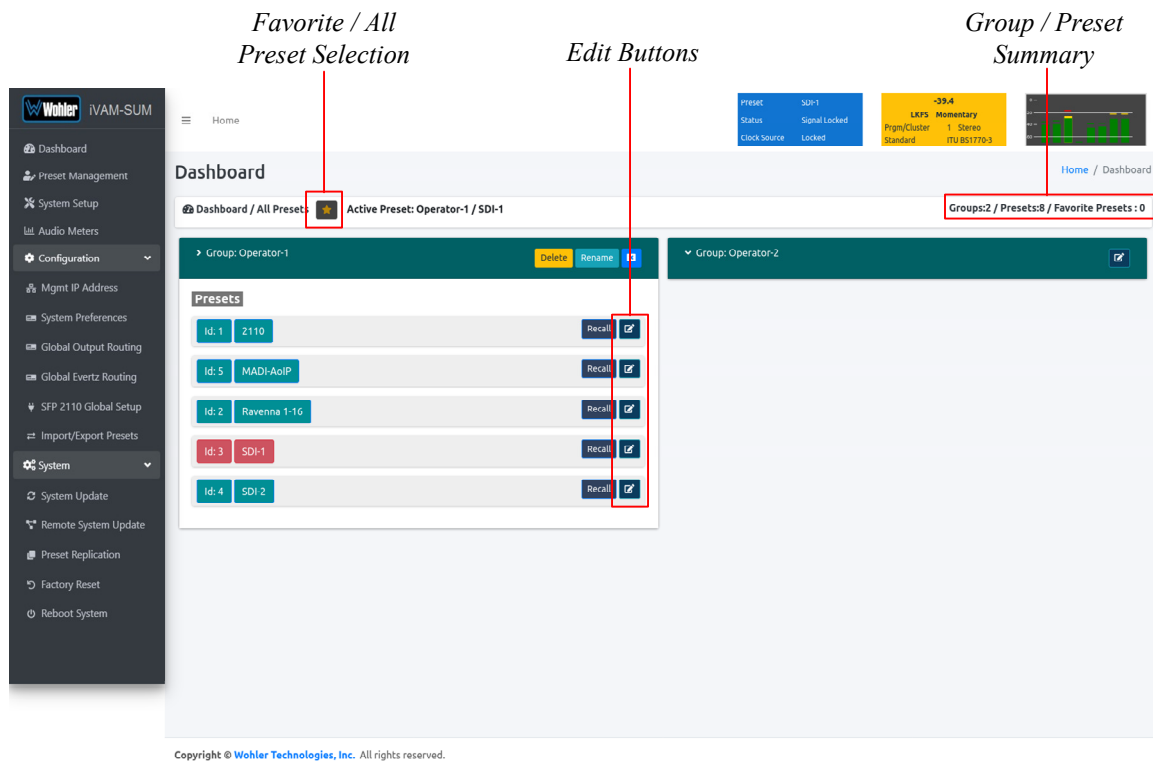


A Group / Preset Summary is shown in the upper right of the screen. This enables you to see the total number of Groups, Presets and Favorite Presets in the iVAM1-SUM16-G.

Use the  button, as shown in Figure 4-4, to toggle between Favorite Presets or All Presets.

Click the **Recall** button to recall a Preset. To Edit a Preset, click the **Edit** icon, as shown in Figure 4-4, to the right of the associated **Recall** button.

After clicking the **Preset Edit** button, the screen shown in Figure 4-5 will appear. Clicking a **Group Edit** button will cause the screen in Figure 4-6 to appear.


Figure 4–5: Dashboard Preset Edit

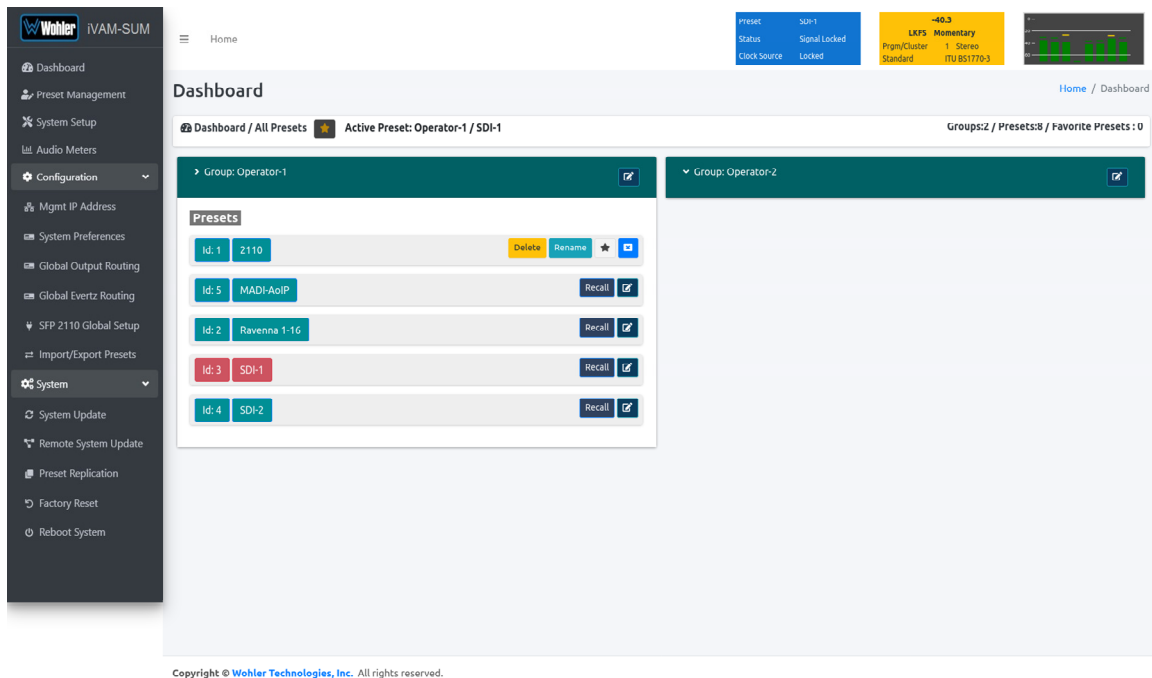

The Edit options for a Preset are:

1. Delete: Remove the Preset from the system. **Do Not delete the currently active Preset.**
2. Rename: Rename the Preset, but keep all of its other characteristics.
3. Make Favorite: Make this Preset a favorite. This can be done for frequently used Presets.

Figure 4–6: Dashboard Group Edit

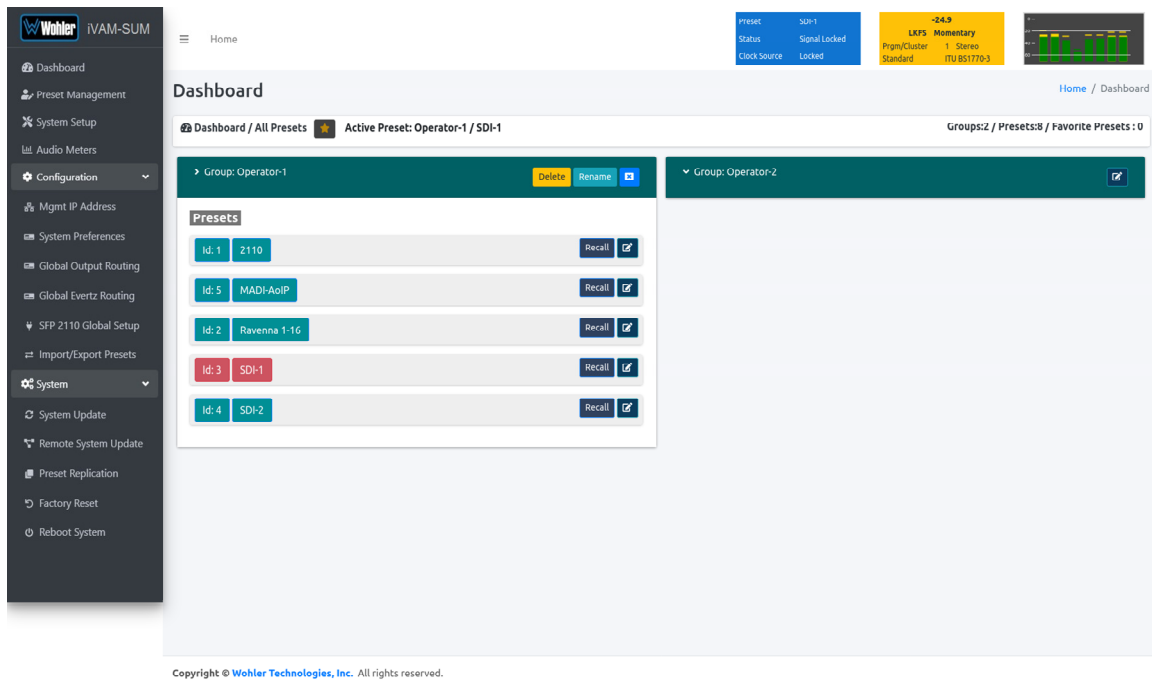


The Edit options for a Group are as follows:

1. Delete: Delete the Group and all of the Presets it contains.
2. Rename: Rename the Group, but keep all of its other characteristics.

Audio Meters

Click on **Audio Meters** to remotely display the audio meters of the /VAM1-SUM16-G. This display is shown in Figure 4-7. Also displayed is the name of the source that the meters are displaying. In Figure 4-7, this is SDI/BNC-1.

Figure 4-7: Audio Meters Display

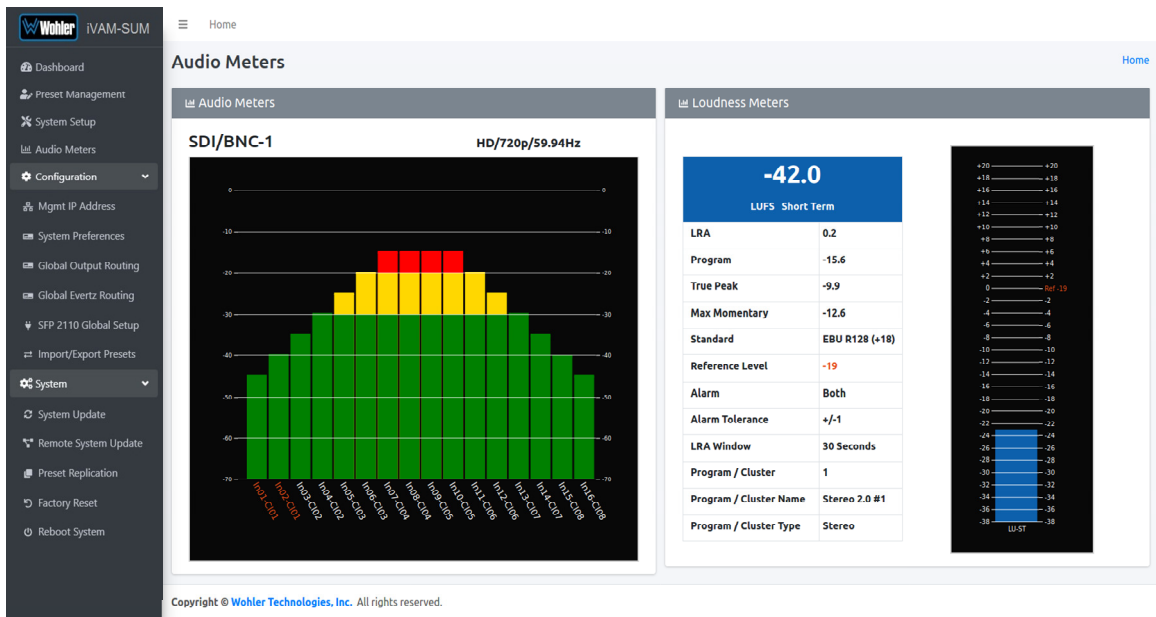

System Preferences


Click on **System Preferences** to find the System Audio Clock Reference, SDI Out Configuration, Loudness Configuration, GPI Action Settings, Phase Indicator Configuration, Front Panel Configuration, NA Input Signal, and Volume Scale Setting tabs. These are shown in the figures which follow.

System Audio Clock Reference

The System Audio Clock Reference setting provides a way to set the global clock source for the unit. This setting will be used whenever a source is selected using the **Source Select** knob or the **Source Select Menu**. If the System Audio Clock Reference is set to **None**, then the currently selected source acts as the Clock Reference. This tab is shown in Figure 4-8.

This System Audio Clock Reference setting can be overridden by the optional System Clock Reference setting in the Preset Management menu when the Preset is chosen.


Figure 4-8: System Audio Clock Reference Tab

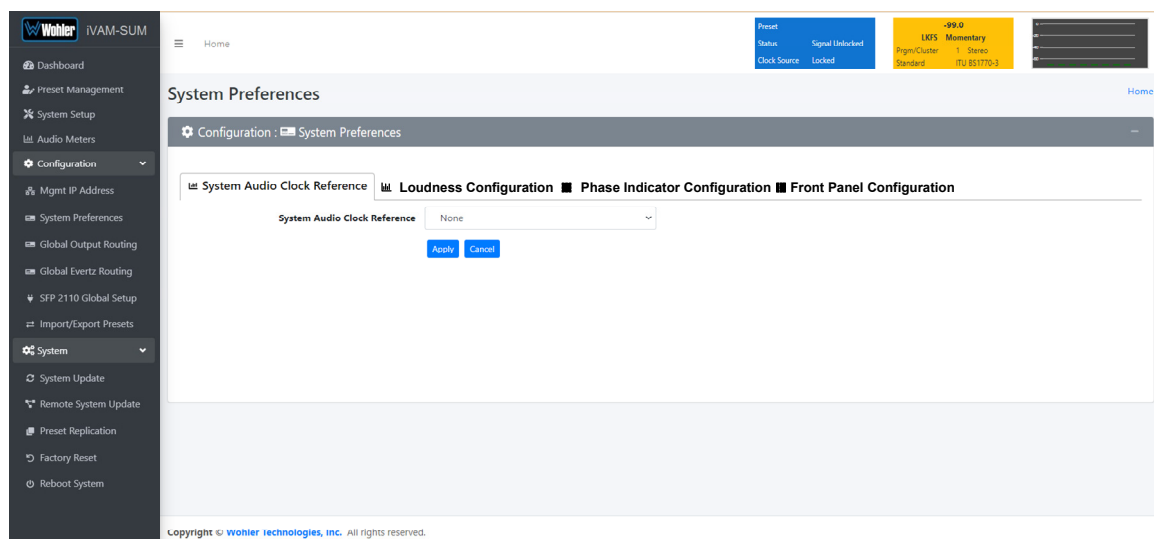

Loudness Configuration Tab

The Loudness Configuration tab allows you to make settings which will determine how Loudness is to be calculated on the Loudness Meter. This tab is shown in Figure 4-9.

Figure 4-9: Loudness Configuration Tab

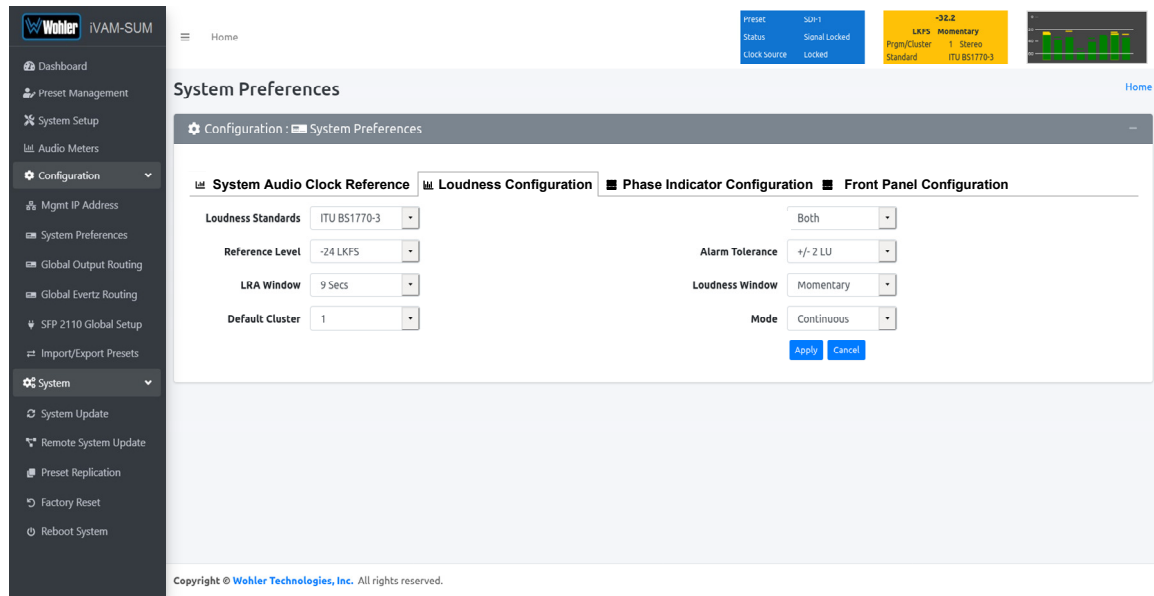

The following settings can be made on this tab:

1. **Loudness Standard:** This is the loudness standard by which the loudness calculation is made.
2. **Reference Level:** This is the set point in the loudness measurement about which the determination is made as to whether an alarm should be displayed.
3. **LRA Window:** This is a moving window of time over which the loudness measurement is made.
4. **Default Cluster:** When a Metering Screen is entered, this is the number of the cluster that will initially be monitored for Loudness.
5. **Alarm:**
 - a. **Over:** The Alarm indication will only appear when Loudness has exceeded the **Reference Level** by the **Tolerance** amount.
 - b. **Under:** The Alarm indication will only appear when Loudness is below the **Reference Level** by the **Tolerance** amount.
 - c. **Both:** The Alarm indication will only appear when Loudness has exceeded or is below the **Reference Level** by the **Tolerance** amount.
 - d. **Off:** The Alarm indication will not appear.
6. **Alarm Tolerance:** This is the range over which a normal loudness indication is given. Above or below this range will result in color changes in the graph.
7. **Loudness Window:** This may be set to **Momentary**, **Short**, or one of 22 values, ranging from one second to two hours.
8. **Monitoring Mode:**

- a. **Manual:** Touch the Manual button to enable Manual Mode. This allows you to measure the loudness of a specific program or segment of a program, such as a commercial. In this mode, the **Start** and **Stop** button on the Loudness Meter screen can be manually used to begin and end a loudness measurement interval. The reading for that interval is then held on the Loudness Meter.
- b. **Continuous:** Touch the **Continuous** button to enable Continuous Mode. In this mode, loudness readings are continually made. The **Stop** button on the Loudness Meter screen is not active.


Note: Further and more detailed descriptions of all of the above Loudness terms may be found in the ITU-R BS.1770-3 loudness standard.

When you have finished making the settings click **Apply** to save them or click **Cancel** to discard them.

Phase Indicator Configuration Tab

The Phase Indicator Configuration tab is as shown in Figure 4-10. It allows you to select which channel pairs will receive a phase meter on the **Metering Screen**. Generally, it is useful to monitor the relative phase of stereo pairs. However, sometimes each channel of a pair is unrelated to each other. This can be because the channels are used to convey two independent monophonic signals or that one channel may be a Center channel and the other may be a Low Frequency Effects channel. In these instances, the Phase Indicator would almost always indicate an out of phase condition. Because this would be a needless distraction to the operator, switches are provided on this tab to individually turn phase monitoring for each channel pair on or off. **Select All** and **Reset All** buttons are also provided.

Figure 4-10: Phase Indicator Configuration Tab

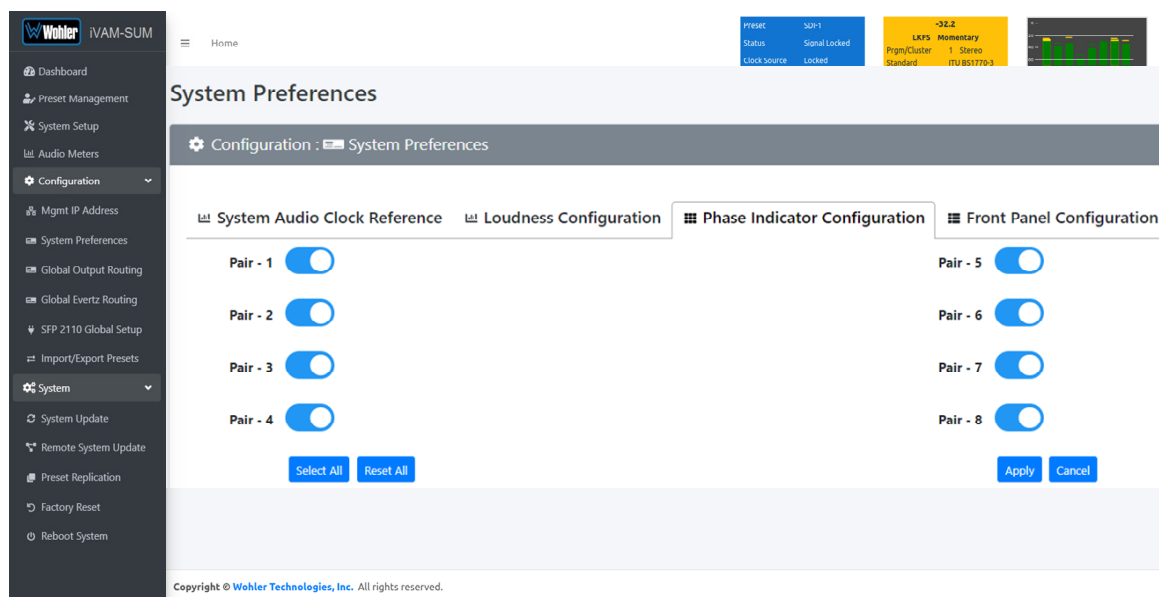

When you have finished making the settings click **Apply** to save them or click **Cancel** to discard them.

GPI Action Settings

A software license must be installed for the GPIO port to function. Refer to the **System Setup** section in Chapter 4 to install software licenses. The function of each input pin of the GPIO connector shown in Figure 2-2 is defined on this screen.

Figure 4-11: GPI Action Settings Screen

	Trigger	Alternate	Action	Parameter	Action 2	Parameter 2
GPI - 1	Low to High	☒	Master Mute		Master Unmute	
	High to Low	☐	No Action		No Action	
GPI - 2	Low to High	☐	No Action		No Action	
	High to Low	☐	No Action		No Action	
GPI - 3	Low to High	☐	No Action		No Action	
	High to Low	☐	No Action		No Action	
GPI - 4	Low to High	☐	No Action		No Action	
	High to Low	☐	No Action		No Action	

The triggers and associated actions shown in this figure are as follows:

GPI Trigger: Separate actions may be defined for Low to High and for High to Low input voltage transitions.

Trigger Mode: If desired, each input voltage transition may be responded to as either steady state or Alternate Action. For example, if a Low to High transition were set to control Muting of the Audio and the Alternate Action switch were turned off, then audio would only be muted while the GPI voltage is applied and unmuted when the GPI voltage is removed. If the Alternate switch were turned on, then alternate applications of the GPI voltage would alternately mute and unmute the audio:

	Trigger	Alternate	Action	Parameter	Action 2	Parameter 2
GPI - 1	Low to High	☒	Master Mute		Master Unmute	
	High to Low	☐	No Action		No Action	

Note that if the Alternate GPI Trigger Action is chosen for one GPI transition, then Action and Action 2 for the other transition on the same GPI must be set to No Action to avoid conflict. This is shown in the above image.

Trigger Action: A pull down menu allows you to select one of seven possible actions that may be triggered by GPI voltage:

No Action: The GPI trigger will have no effect. This is the default setting and may be used when that particular GPI is left disconnected.

Preset Recall: Triggering the GPI will recall a Preset. The Parameter will define which Preset will be recalled.

Source Select: Triggering the GPI will select a Source for monitoring. The Parameter will define which Source will be selected.

Master Mute: Triggering the GPI will mute the monitoring speakers.

Master Unmute: Triggering the GPI will unmute the monitoring speakers.

Dim Audio: Triggering the GPI will dim the monitoring speakers.

UnDim Audio: Triggering the GPI will undim the monitoring speakers.

System Audio Clock Reference
Phase Indicator Configuration
GPI Actions Settings

	Trigger	Alternate	Action	Parameter	Action 2	Parameter 2
GPI - 1	Low to High	☐	No Action		No Action	
	High to Low	☐	No Action		No Action	
GPI - 2	Low to High	☐	No Action		No Action	
	High to Low	☐	No Action		No Action	
GPI - 3	Low to High	☐	No Action		No Action	
	High to Low	☐	No Action		No Action	
GPI - 4	Low to High	☐	No Action		No Action	
	High to Low	☐	No Action		No Action	

Apply
Cancel


Trigger Alternate Action: If the Alternate Action switch is turned on, the pull down menu of the Trigger Alternate Action 2 selection will allow you to define what happens with every other GPI Trigger. The choices are the same as those listed for the Trigger Action above.

Note again that if the Alternate GPI Trigger Action is chosen for one GPI transition, then Action and Action 2 for the other transition on the same GPI must be set to No Action to avoid conflict.

Front Panel Configuration Tab


To prevent accidental or unauthorized changing of critical settings in the local product menus, it is possible to restrict access. The Front Panel Configuration Tab entry screen is shown in Figure 4-12. This provides an entryway to the Front Panel Configuration Tab shown in Figure 4-13. To proceed, you must enter the correct Passcode. If no Passcode has been set, the default Passcode is 0-0-0-0.

Figure 4-12: Front Panel Configuration Tab – Passcode Entry

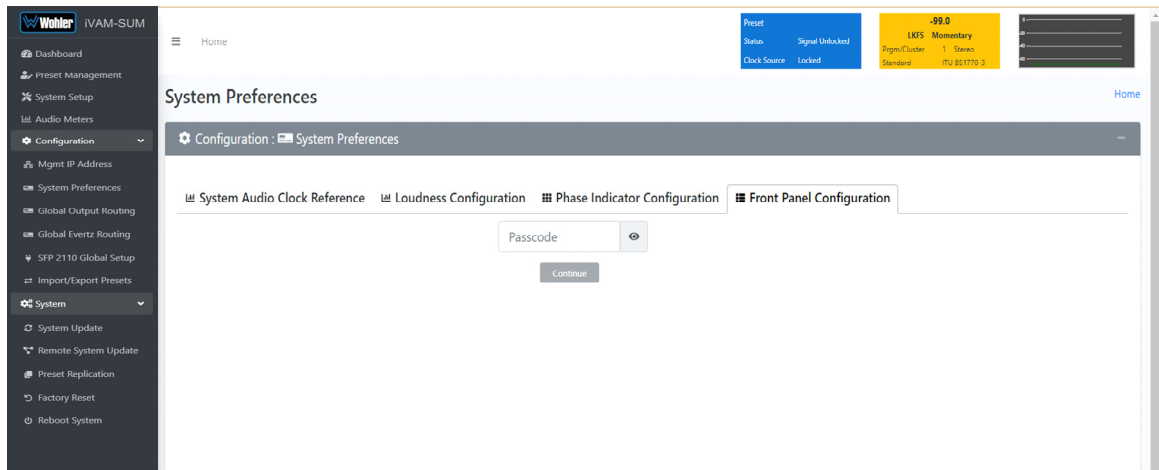


If an incorrect Passcode is entered, the screen shown in Figure 4-13 appears. Click the **Continue** button to try again. If you have forgotten the Passcode, this can be remedied by performing a Factory Reset. Unfortunately, this will also erase all of the menu settings. You may also contact Wohler Technical Service for help.

Figure 4-13: Unrecognized Passcode

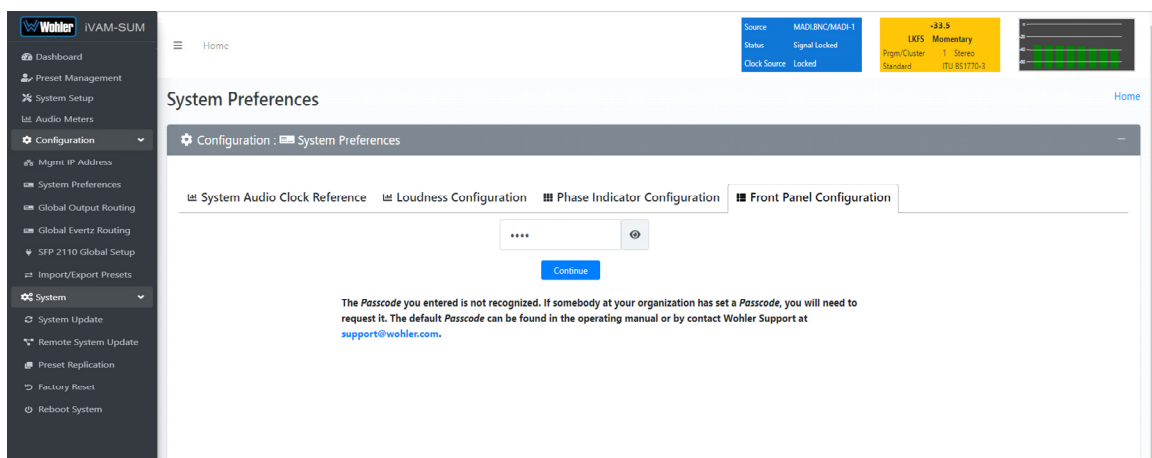

When you have successfully entered the Passcode, the Passcode Settings screen will appear, as shown in Figure 4-14.

Figure 4-14: Front Panel Configuration Tab

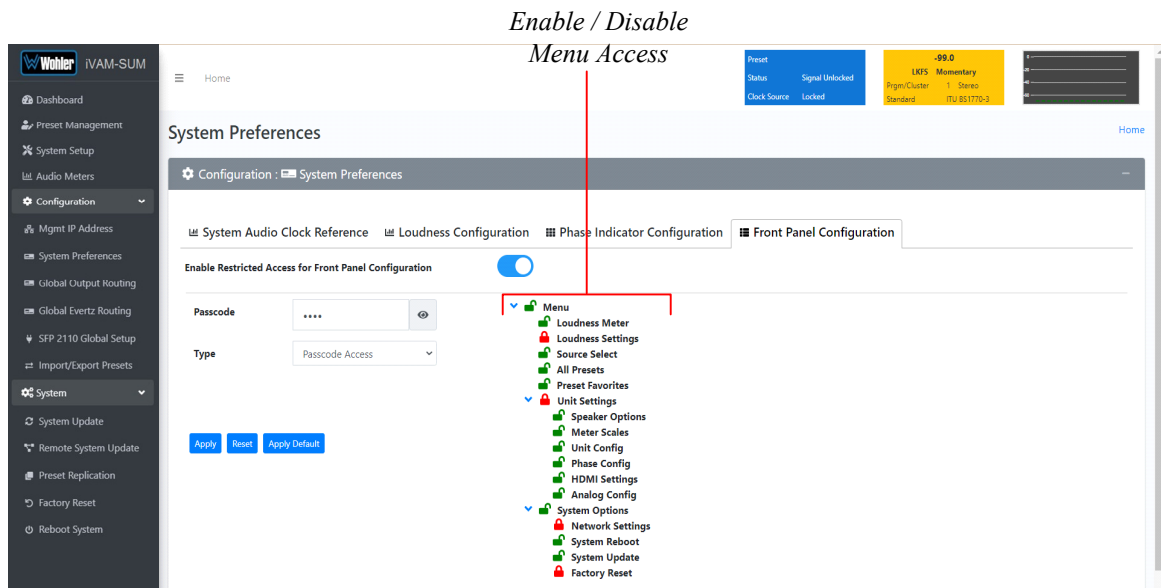

The functions on this screen are as follows:

Enable Restricted Access for Front Panel Configuration: This switch will turn ON or OFF protection or blocking of any local product menus, except for the Passcode Settings menu, which is always Passcode protected.

Passcode: You may enter a new Passcode in this field. The Passcode can be any 4-digit number. Be sure to save the Passcode in a safe place for future reference.

Type: Select the type of disabled button appearance on the local product menus using the **Type** button. The choices are:

Passcode Access: The Passcode protected function buttons include a small orange padlock icon within the buttons. This is shown in the left image of Figure 4-15. These buttons can only be accessed using the correct Passcode.

No Access: If the function buttons are protected by No Access, the buttons are grayed out and non-functional, as shown in the right side of Figure 4-15. These buttons cannot be accessed.


Apply Default: Clicking this button returns the settings in this screen to the factory default values. The Passcode becomes 0-0-0-0.

Reset: Clicking this button undoes any settings you have made on this tab.

Enable / Disable Menu Access: This section provides a nested chart of the local menus that exist in the product. You may set which menus are affected by restrictions. Click any menu shown to change it between affected (red icon) and unaffected (green icon).

Apply: When you have completed the desired settings in this tab, click **Apply** to put them into effect.


Figure 4-15: Examples of Local Menu Protection

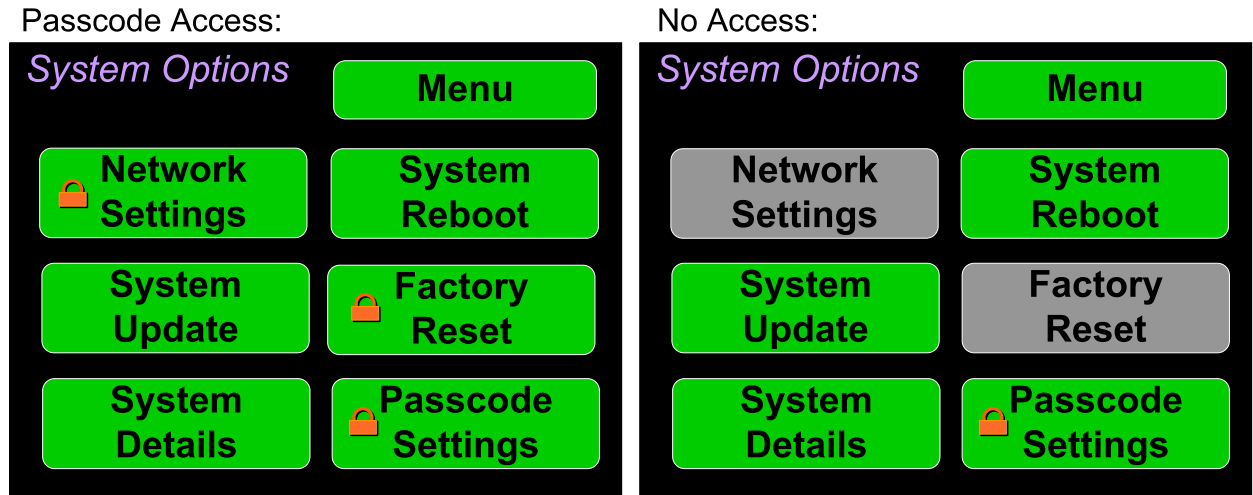

NA Input Signal Tab

The decision of how the monitor should react to a loss of monitored input signal is determined on this tab. The default setting is to mute the audio.


Figure 4-16: NA Input Signal Tab

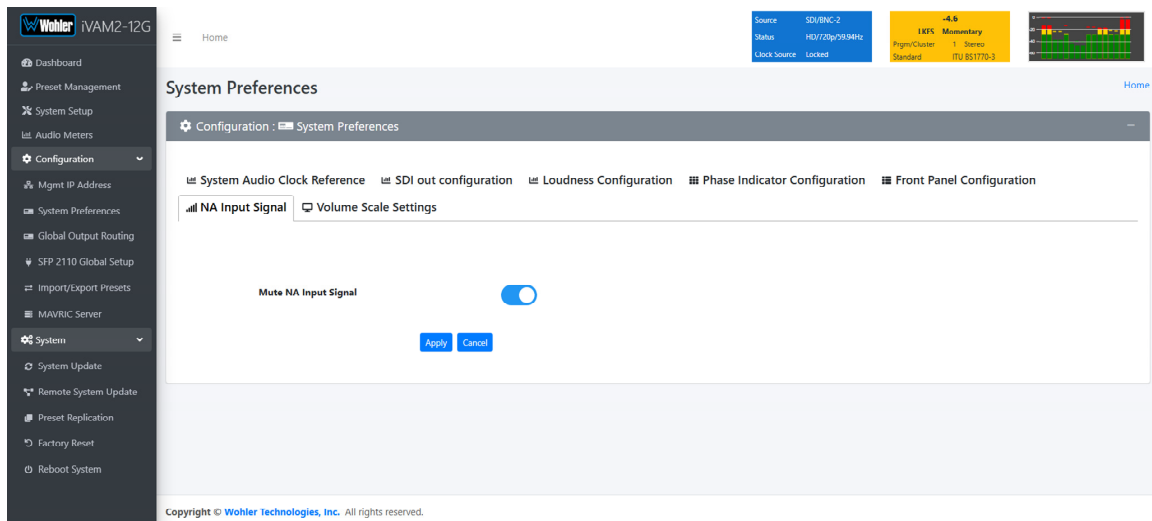

Volume Scale Settings Tab

This tab allows you to define exactly how the **Volume** control will affect the audio.

Figure 4-17: Volume Scale Settings Tab

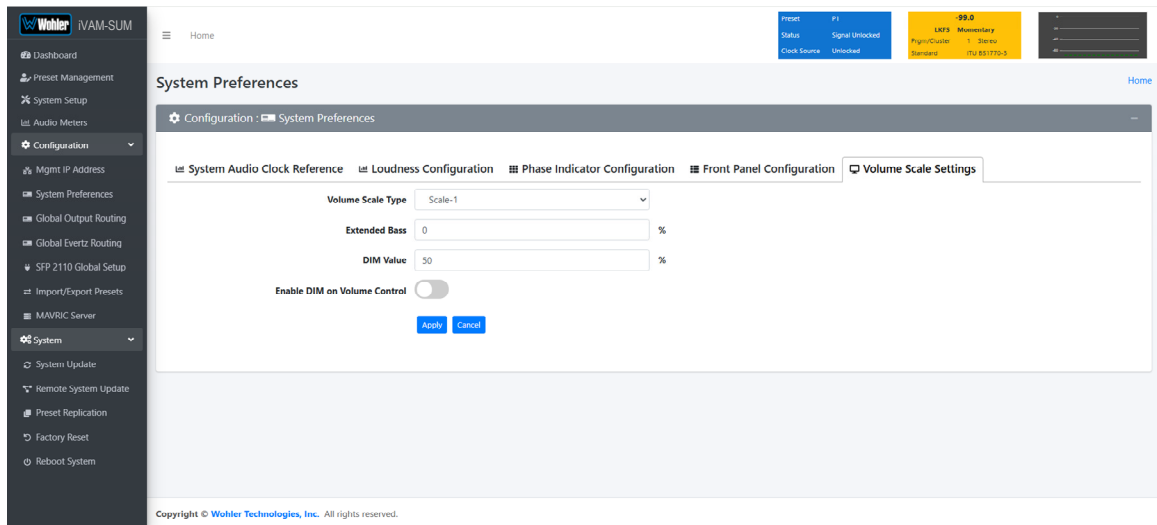

The following settings can be made on this tab:

1. **Volume Scale Type:**

- a. **Scale-1:** This is the standard volume scale that is used on Wohler products.
- b. **Scale-2:** This is a custom volume scale.

2. **Extended Bass:** This setting allows you to control the amount of low frequency response that you will be monitoring. The range is 0 to 100%.

3. **DIM Value:** This is the level to which the monitored audio will be reduced to when the **Volume** knob on the front panel is pressed. The range is 0 to 100%. For example, if the Volume is set to 200 and the **DIM Value** is set to 50, when the **Volume** knob is pressed to dim the audio, the level will be reduced to 100 which is 50% of the volume setting before the knob was pressed.


4. **Enable DIM on Volume Control:** This switch controls whether pressing the **Volume** control knob:

- a. **OFF:** Pressing the **Volume** control knob will mute the monitored audio. Pressing it again will unmute the audio.
- b. **ON:** Pressing the **Volume** control knob will dim the monitored audio to the level specified in the DIM Value setting. Pressing it again will mute the monitored audio. Pressing it yet again will dim the audio. Pressing it one more time will unmute the audio.

Preset Management

Presets are monitoring configurations that can be composed of channels from multiple sources and displayed on the meters in any order. Presets should be set up to allow operators to quickly shift between setups for monitoring. The **Preset Management** screen contains selections of all of the details for a Preset, and is largely arranged in a matrix format connecting input channels to monitoring channels. The screen is shown in Figure 4-18.

Figure 4-18: Configure Presets

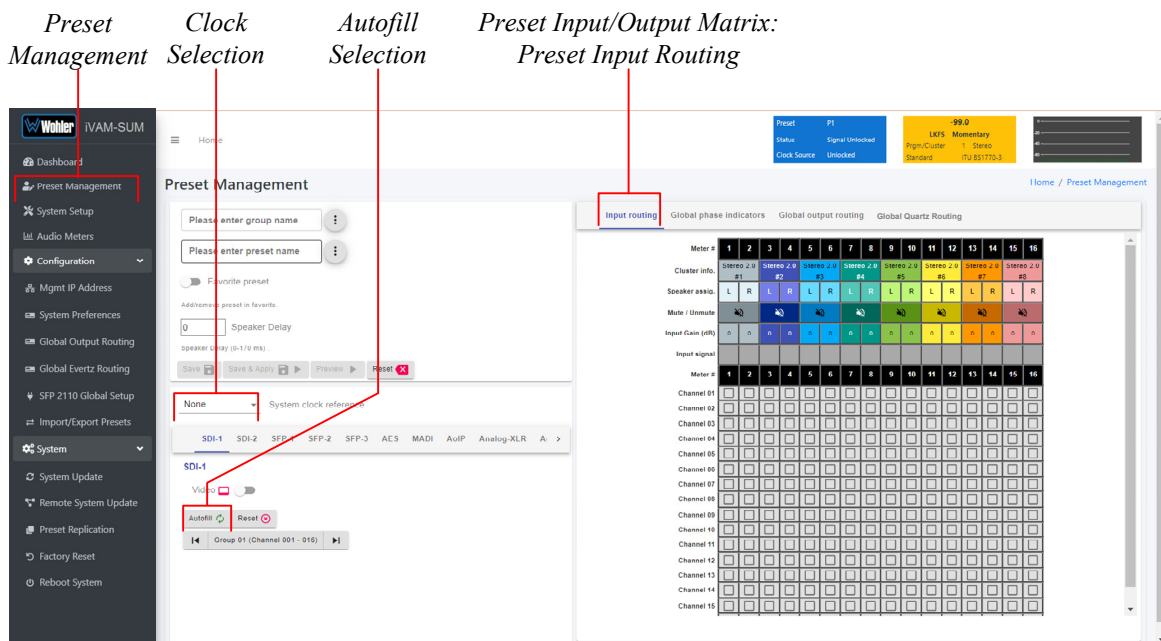

1. **Preset Configuration:** You may create a new Preset, adjust an existing Preset, or create a new Preset from an existing Preset:
 - **To create a new Preset,** enter the name for the new Preset in the field to the left of the word **Preset**. Then make all of the settings needed and save it.
 - **To make changes to an existing Preset,** select it from the pull down list, make the needed changes and save it.
 - **To create a new Preset starting with an existing Preset,** first select the existing Preset from the pull down list. Next, enter the name for the new Preset and save it. Then make the needed changes and save it.

Presets may be created for any licensed inputs, even if the SFP module for an input is not plugged into its respective socket at the time. This makes it easy to swap SFP input modules without having to recreate presets after the insertion or removal of an SFP module. Note that if a licensed SFP module is not detected, such as when one is removed to be swapped, its monitoring inputs will be muted. Likewise, if the required license has not been entered for an SFP module that is inserted, its monitoring inputs will also be muted. Refer to the **Licenses** section in this chapter to install software licenses.

2. **System Clock Reference:** There must be a system clock reference for monitoring to take place. Select a reference from the pull down list. The best choice is a stable, always present clock source locked to house sync. Second to that, use the selected input as the clock. Generally speaking, **Internal** is not the best choice.
3. **Speaker Delay:** If desired, an audio delay may be inserted ahead of the monitor speakers. This delay may range from 0 to 170 mS. Typically, delay is used to align the monitored audio with a video monitored signal.
4. **Input Selection:** Audio from any of the input sources may be applied to the monitoring scheme in any way. For example, you may have 6 channels from an SDI stream, along with 2 AES channels, and along with 2 analog channels assigned your choice of meters. A **Preset Input/Output Matrix** is provided on the lower right side of the screen to allow you to assign each channel. Simply select each input source, one at a time, and then check the boxes in the **Matrix** to apply each input channel number to a metered channel number. They do not have to be applied in any specific order. The order of assignment should be chosen to make it easy for the operator to understand. If there are more than 8 channels in a source, the desired group of 8 can also be selected from the box in the lower left of the screen.
5. **Autofill Selection:** If you simply want to map all 8 input channels to all 8 meters in the same order, click the **Autofill** button. The **Preset Input/Output Matrix** will automatically fill out. To remove all mapping, click the **Reset** button that is adjacent to the **Autofill** button.
6. **Cluster Definition and Naming:** Channel Clusters are a series of channels that are all associated with monitoring the same signal. For example, a Stereo Cluster consists of two channels that together monitor a stereo signal. A Surround 5.1 Cluster consists of 6 channels that together monitor a 5.1 surround sound signal. Clicking a **Cluster Info** box opens a **Cluster** selection box.

In the **Cluster** box, you can select the type of Cluster from a pull down selection. The available **Cluster Type** selections are:

- Mono 1.0: The channel will appear within a single-channel cluster.
- Stereo 2.0: The channels will appear within a two-channel cluster.
- Surround 5.1: The channels will appear within a 6-channel cluster.
- Surround 7.1: The channels will appear within an 8-channel cluster.
- Custom: You may define a 0 to 8 channel cluster.

Multichannel clusters will expand to the right and overwrite any clusters on overlapping meter positions.

By default, all odd numbered channels will map to the left speakers and all even numbered channels will map to the right speakers. You may change this using the crosspoint selections in the Input/Output Matrix.


A default name will be chosen and it will appear on the metering screen. You may name the Cluster anything you want by simply changing the words within the **Cluster Name** field.

When finished, click **Update**. To undo your change, click **Reset**. To undo all of the Cluster changes for the 8 channels, click **Reset All**.


7. **Speaker Assign:** Speaker assignments are made automatically when a cluster is set. However, it can be that in an actual signal, the channel assignments may be different than what the automatic assignment assumes. A speaker assignment adjustment is provided for each channel, should you need to override the automatic settings. **It is important to accurately assign the function of each channel so that the Loudness calculations will be accurate.** Clicking a **Speaker Assign** button on a channel opens a box that lets you change the current setting.
8. **Mute/Unmute:** A **Mute/Unmute** control is provided for each channel, although the adjustment will affect all channels in the Cluster. This allows the operator to just see the meters for certain channels and not hear the audio. This is an alternate action control.
9. **Input Gain (dB):** The Input Gain Trim of each input channel may be adjusted from -60dB to +12dB. The default setting is 0dB. The Input Trims may also be adjusted from the controls on the front panel of the iVAM1-SUM16-G and these changes will appear on this screen.
10. **Label Display:** The default Label Display on each channel on the iVAM1-SUM16-G monitoring screen is the consecutive number of each channel's appearance on the display. It may be changed on this screen within the limits of the space for it on the iVAM1-SUM16-G screen.

The color of the label for each channel may also be selected for both the enabled and disabled states. Click on **Label Display** to open the Label Information window. Refer to Figure 4-19. A wide variety of color choices are available. After setting the colors for one channel, the **Set color settings to all meter labels** button may be used to automatically transfer your choices to every channel, making the display more consistent.

Figure 4-19: Label Display Text and Color Selection

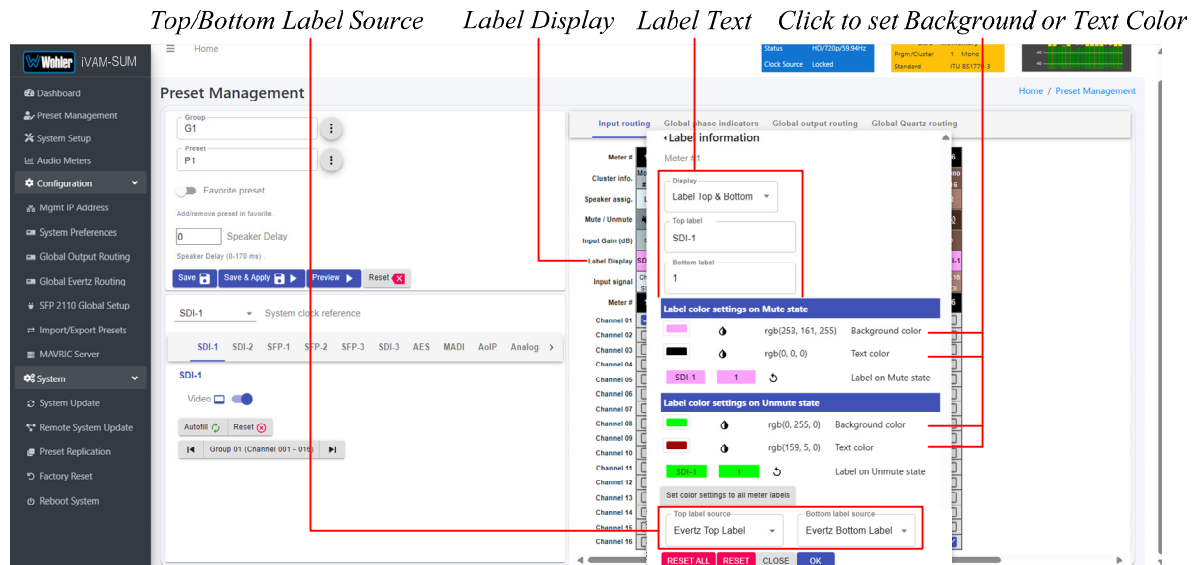

Choose color in the Color Selection box

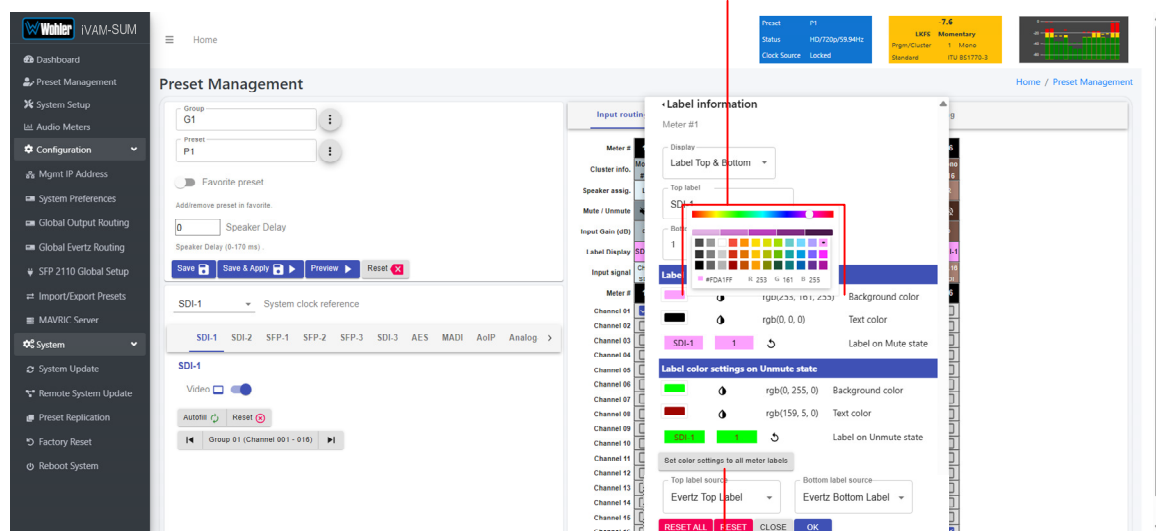


Set color settings to all meter scales

11. The initial values for the Top and Bottom Labels may be set using the dropdowns as shown in the above figure. These labels are displayed in the Label Information field while creating a preset, but can be changed at that time if necessary. The choices are as follows:
 - Default Top label source — Preset Top Label, Evertz Top Label (default), Evertz Bottom Label
 - Default Bottom label source — Preset Bottom Label, Evertz Top Label, Evertz Bottom Label (default).
12. The **Output Routing** tab is shown in Figure 4-20. When the OPT-OUTPUT-ROUTING capability was not purchased and licensed, the signals are routed to the outputs in a fixed pattern, which is not changeable. The selection matrix is grayed, indicating that changes are not possible. However, if the OPT-OUTPUT-ROUTING license is installed, this tab allows

you to determine exactly which input channels are routed to which outputs. It then appears as shown in Figure 4-21. This very flexible capability allows you to route signals according to Preset or as a default for the whole system. Refer to the **Global Output Routing** section in this chapter to learn the function of each of the checkboxes and of the matrix in this tab.

To set up a different input to output routing scheme for the Preset you are creating, click the **Global Output Routing** tab and uncheck the **Apply Global Output Routing** checkbox. You may then adjust the output routing as you desire on this tab and it will only apply to this Preset.

Figure 4-20: Output Routing Preset Tab

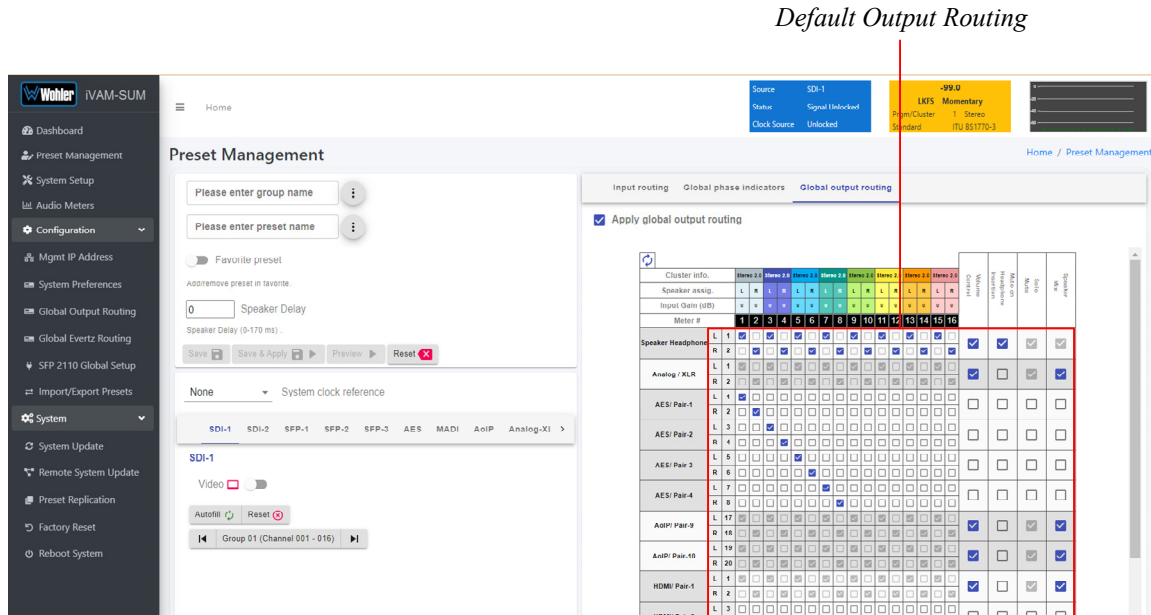

13. When you have finished creating a Preset or making changes to a Preset, either click the **Save** button to save the Preset, click the **Save & Apply** button to save the Preset and make it the current Preset, or click the **Reset** button to discard the changes just made. These selections are shown in Figure 4-20.

Output Routing

The **Output Routing** licensed feature (OPT-OUTPUT-ROUTING) allows channels to be routed or combined and routed in custom ways to various destination outputs. **Output Routing** is applied to:

1. Signals monitored using "Input Source select" from the Front Panel,
2. Presets that have been created to apply the Output Routing.

Any change to the routing will affect the Presets that have "Apply Output Routing" selected. For example, multiple channels of a 7.1 channel program can be combined and directed to the left or right internal speakers. Six or eight channels could be directed to the AES outputs, which could feed an external surround sound system. Contact Wohler Sales to purchase the license for the OPT-OUTPUT-ROUTING feature.

When licensed, select **Global Output Routing** under **Configuration**. This will display the **Global Output Routing** screen. This screen contains a matrix of checkboxes which are an easy way for you to set up the wide variety of input to output routing and mixing capabilities. The **Global Output Routing** screen is shown in Figure 4-21.

5. **AES/Pair-3:** Selected inputs will be mixed to the left and right channels and played through the AES Pair 3 Output.
6. **AES/Pair-4:** Selected inputs will be mixed to the left and right channels and played through the AES Pair 4 Output. The four AES outputs can be used together to output, for example, 5.1 or 7.1 surround channels to an external surround sound monitor system.
7. **AoIP/Pair-9 (DANTE / RAVENNA):** Selected inputs will be mixed to AoIP transmit channels 17 and 18. Note that configuration for channels 1 – 16 is not supported. Use a Dante Controller or Aneman/Zman web interface to route these channels appropriately.
8. **AoIP/Pair-10 (DANTE / RAVENNA):** Selected inputs will be mixed to Channel 19 and Channel 20. Use a Dante Controller or Aneman/Zman web interface to route the remaining pairs appropriately.
9. **HDMI/Pair-1:** Selected inputs will be mixed to the left and right channels and played through first pair of the HDMI Output.
10. **HDMI/Pair-2:** Selected inputs will be mixed to the left and right channels and played through second pair of the HDMI Output.
11. **HDMI/Pair-3:** Selected inputs will be mixed to the left and right channels and played through third pair of the HDMI Output.
12. **HDMI/Pair-4:** Selected inputs will be mixed to the left and right channels and played through fourth pair of the HDMI Output.

Source Inputs

The source inputs which may be routed are described in this section.

1. **Cluster Information:** Cluster information show type of cluster and cluster name.
2. **Speaker Assignment:** Speaker assignment can be used to configure to which speakers the audio is routed to. The possible options are:
 - L** Left
 - R** Right
 - C** Center
 - LFE** Low Frequency Effects
 - Ls** Left Surround
 - Rs** Right Surround
 - Bsl** Back Surround Left
 - Bsr** Back Surround Right
 - S** Mono Surround
3. **Input/Output Matrix:** By checking the various boxes in this matrix, any input channels can be freely routed to any output channels. This flexible channel assignment is called a **Free Mix**. However, when the **Speaker Mix** box is checked in the **Output Options** section, the associated row within the matrix is automatically set to the speaker mix and the checkboxes are

grayed out indicating that you may not change them with a **Free Mix** assignment.

Output Options

The optional settings in this section allow for customization.

1. **Speaker Mix:** This option selects whether an output has the **Speaker Mix** or a **Free Mix** as set in the Routing Input section. The Speaker/Headphone output is always in the **Speaker Mix**.
2. **Solo/Mute:** This setting determines whether or not the outputs are affected by solos and mutes. The Speaker/Headphone output is always affected by solos and mutes. Note also, that all outputs in **Speaker Mix** mode also are affected by solos and mutes.
3. **Mute on Headphone Insertion:** This option controls whether the outputs should be muted upon a headphone insertion. This setting can be adjusted even for outputs whether they are in **Speaker Mix** or **Free Mix** modes.
4. **Volume Control:** This setting determines whether each output pair is adjusted by the **Volume Control** knob. Speaker/Headphone outputs are always affected by the volume control knob, as are any outputs that are in **Speaker Mix** mode.

Typical Questions Regarding Output Routing

The questions and thoughts in this section are commonly asked by people when setting up the licensed Output Routing capability.

What signal outputs can be controlled using the Output Routing feature?

All the outputs on the /VAM1-SUM16-G can be controlled using the Output Routing feature. This includes – Internal Speakers, Analog XLR outputs, all 4 pairs of AES outputs on HD-15, and AoIP Pair 9 and Pair 10.

How do the outputs behave if I do not purchase OPT-OUTPUT-ROUTING license?

If Output routing license is not purchased, the outputs are configured as follows:

1. **Speakers:** All monitored channels are always available on the internal speakers. The left and right speaker assignment is determined by the **Speaker Assignment**. Audio on the speakers is controlled by the **Volume** knob and is muted whenever a headphone is inserted into the **Headphone** jack.
2. **Analog XLRs:** These outputs follow the same configuration as the internal speakers. They are controlled by the **Volume** knob and are muted whenever a headphone is inserted into the **Headphone** jack. These outputs also follow the solo/mute selections on the Audio Meter screen.

3. **AES Pairs 1 through 4:** The first 8 channels appear on these outputs in numeric order. They are pre-fade, so they are unaffected by the **Volume** knob or headphone insertion. They are also unaffected by the solo/mute selections on the Audio Meter screen.
4. **AoIP Pairs 9 and 10:** These outputs follow the same configuration as the internal speakers. They are controlled by the **Volume** knob and are muted whenever a headphone is inserted into the **Headphone** jack. These outputs also follow the solo/mute selections on the Audio Meter screen.

What is the difference between Global Output Routing and Output Routing in Presets?

Both are used to configure the unit outputs. Global Output Routing is applied by default when you select a source or when creating presets and when you don't change the Output Routing unique to any Preset. Changes to either of these are disabled if the OPT-OUTPUT-ROUTING license is not purchased.

How do I route whatever is being monitored to the XLR and AES outputs?

Using **Global Output Routing** (optional licensing upgrade), you may route any signals to the XLR & AES outputs. You may route signals to the XLR outputs using the **Analog/XLR** checkboxes and route signals to the AES outputs by using the **AES/Pair 1** to **Pair 4** checkboxes.

Analog / XLR	L 1	☐	☐	☐	☐	☒	☐	☒	☐	☒	☒	☐	☒	☒	☒	☐
	R 2	☐	☐	☐	☐	☐	☒	☐	☒	☐	☐	☐	☒	☒	☒	☐
AES/ Pair-1	L 1	☒	☐	☒	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	R 2	☐	☒	☐	☒	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐

As shown in the above example, signals appearing on Audio Meter channels 1 through 4 are routed to AES Pair 1 and signals from Audio Meter channels 5 to 8 are routed to the Analog XLR outputs.

How do I have a downmixed pre-fade output on AES Pair-1 combined with a post-fade output on the Analog XLRs?

To downmix a pre-fade output on AES Pair-1, uncheck the **Volume Control** checkbox for that AES pair. For a Post-fade output on the Analog XLRs, check **Volume Control** checkbox.

Cluster info.		Stereo 2.0		Stereo 2.0		Stereo 2.0		Stereo 2.0		Volume Control
Speaker assign.		L	R	L	R	L	R	L	R	
Meter #			1	2	3	4	5	6	7	8
Speaker Headphone	L 1	☒	☐	☒	☐	☒	☐	☒	☐	☒
	R 2	☐	☒	☐	☒	☐	☒	☐	☒	☐
Analog / XLR	L 1	☐	☐	☐	☐	☐	☐	☐	☐	☒
	R 2	☐	☐	☐	☐	☐	☐	☐	☐	☒
AES/ Pair-1	L 1	☒	☐	☒	☐	☒	☐	☒	☐	☐
	R 2	☐	☒	☐	☒	☐	☒	☐	☒	☐

Volume Control:
 On - Post-fade
 Off - Pre-fade

How do I make the XLR outputs follow the Audio Meter screen solos & mutes while the AES Pair-1 does not?

Make the settings shown in the **Solo / Mute** column:

Solo Mute:
 On - Outputs follow user Solo/Mute
 Off - Outputs do not follow user Solo/Mutes

Cluster info.		Stereo 2.0		Stereo 2.0		Stereo 2.0		Stereo 2.0		Volume Control	Insertion	Mute on Headphone	Solo Mute
Speaker assign.		L	R	L	R	L	R	L	R				
Meter #			1	2	3	4	5	6	7	8			
Speaker Headphone	L 1	☒	☐	☒	☐	☒	☐	☒	☐	☐	☒	☐	
	R 2	☐	☒	☐	☒	☐	☒	☐	☒	☐	☐	☒	
Analog / XLR	L 1	☐	☐	☐	☐	☐	☐	☐	☐	☐	☒	☐	
	R 2	☐	☐	☐	☐	☐	☐	☐	☐	☐	☒	☐	
AES/ Pair-1	L 1	☒	☐	☒	☐	☒	☐	☒	☐	☐	☐	☐	
	R 2	☐	☒	☐	☒	☐	☒	☐	☒	☐	☐	☐	

The setting shown above determines that outputs will follow the Audio Meter screen solos & mutes for the XLR outputs because the checkbox is checked. It is not checked for the AES outputs, so they will not be affected by the solo & mute choices. This feature requires the optional OPT-OUTPUT-ROUTING output routing license.

How do I route only specific monitored channels to the Analog XLR outputs?

When the optional OPT-OUTPUT-ROUTING license is purchased, you may route specific channels as shown below. Here Audio Meter channels 1, 3, 5, and 7 are routed to the left analog XLR output and Audio Meter channels 2, 4, 6, and 8 are routed to the right analog XLR output. Unchecked channels are not routed. Make

sure the **Speaker Mix** selection is turned off to enable this selection.

[illegible]

The optional Global Output Routing feature works great. But what if we don't want to create any Presets and want to monitor audio only using Source Select? How would I configure different outputs for Source Select choices?

Use the **Global Output Routing** settings to determine how the outputs are configured for source select options.

The **Global Output Routing** feature allows channels to be routed or combined and routed to various destinations. For example, channels 1 to 8 can be routed to AES outputs:

Global Output Routing

[Home](#) / [Configuration](#) / [Global Output Routing](#)

Cluster info.

Matrix 1-2

Matrix 3-4

Matrix 5-6

Matrix 7-8

Speaker assign.

L

R

L

R

L

R

L

R

Matrix #

1

2

3

4

5

6

7

8

Speaker Headphone

L

1

☒

☒

☒

☒

☒

☒

☒

☒

R

2

☒

☒

☒

☒

☒

☒

☒

Analog / XLR

L

1

☒

☒

☒

☒

☒

☒

☒

R

2

☒

☒

☒

☒

☒

☒

☒

AES/ Pair-1

L

1

☒

☒

☒

☒

☒

☒

☒

R

2

☒

☒

☒

☒

☒

☒

☒

AES/ Pair-2

L

3

☒

☒

☒

☒

☒

☒

☒

R

4

☒

☒

☒

☒

☒

☒

☒

AES/ Pair-3

L

5

☒

☒

☒

☒

☒

☒

☒

R

6

☒

☒

☒

☒

☒

☒

☒

AES/ Pair-4

L

7

☒

☒

☒

☒

☒

☒

☒

R

8

☒

☒

☒

☒

☒

☒

☒

AuxIP/ Pair-9

L

17

☒

☒

☒

☒

☒

☒

☒

R

18

☒

☒

☒

☒

☒

☒

☒

Volume Control

☒

Mix as Headphone Insertion

☒

Side Mix

☒

Surround Mix

☒

APPLY

RESET

RESET TO DEFAULT

How do I keep the internal speakers muted and have audio only on the analog XLR outputs?

When the optional OPT-OUTPUT-ROUTING license is purchased, in the **Global Output Routing** configuration, do not select any **Speaker Headphone** checkboxes for any meter channels as shown below, and then select the desired meters for Analog XLR. In this way, the internal speakers will always be muted, but the audio will appear on the Analog XLR outputs (for amplified external speakers). Make sure that the **Speaker Mix** checkbox selection is unchecked for Analog/XLR.

Cluster info.		Stereo 2.0		Stereo 2.0		Stereo 2.0		Stereo 2.0		Volume Control	Mute on Headphone Insertion	Solo Mute	Speaker Mix
Speaker assign.		L	R	L	R	L	R	L	R				
Meter #		1	2	3	4	5	6	7	8				
Speaker Headphone	L	1	☐	☐	☐	☐	☐	☐	☐	☒	☒	☒	☒
	R	2	☐	☐	☐	☐	☐	☐	☐	☒	☒	☒	☒
Analog / XLR	L	1	☒	☐	☒	☒	☒	☒	☐	☒	☒	☒	☐
	R	2	☐	☒	☐	☒	☒	☒	☐	☒	☒	☒	☐

How do I ensure that the outputs are automatically muted when the Headphone jack is inserted?

When the optional OPT-OUTPUT-ROUTING license is purchased, in the **Global Output Routing** configuration, if the **Mute on Headphone Insertion** checkbox is ON then the outputs get automatically muted when a headphone is inserted into the Headphone jack.

As shown below, if a headphone is inserted then the output on the Analog XLRs will be muted, while the audio on AES Pair 1 will remain on.

Mute on Headphone Insertion: On: Outputs are muted when Headphone Jack is inserted Off: Outputs are not muted when Headphone Jack is inserted.													
Cluster info.		Stereo 2.0		Stereo 2.0		Stereo 2.0		Stereo 2.0		Volume Control	Mute on Headphone Insertion	Solo Mute	Speaker Mix
Speaker assign.		L	R	L	R	L	R	L	R				
Meter #		1	2	3	4	5	6	7	8				
Speaker Headphone	L	1	☐	☐	☐	☐	☐	☐	☐	☒	☒	☒	☒
	R	2	☐	☐	☐	☐	☐	☐	☐	☒	☒	☒	☒
Analog / XLR	L	1	☒	☐	☒	☒	☒	☒	☐	☐	☒	☐	☐
	R	2	☐	☒	☐	☒	☒	☒	☐	☐	☒	☐	☐
AES/ Pair-1	L	1	☒	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	R	2	☐	☒	☐	☐	☐	☐	☐	☐	☐	☐	☐

What are AoIP-Pair 9 and AoIP Pair 10?

AoIP-Pair 9: Selected inputs will be mixed to AoIP transmit channels 17 and 18. Note that configuration for channels 1 - 16 is not supported. Use a Dante Controller or Zman web interface to route these channels appropriately.

AoIP-Pair 10: Selected inputs will be mixed to Channel 19 and Channel 20. Again, use a Dante Controller or Zman web interface to route the remaining pairs appropriately.

How do I ensure that my outputs are pre-faded but follow the solo-mutes on the web interface? This will allow us to monitor only the unmuted/solo Audio Meter channels on amplified stereo

speakers connected to the Analog XLR's.


In the **Output Routing** setting, for the Analog XLR outputs, keep the **Volume Control** checkbox unchecked and the **Solo/Mute** checkbox checked. This ensures that the Volume Control is **not** applied to the outputs, while the Solos/Mutes **are**.

Cluster info.		Stereo 2.0		Stereo 3.0		Stereo 2.0		Stereo 3.0		Volume Control	Insertion	Stereo as Headphone	Solo Mute	Speaker Mix
Speaker assign.		L	R	L	R	L	R	L	R					
Meter #		1	2	3	4	5	6	7	8					
Speaker Headphone	L 1	☐	☐	☐	☐	☐	☐	☐	☐	☒	☒	☒	☒	☒
	R 2	☐	☐	☐	☐	☐	☐	☐	☐	☒	☒	☒	☒	☒
Analog / XLR	L 1	☒	☐	☒	☒	☒	☒	☒	☒	☐	☒	☒	☒	☐
	R 2	☐	☒	☐	☒	☐	☒	☒	☒	☐	☒	☒	☒	☐

Global Evertz Routing


Evertz Quartz routing is a protocol that allows for exchanging source labels in a facility. This improves the interoperability of equipment of various manufacturers in a facility. When Global Evertz Routing is selected, the menu shown in Figure 4-22 appears. You may enter names for the top and bottom Evertz labels on this screen.

Figure 4-22: Global Evertz Routing Screen

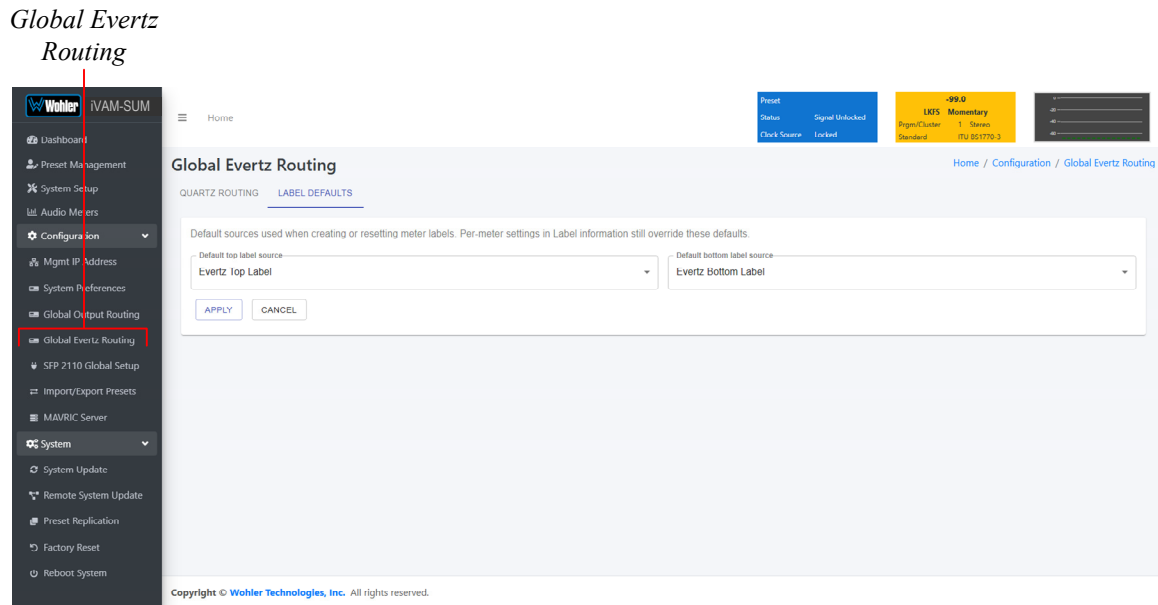

Select the Quartz Routing tab and set the Meter Label Source on this screen to "Evertz Quartz" as shown in the following figure:


Figure 4-23: Evertz Quartz Compatibility Setting

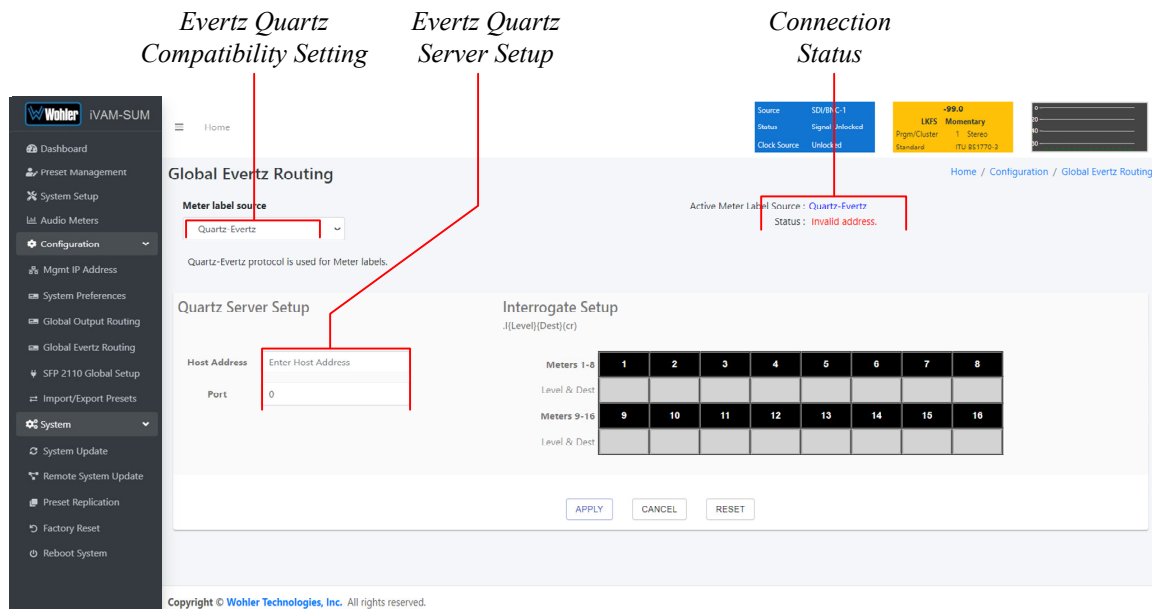

If no Evertz Quartz Server Setup is entered, or if it is incorrect, the Connection

Status will indicate Invalid Address. Enter the Host Address and Port of the Evertz Quartz server in the Quartz Server Setup section. For assistance, contact Wohler Technical Service. Click the **Apply** button to enable Evertz Quartz compatibility. When Evertz Quartz compatibility is enabled and connected, this screen changes as shown in Figure 4-24:

Figure 4-24: Connected Evertz Quartz Screen:

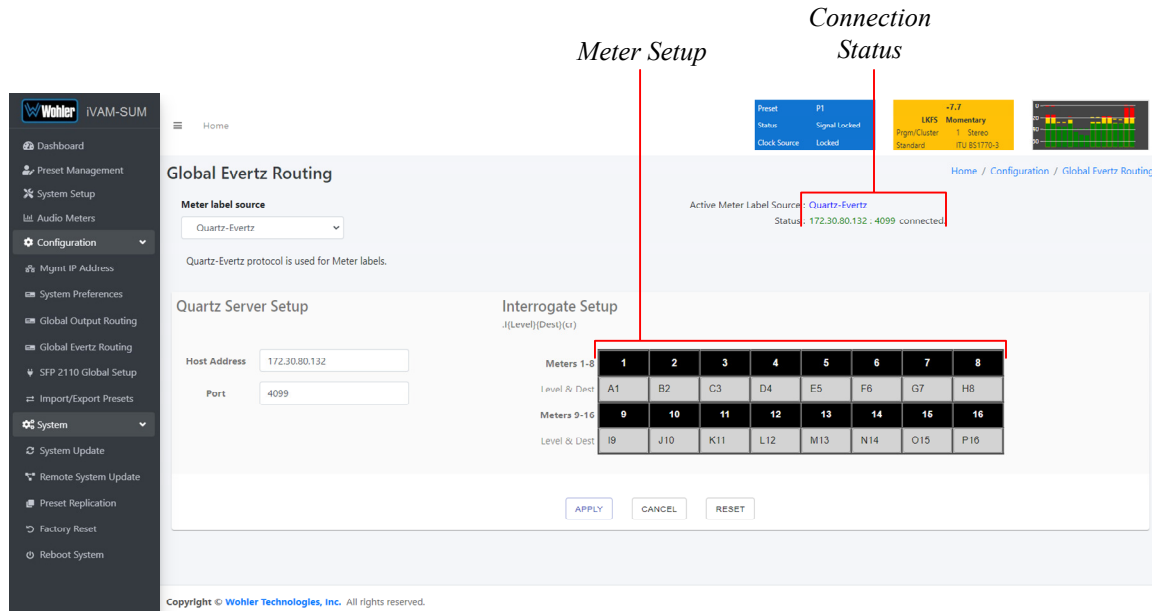

Verify that the Connection Status indicates that it is connected. The Interrogate Setup section will show the new meter label setup, now synchronized with the Evertz Quartz Server.

Other screens will change somewhat after Evertz Quartz compatibility is enabled. These screens are shown in the following two figures:


Figure 4-25: Meter Labeling



Evertz Quartz Labels

Meter labels learned from the Evertz Quartz Server will now be shown.

Figure 4-26: Preset Setup Screen

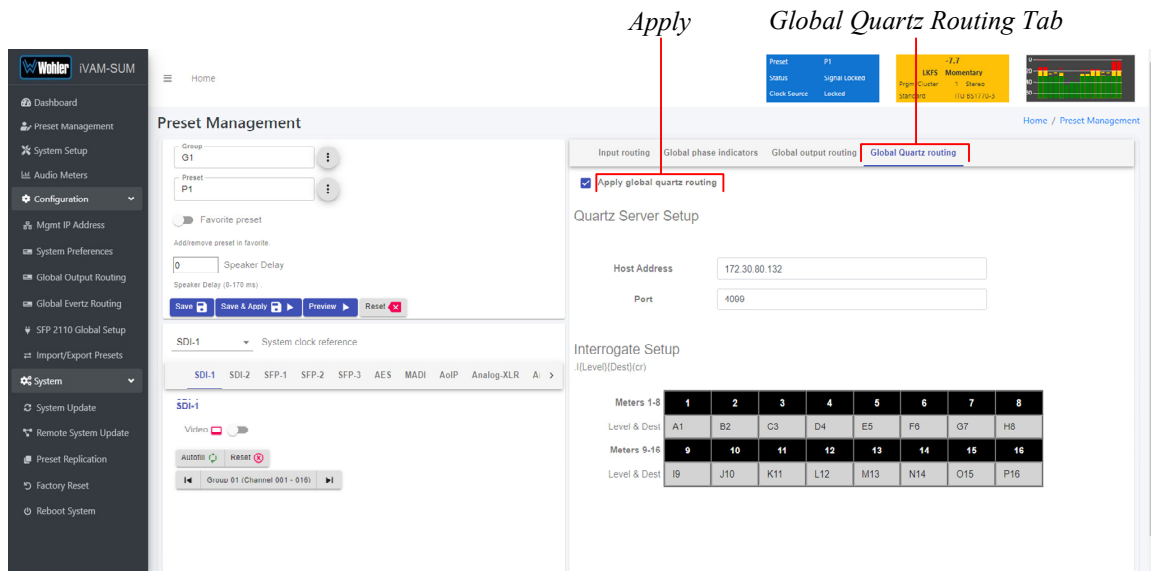

The Global Quartz Routing Tab will display the Quartz Server Setup and allow you to decide whether Global Quartz Routing will apply to this Preset.

Preset Replication

Preset Replication allows you to copy presets from a master unit to multiple IVAM1-SUM16-G units. This can save a lot of setup time if multiple units all need basically the same setup.

To start Preset Replication, click on the **Preset Replication** tab on the master unit. This will start the unit discovery process and will list all the IVAM1-SUM16-G units that you currently have on your network. The discovery process will continue for a period of 2 minutes. However, you may stop the discovery process sooner if you believe all the units in the network have been discovered. Simply click the **Stop Scan** button.

Figure 4-27: Preset Replication Scanning Screen

The screenshot shows the 'Preset Replication' interface for a Wohler IVAM-SUM unit. The left sidebar contains navigation options like Dashboard, Preset Management, System Setup, Audio Meters, Configuration, and System. The main area is titled 'Preset Replication Version on Unit: 1.8.11'. It displays a 'Scanning...' status with a progress indicator and a 'Stop Scan' button. Below this, a table lists 5 discovered units.

#	Name	Serial	Model	System Version	IP Address	Preset Version
1	IVAM-SUM	162347	IVAM-SUM	1.8.11	10.11.11.16	4
2	IVAM-SUM	163173	IVAM-SUM	1.8.10	10.11.11.56	2
3	IVAM-SUM	163166	IVAM-SUM	1.8.11	10.11.11.9	4
4	IVAM-SUM	163175	IVAM-SUM	1.8.11	10.11.11.54	4
5	IVAM-SUM	160597	IVAM-SUM	1.8.11	10.11.11.13	4

Copyright © 2019-2021 Wohler Technologies, Inc. All rights reserved.

Once all the units are discovered you may either copy the presets that are currently created on the Master unit or can use an external preset file that you want to copy to any or all of the Target units. **Note that any and all of the Presets that may already be contained in each Target unit will be erased by copying the new Presets.**

Figure 4-28: Preset Replication Target Selection Screen

Wohler iVAM-SUM Home

Preset Replication Version on Unit: 1.8.11

System : Preset Replication

Presets will be exported from Master Device to selected target devices. ⚠️Note : Presets of selected target devices will be deleted.

Master: ☐ From Master Unit ☒ Preset Version must not exceed 10 characters.

☐ Select All Select target units individually or select all units

Target	Name	Serial	Model	System Version	IP Address	Preset Version	Process	Status
☒	iVAM-SUM	163173	iVAM-SUM	1.8.10	10.11.11.56	2		■
☒	iVAM-SUM	162347	iVAM-SUM	1.8.11	10.11.11.16	4		■
☒	iVAM-SUM	163166	iVAM-SUM	1.8.11	10.11.11.9	4		■
☐	iVAM-SUM	163175	iVAM-SUM	1.8.11	10.11.11.54	4		■
☐	iVAM-SUM	160597	iVAM-SUM	1.8.11	10.11.11.13	4		■

Click either **From Master Unit** or **Select Preset File**. This determines the source of the Presets to be copied. Preset Files would be files that you have previously stored in the computer running the Web GUI.

You may add a descriptive name or version to the Presets being copied. This may aid in remembering what tag or version of the presets are available on the unit. The Preset name or version may be up to 10 characters in length.

Next, select the Target units from the list of units shown by checking or unchecking each of the **Target** boxes at the left. Alternatively, you may click **Select All** to select all of the units. Then select the **Replicate Presets to Selected Devices** button. The progress of the Preset replication for each unit, as the Presets are being copied, will be displayed in the **Process** column. When all of the Presets have been copied to each of the selected units, you may leave this screen.


Import/Export Presets

Use the **Import / Export Presets** page to manage the Preset database in the iVAM1-SUM16-G. You may export the Preset database onto the computer hard drive for security backup purposes or as a means to transfer it to another iVAM1-SUM16-G. Likewise, it can be used to import a Preset database from the computer hard drive into the iVAM1-SUM16-G. In this way, a Preset configuration may be only devised once and then duplicated into all of the iVAM1-SUM16-G units in a system, saving significant effort.

The iVAM1-SUM16-G will create Preset Tags for the each set of Presets. Refer to Figure 4-29. You may also change these Preset Tags, using the Preset Change Field. They allow you to quickly resolve questions about which Presets on various units are the most up to date. They will also allow you to determine whether Presets have been modified. If the Preset Tag displayed contains the suffix "-dirty" then at least one Preset has been changed in some way.

While exporting the file, the Preset Tag is appended to the filename, this allows you to store multiple Preset files with different file name. For example, if the Preset Tag is v1.0.0 then for iVAM1-SUM16-G the default filename would be "**wohler_presets_iVAM1-SUM16-G-v1.0.0.pdb**" Do not change the file suffix and prefix (marked in red). However, you may change the Preset Tag to any number or text to suit your requirements.


Figure 4-29: Database Export

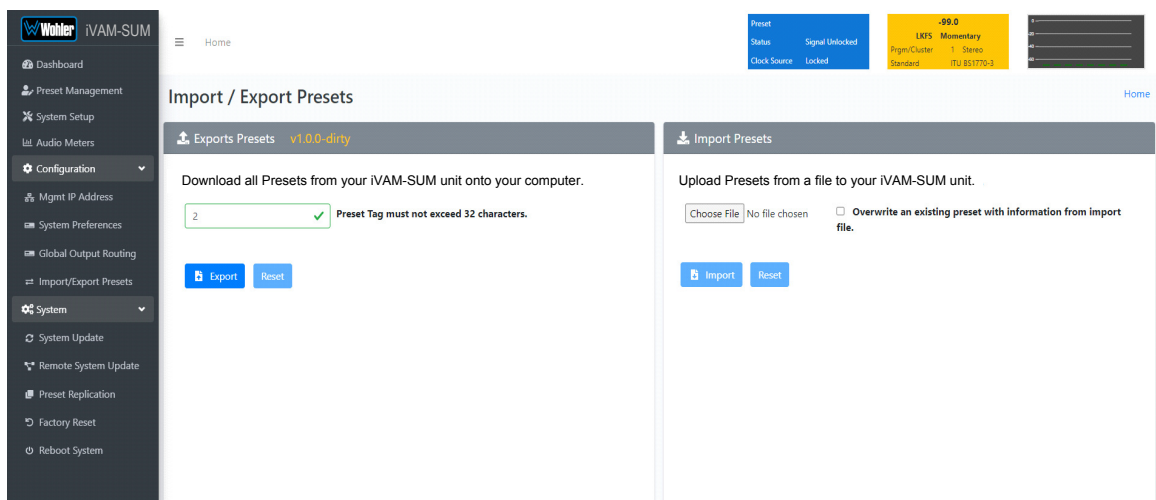

Export Configuration


Use the following steps to save the Preset configuration in the iVAM1-SUM16-G to the computer hard drive:

1. If you need to, revise the Preset Tag name, observing the advice in the advice in the previous section.
2. Click the **Export** button on the **Import / Export Presets** page, as shown in Figure 4-29.
3. A small **Verify** window will appear:

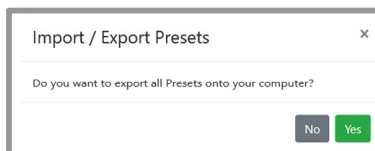

- Click **Yes** to proceed with writing the Preset data to the hard drive. The copying will proceed. After the Preset data has been written, the screen in Figure 4-30 will appear, explaining what has been exported in an Export Presets Summary. It will also note whether there were any errors in the process. If there were any errors, repeat these steps to try again.

Figure 4-30: Database Export

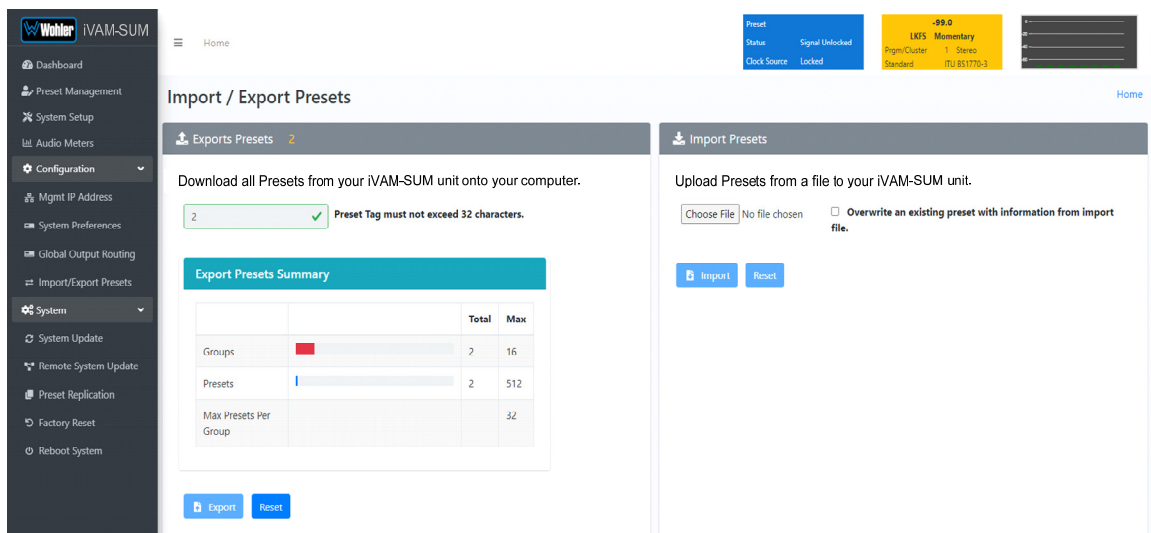

Import Configuration

Use the following steps to copy the Preset configuration into the iVAM1-SUM16-G:

- Click the **Choose File** button as shown in Figure 4-30 and select the Preset Tag you would like to import.
- If you want to allow existing Presets to be overwritten with imported Presets of the same name, check the **Overwrite an existing Preset** box. It is a good idea to do this.
- Click the **Import** button. The copying will proceed. When complete, the screen in Figure 4-31 will appear, explaining what has been imported in an Import Presets Summary. It will also note whether there were any errors in the process. If there were any errors, repeat these steps to try again.

Figure 4–31: Database Import

The screenshot displays the Wohler iVAM-SUM web interface. The sidebar on the left contains navigation links: Dashboard, Preset Management, System Setup, Audio Meters, Configuration (selected), Mgmt IP Address, System Preferences, Global Output Routing, Import/Export Presets, System, System Update, Remote System Update, Preset Replication, Factory Reset, and Reboot System. The top status bar shows system information: Preset (L835 Momentary), Status (Signal Unlocked), Clock Source (Locked), Program/Cluster (1 Stereo), Standard (Dolby Digital), and a serial number (712 B51770-3). The main content area is titled 'Import / Export Presets' and is divided into two panels. The 'Exports Presets' panel on the left shows a download icon, the text 'Download all Presets from your iVAM-SUM unit onto your computer.', a text input field containing '2' with a green checkmark, and a note 'Preset Tag must not exceed 32 characters.' Below this are 'Export' and 'Reset' buttons. The 'Import Presets' panel on the right shows an upload icon, the text 'Upload Presets from a file to your iVAM-SUM unit.', a 'Choose File' button, and a checkbox for 'Overwrite an existing preset with information from import file.' Below this is an 'Import Presets Summary' table.

	Total	Current	Max
Groups	0	2	16
Presets	0	2	512
Max Presets Per Group			32
Skipped Presets	2		

At the bottom of the 'Import Presets' panel are 'Import' and 'Reset' buttons.


System

Click on **System Setup** to find three tabs, each containing important information about the iVAM1-SUM16-G. These tabs are explained in the following three sections.

System Information

This tab displays a variety of information about the iVAM1-SUM16-G. It is shown in Figure 4-32. This information could be useful to view if you are contacting Wohler Technical Service.

Figure 4-32: System Information Tab

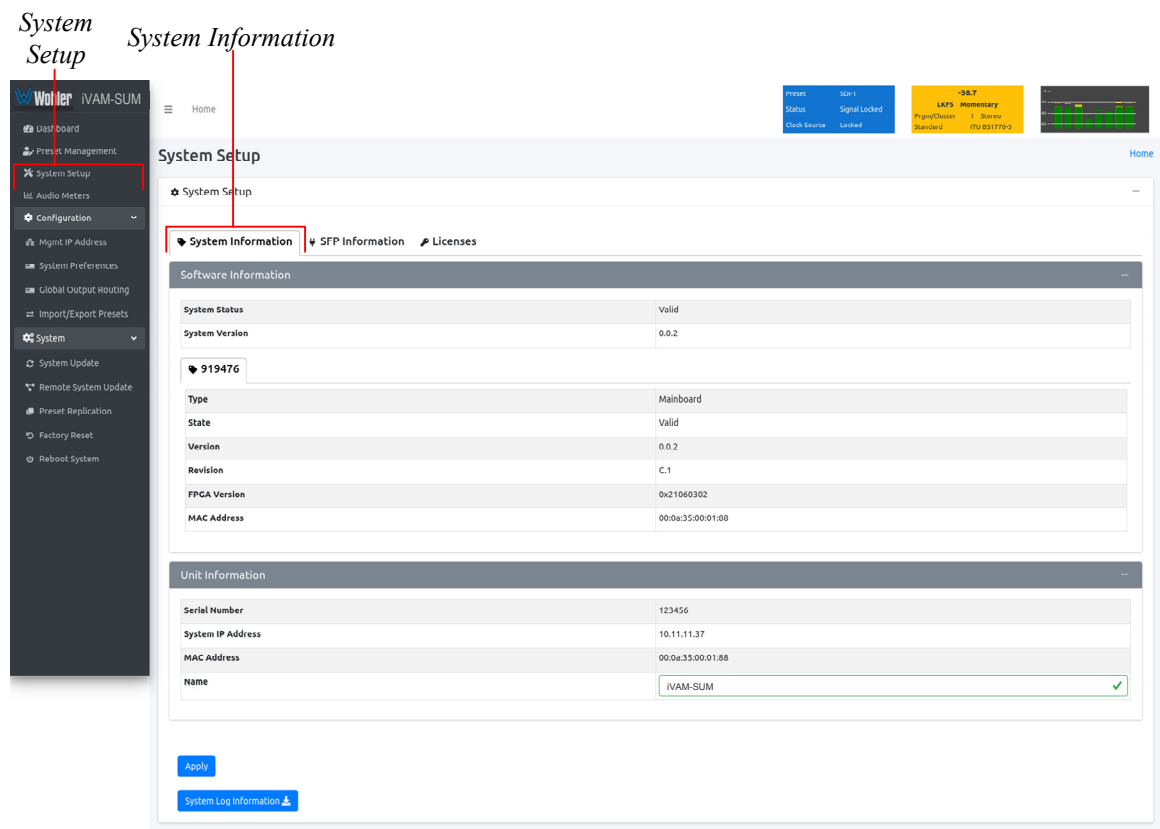

SFP Information

This tab displays a variety of information about the module inserted into the SFP slot on the rear panel of the /VAM1-SUM16-G. It is shown in Figure 4-33. This information could be useful to view if you need to ascertain what module, if any, is installed, or if you are contacting Wohler Technical Service.

Figure 4-33: SFP Information Tab

The screenshot shows the Wohler iVAM-SUM16-G System Setup interface. On the left is a dark sidebar with a menu. The 'System Setup' menu item is highlighted with a red box and labeled 'System Setup' with a red line. The 'SFP Information' tab is also highlighted with a red box and labeled 'SFP Information' with a red line. The main content area shows the 'SFP Information' tab selected, displaying hardware information for SFP Slot 1. A table lists various details about the module.


Hardware Information	
Description	Software-defined, non-MSA, SDI host
Short Description	Software-Defined
Approved	True
Vendor Name	EMBRIONIX
Vendor Part Number	EB22LC2B-SN
Vendor Revision	102
Wohler Part Number	790047

Note: SFP Information, as shown in lower half of Figure 4-33, can be used to retrieve the 2110 or 2022 SFP Module network configurations. This is useful if the customer forgets the IP address assigned to these SFP modules.

Licenses

This tab displays the license number for each of the modules or features in the /VAM1-SUM16-G. It is shown in Figure 4-34. You will use this tab to enter any new license numbers that you purchase. Contact Wohler Sales to obtain new license numbers. If you need help, Wohler Technical Service will be happy to assist you in installing these numbers.

Figure 4-34: Licenses Tab

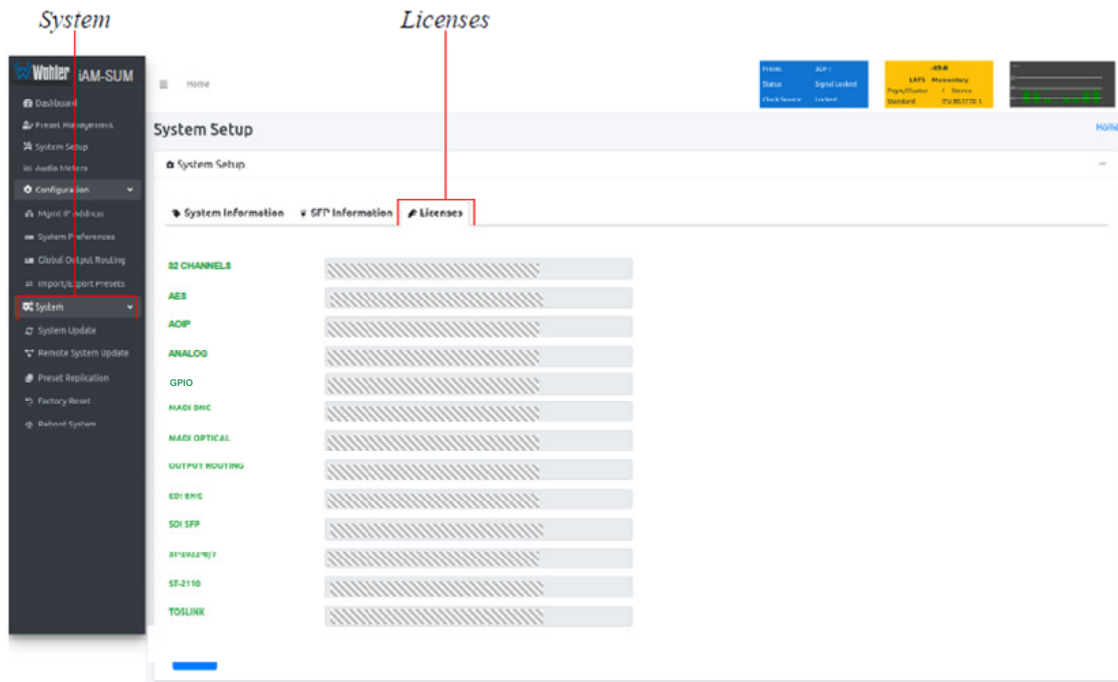

The example above shows an /VAM1-SUM16-G with license keys for inputs and license keys for SFP modules installed.


To enter the license key provided to you by Wohler Customer Service, use the following steps:

1. Click the field to the right of the input or module desired.
2. Enter the license key in the box.
3. Repeat Steps 1 and 2 for any other license keys that you want to enter.
4. Click the **Refresh** button to save the information. Each new license will be immediately available for use.

Factory Reset

The **Factory Reset** function should be used with caution. It deletes all of the settings you have programmed into the system. It returns the system to the way it was when received new from the factory. After using this function, you will need to reprogram everything from the start.

Figure 4–35: Factory Reset

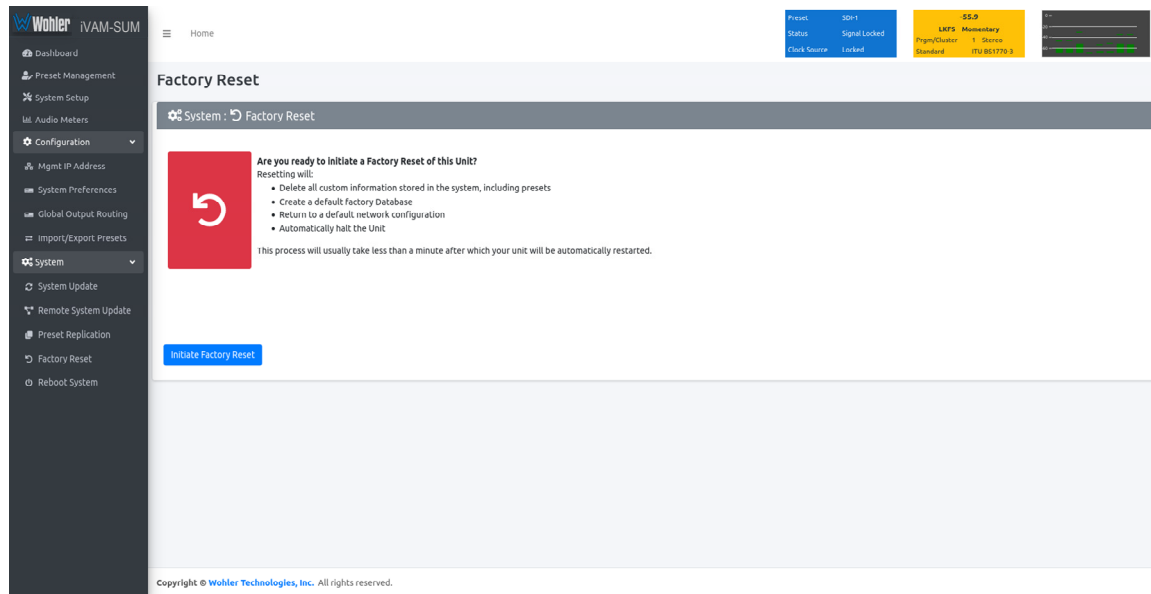

If you have any doubt as to whether you should perform a Factory Reset, **do not** click the **Initiate Factory Reset** button. Contact Wohler Technical Service for advice.


Note: **Factory Reset** will also reset your IP address to the default one. After a Factory Reset, the IP Settings will need to be updated. The default IP address for the unit is determined based upon the Mac address. It is 169.254.1.xx where xx is the last octet of the management Mac address. For example, if the Mac address is b4:ed:54:d0:04:28 then the IP address would be 169.254.1.40 (40 is the decimal equivalent for the last octet of Mac address 28.)

Reboot System

The **Reboot System** page allows you to reboot an /VAM1-SUM16-G remotely. The **Reboot System** page is shown in Figure 4-36. This function is normally only used upon request from Wohler Technical Service to troubleshoot or correct an issue.

The **Reboot System** function should be used with a bit of caution. It puts the /VAM1-SUM16-G out of service for several minutes while it is rebooting, and this may unexpectedly interfere with the use of the product by the remote operator.

Figure 4-36: Reboot System

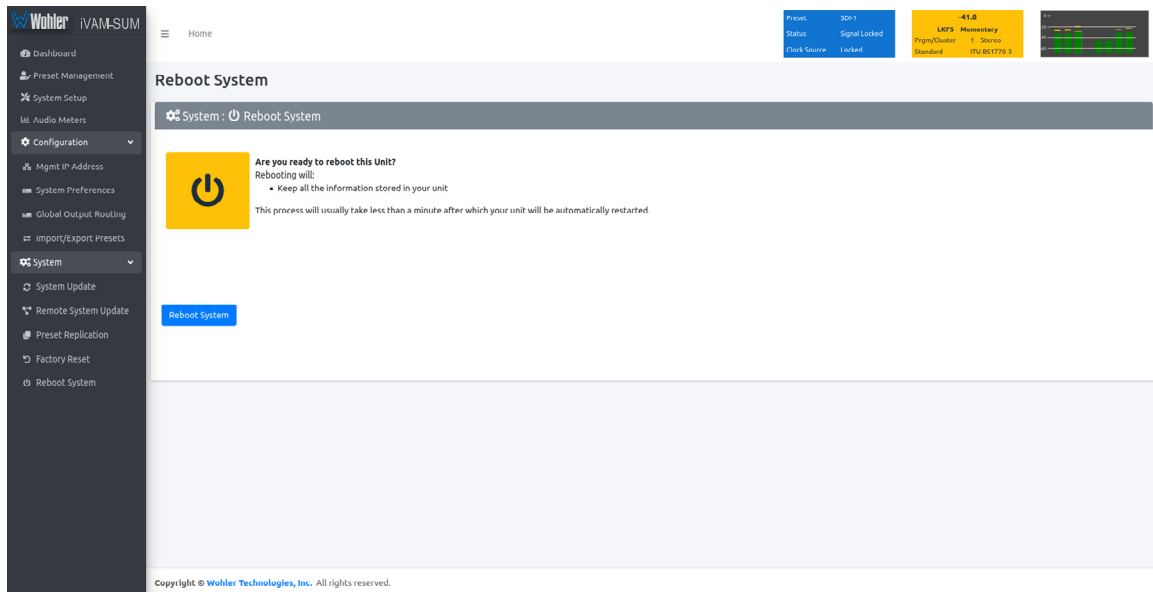

If you have any doubt as to whether you should reboot the remote /VAM1-SUM16-G, **do not** click the **Reboot System** button. Contact Wohler Technical Service for advice.

APPENDIX A: Software Upgrades

Introduction

This chapter describes how to download a software update file to your computer, transfer it to a USB flash drive and install the updated into an iVAM1-SUM16-G.

Download the Software

The iVAM1-SUM16-G software update can be found at <http://www.wohler.com>, under Product Downloads on the Products > iVAM1-SUM16-G page, in Support > Downloads > Drivers & Software, or contact Wohler Customer Support for more information.

Unzip the downloaded update files to reveal two files. One will have a suffix of **.wx** and the other will have a suffix of **.md5sum**. Both files are needed for the upgrade.

Update Methods

There are several software update methods. Select one of them, depending upon your needs:


1. Local update from the front panel of the iVAM1-SUM16-G: This straightforward method does not require the use of the Web GUI. A flash drive containing the update is plugged into the front panel USB socket and the update is then accomplished using the self-contained menu system. If this method seems most suitable, then refer to the [Local Update from the Front Panel](#) section of this chapter.
2. Remote update using the Web GUI with a flash drive connected to the iVAM1-SUM16-G: It may be more convenient to update the product using a flash drive plugged into its front panel USB socket, but controlled remotely via the Web GUI. To update the product this way, refer to the [Updating via the Web GUI](#) section of this chapter.
3. Remote update without a flash drive: This method allows you to update a networked iVAM1-SUM16-G remotely without plugging a flash drive into its front panel USB socket. To update the product this way, refer to the [Updating an iVAM1-SUM16-G Remotely](#) section of this chapter.
4. Update multiple units remotely at once: This method allows you to update multiple networked iVAM1-SUM16-G units at once, without plugging flash drives into their front panel USB sockets. To update products this way, refer to the [Updating Multiple iVAM1-SUM16-G Units Remotely](#) section of this chapter.

Local Update from the Front Panel

Use the following steps to update the iVAM1-SUM16-G software:


1. Copy the unzipped Wohler Update Package file(s) from your computer to the root directory (not inside of a folder) of a USB flash drive. It must be FAT32 file type, and does not need to be empty. Refer to the [Download the Software](#) section of this chapter for the specifics of download and file transfer to the USB flash drive.
2. Insert the USB flash drive with iVAM1-SUM16-G update package(s) into the front panel USB jack.
3. From the **Menu** screen, touch **System Options**. The screen shown in Figure A-1 will appear.

Figure A-1 - System Options Screen

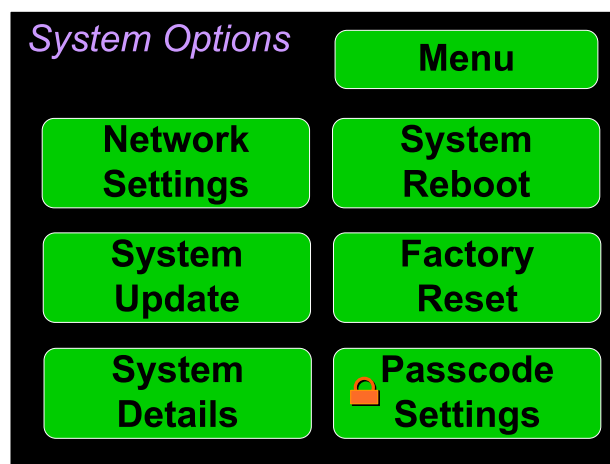


4. In the **System Options** menu, touch **System Update**. The **Software Upgrade** screen will appear, as shown in Figure A-2.

Figure A-2 - Software Upgrade Screen

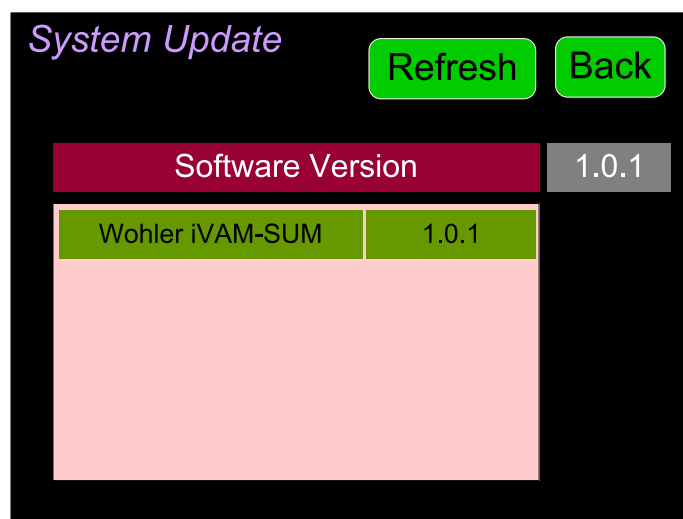


5. The new software version that is in the flash drive will be shown in the **Software Version** screen. To cancel the upgrade at this point for any reason, touch **Back**. To proceed, touch the software version entry in the **Software Version** screen. A screen will appear, as shown in Figure A-3.

Figure A-3 - Upgrade Verify

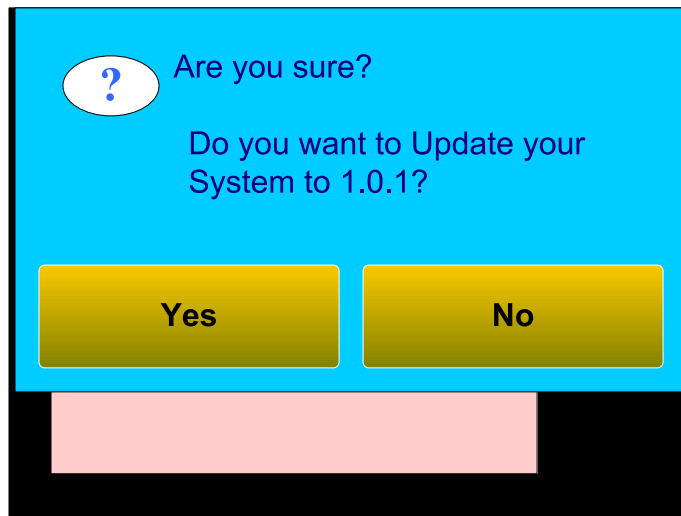

6. To proceed, touch **Yes**. To back out, touch **No**. After you touch **Yes**, the screens will change, as shown in Figure A-4. The left screen will display "Software Upgrade in Progress" until the upgrade is complete.

Figure A-4 - Upgrading System

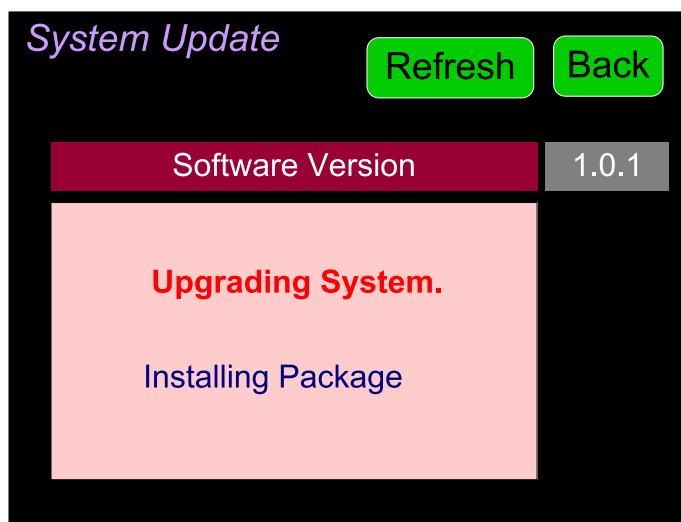

After the software update starts, the text on the left screen will change periodically to indicate the progression of the upgrade. The upgrade will take 5 minutes or more, after which the /VAM1-SUM16-G will restart. After the system has completed its restart cycle and is once again operational, you may then remove the flash drive.

Important:


Do not interrupt or remove power to the iVAM-SUM16-G, or remove the USB drive during the installation process. Doing so could crash the iVAM-SUM16-G software.

Updating via the Web GUI using a Flash Drive

Use the following steps to update the iVAM1-SUM16-G software:


1. Copy the unzipped Wohler Update Package file(s) from your computer to the root directory (not inside of a folder) of a USB flash drive. It must be FAT32 file type, and does not need to be empty. Refer to the [Download the Software](#) section of this chapter for the specifics of download and file transfer to the USB flash drive.
2. Connect to the iVAM1-SUM16-G with the Wohler Web GUI. Navigate to the **System | System Update** menu, as shown in Figure A-5.

Figure A-5 – System Update Menu

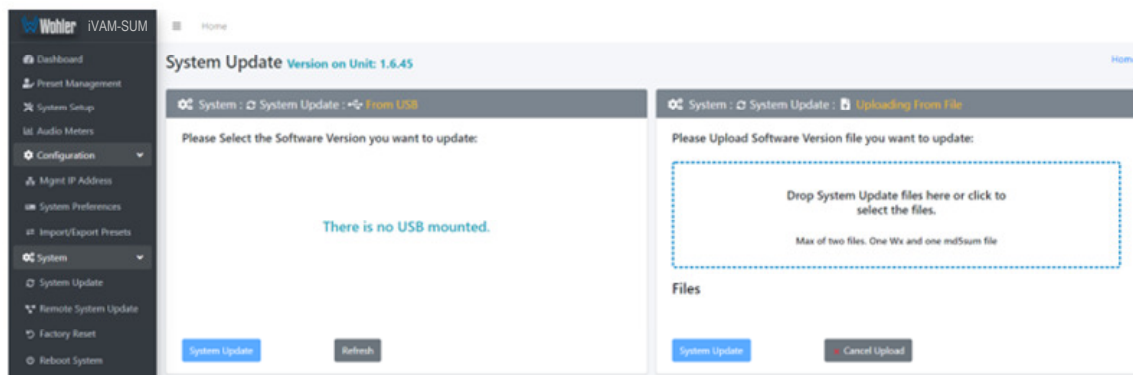


3. Click on the **Refresh** button.
4. Available software update(s) are shown as in Figure A-6. Click the one you want, followed by clicking the **System Update** button.

Figure A-6 – Available Software Updates

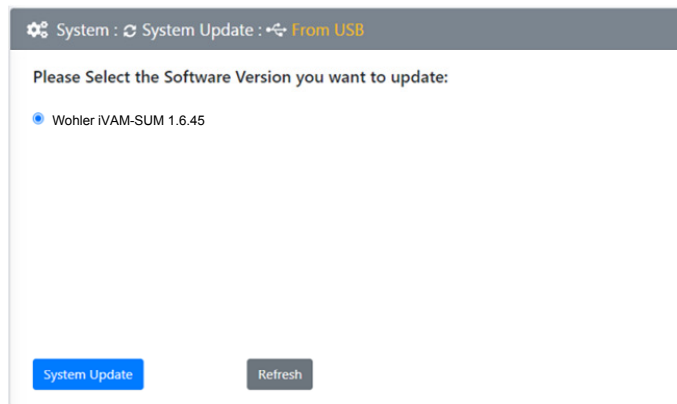


5. After clicking the System Update button, a verification screen displays as shown in Figure A-7. If you agree that the correct update version has been selected, click the **Yes** button.

Figure A-7 – System Update Verification

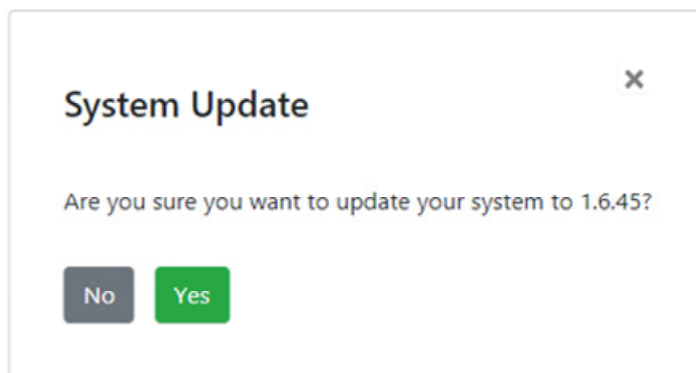

6. Next, the update begins, showing the screen in Figure A-8. The circle in the center of the screen, along with status messages below it, will indicate the progress of the update.

Figure A-8 – Software Upgrade in Progress

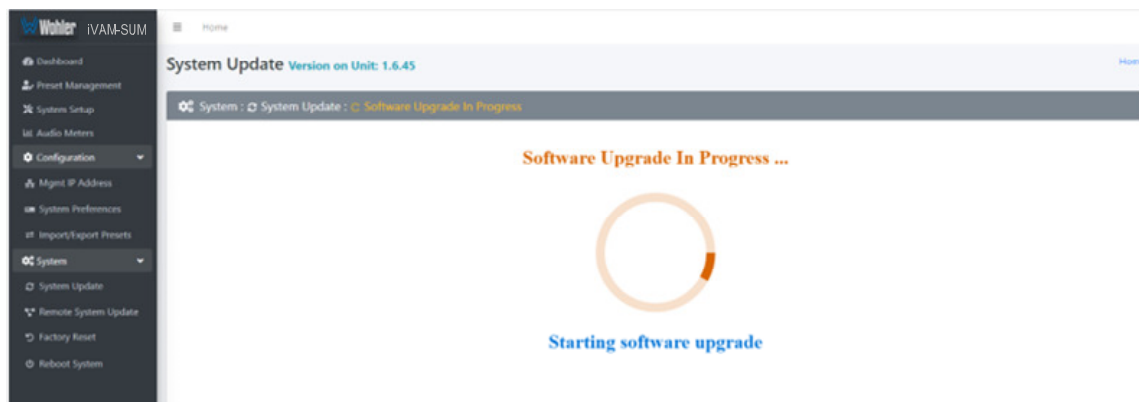


7. At this point, wait for the update to complete. It may take several minutes, but **it is critical not to disturb the iVAM1-SUM16-G or the Web GUI** until the update process is complete. When it is complete, the iVAM1-SUM16-G will restart.

Updating an iVAM1-SUM16-G Remotely

Use the following steps to update the iVAM1-SUM16-G software:

1. The Software Update files you downloaded earlier must be in the same computer that is running the Web GUI. Connect to the iVAM1-SUM16-G with the Wohler Web GUI. Navigate to the **System | System Update** menu. Click within the large blue dotted line rectangle at the right of the screen. A file selection window will open, as shown in Figure A-9.

Figure A-9 – System Update Menu

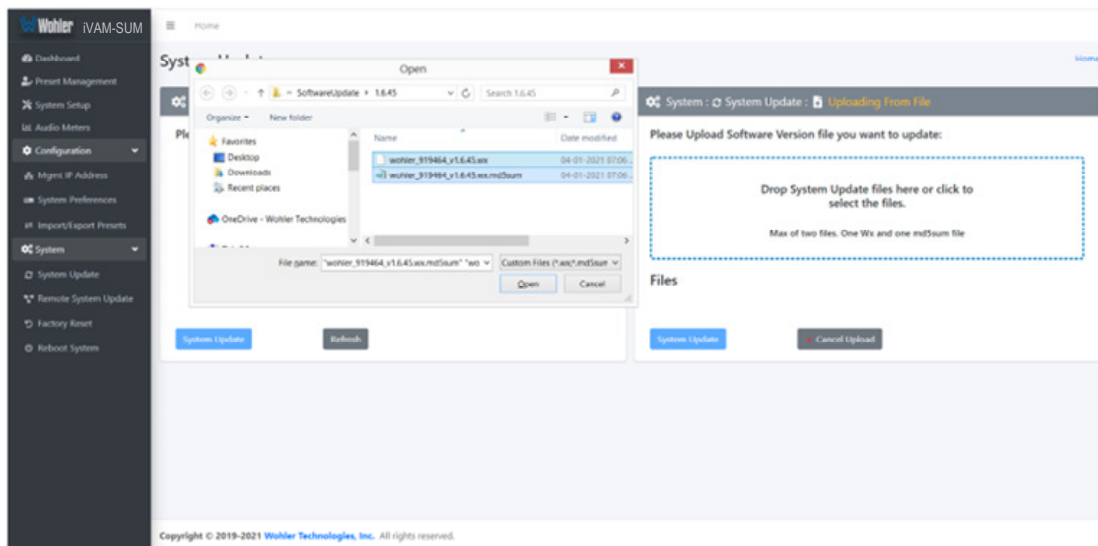

2. Click the two update files. One will have a suffix of **.wx** and the other will have a suffix of **.md5sum**. If you make a mistake and click the wrong file(s), click the **Cancel Upload** button and try again. When the files have uploaded, the **System Update** button will be enabled. Click it. If there is a problem with the files at this point one of the screens shown in Figures A-10 or A-11 will appear. In that case follow the directions on the screen to retry. If there are no problems, the update will proceed and the screen shown in Figure A-8 will appear.

Figure A-10 – Invalid System File Version


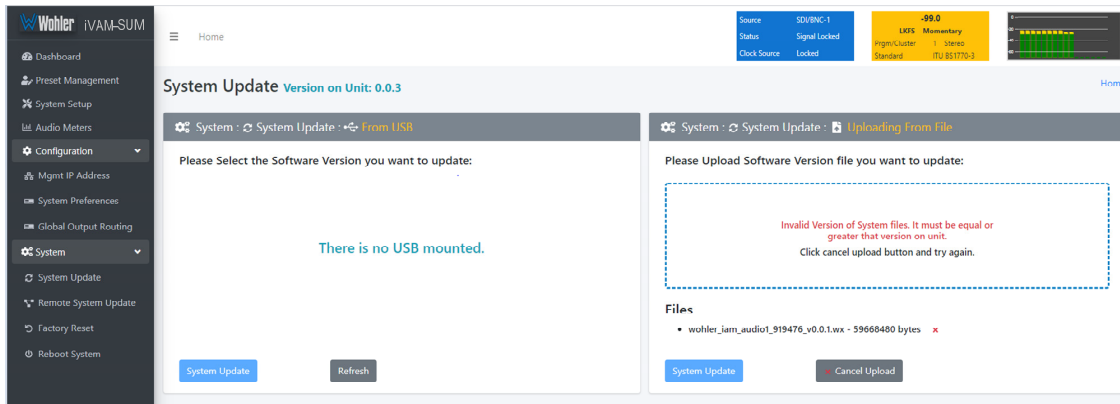


Figure A-11 – Invalid Checksum

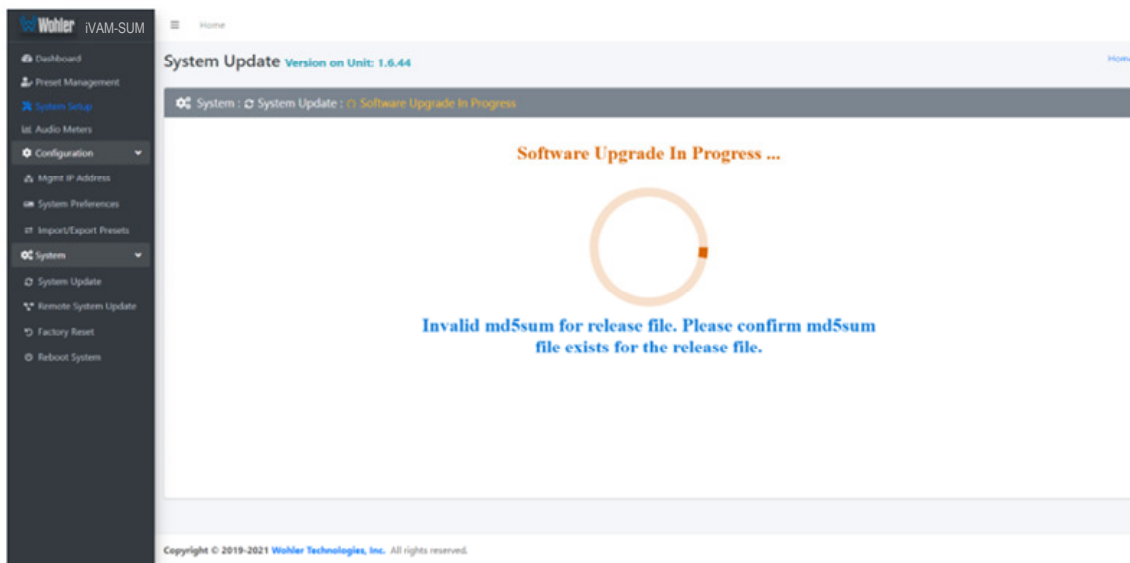


3. At this point, wait for the update to complete. It may take several minutes, but **it is critical not to disturb the iVAM1-SUM16-G or the Web GUI** until the update process is complete. When it is complete, the iVAM1-SUM16-G will restart.

Updating Multiple Units Remotely

Use the following steps to update one or more iVAM1-SUM16-G units remotely by transferring the software from a previously updated iVAM1-SUM16-G:

1. If any of the iVAM1-SUM16-G units that you intend to update remotely may be in use, contact the people using them and let them know what you will be doing. The iVAM1-SUM16-G units being updated will be temporarily out of service.
2. Use the Wohler Web GUI to connect to an iVAM1-SUM16-G already containing the latest update. This will be referred to as the **Master Unit**. Navigate to the **System | System Update | Remote System Update** menu. The screen shown in Figure A-12 will appear and the Web GUI will scan the network for any active iVAM1-SUM16-G units.

Figure A-12 – Scanning for iVAM1-SUM16-G Units

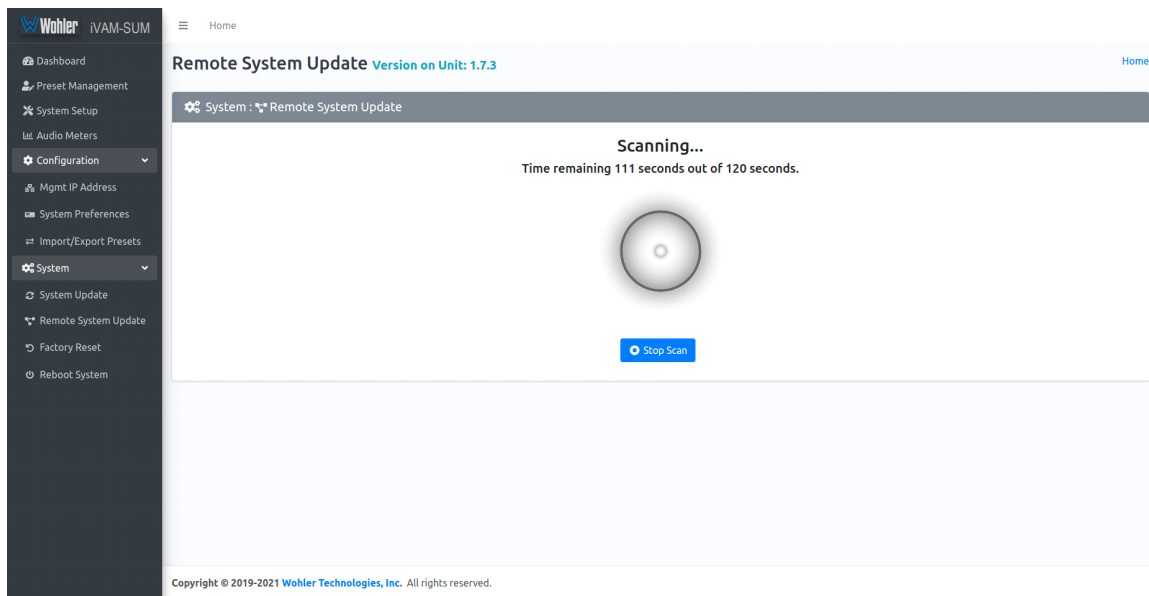


Note: The scanning process will take 2 minutes. Progress is shown on the screen. If for some reason you would like to stop the scan prematurely, click the **Stop Scan** button.

Important: **Do not** run the scanning or updating process from **more than one Master Unit** at a time, to avoid problems. Although you may be updating multiple units at the same time, never attempt this process from more than one **Master Unit**.


3. When the scanning is complete, a list of found iVAM1-SUM16-G units will be shown as in Figure A-13. Click either **Select All** or click only the **Target** units that you want to update.

Figure A-13 – List of Found IVAM1-SUM16-G Units

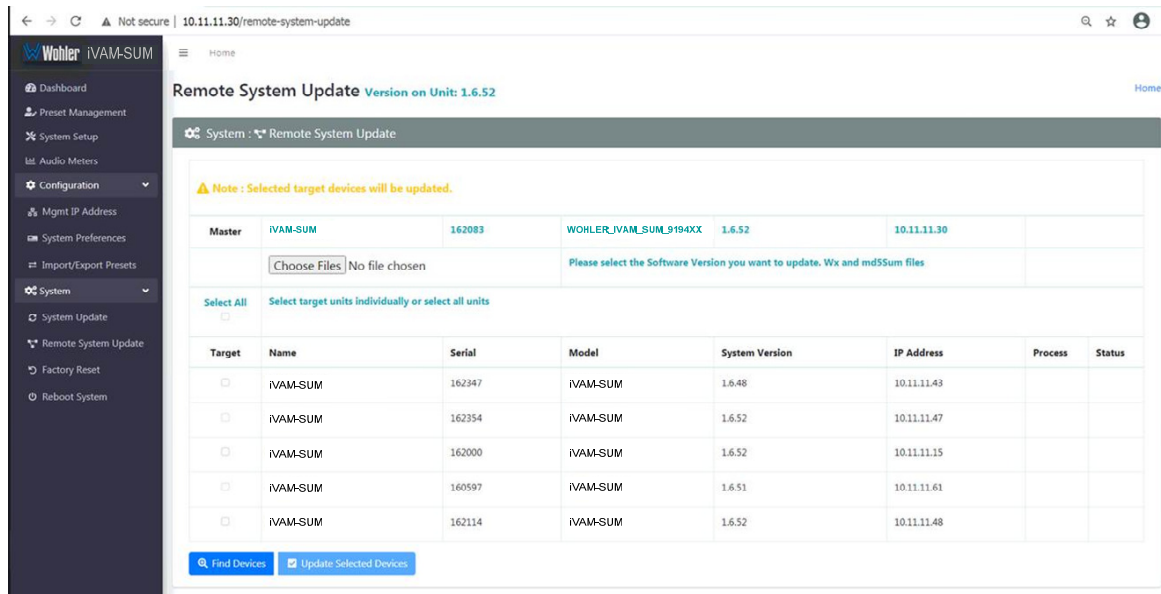

- Then click **Update Selected Devices**. The window shown in Figure A-14 will appear.

Figure A-14 – Apply System Package

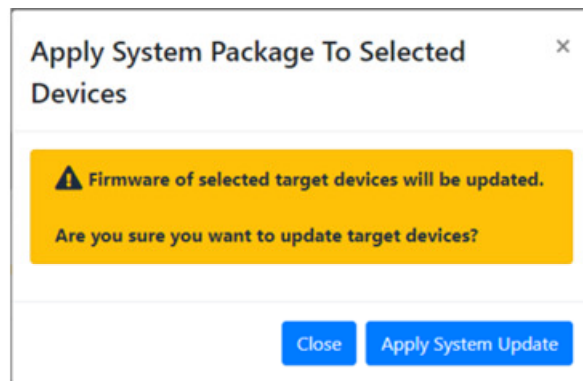

- Click **Apply System Update**. The screen shown in Figure A-15 will appear. This screen contains a table showing the update progress of each of the IVAM1-SUM16-G units being updated.

Figure A-15 – System Update Progress

Remote System Update Version on Unit: 1.1.14

System Remote System Update

Note: Selected target devices will be updated.

Master	Name	Serial	Model	System Version	IP Address	Process	Status
iVAM-SUM	162978	WOHLER_IAM_SUM_9194XX	1.1.14	192.168.0.223			
	Choose Files 2 files		Wohler iVAM-SUM version 1.1.14 will be applied		wohler_ivam_1_3_919476.v1.1.14.wx wohler_ivam_1_3_919476.v1.1.14.wx.md5sum		
Select All	Select target units individually or select all units						
	iVAM-SUM	162159	WOHLER_IAM_SUM_919476	1.1.13	192.168.0.188		

Find Devices Update Selected Devices

- At this point, wait for each update to complete. It may take several minutes, but **it is critical not to disturb any of the iVAM1-SUM16-G units or the Web GUI** until the update process is complete. When it is complete, each iVAM1-SUM16-G will restart.

APPENDIX B: Dante Network Setup

Introduction

Installing the *IVAM1-SUM16-G* into an existing and functioning Dante network is virtually plug and play. The *IVAM* rear panel AoIP jack supports 1Gb/s and 100Mb/s Ethernet devices in Dante Audio over IP network configurations.

The AoIP option on the *IVAM1-SUM16-G* supports Hitless and has 2 RJ-45 interfaces, a primary interface and a secondary interface.

Additionally, an SFP slot is provided to receive the AoIP signal using network fiber SFPs. These are 1G SFP slots. The SFP slot always acts as a primary interface.

On *IVAM1-SUM16-G*, the AoIP source can be selected through the Source Select option.


The *IVAM1-SUM16-G* is set up at the Wohler factory to be used as a slave rather than a master within the Dante network. Other devices or software, such as a **Dante Controller**, are expected to be responsible for most device configurations and all audio routing.

Please refer to the ***Dante Controller User Guide*** or other control device documentation for specific network and device setup information. The next section provides a guide to configuring the card and AOiP port.

What is in the *IVAM1-SUM16-G* for Dante?

The Dante AOIP option consists of an Audinate Brooklyn II card directly connected to the AOIP port. This port is dedicated to the card and should not be confused with the Wohler unit Management port. These two ports must be on two different subnets, one for the AOIP network and the other for access to the Wohler Web GUI for management of the Wohler unit itself. Either one can be configured to have static or DHCP addresses. The Wohler Web GUI indicates the presence of the Dante card and the AOIP license but does not provide access to the various configuration parameters internal to the card. The speed of the AOIP port is 1G default or 100Mbps.

*AoIP SFP
Module Cage*

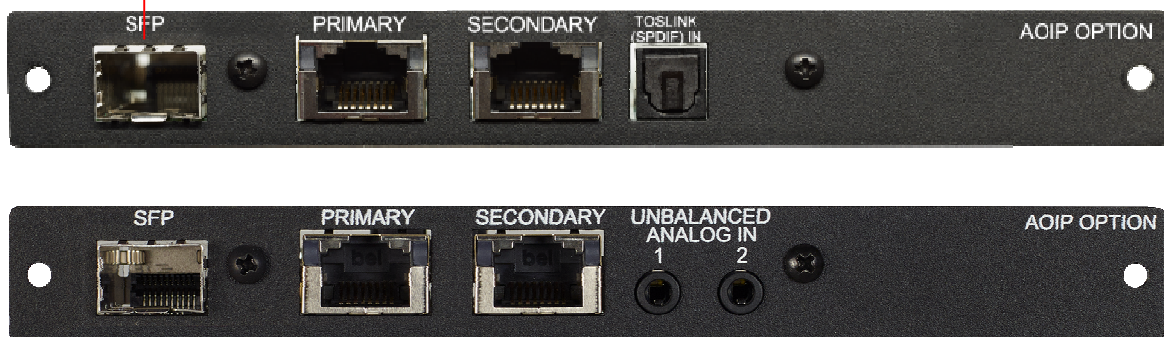

The Audinate® Brooklyn II card has a simple process to set its initial IP address. The initial factory setting for the card's AOIP port is DHCP. When connected to a DHCP based Dante network and the unit powered on, the Dante card sets the DHCP server provided address as its default address.


Therefore, if the Dante network has a DHCP server, the unit can be inserted into the network and can be configured further using the Audinate application, Dante Controller, running on a host on the same DHCP based subnet.

If the Dante network is static based or if DHCP fails, the card sets a static Link Local arbitrary address in the format 169.254.x.y, where x and y are each in the range 0 to 255. The mask is set to 255.255.0.0 to provide a ~65000 entry address space.

The Dante Controller host must also have a Link Local address to communicate with the card over the unit's AOIP port. Connect the AOIP port directly to a host (e.g. laptop) running the Dante Controller, where the host address is preconfigured to an arbitrary Link Local address (169.254.x.y, mask 255.255.0.0). The connection can be direct cable or through a switch. The Dante Controller **Device Info** tab shows the card's default static address, speed, etc. By double clicking its entry line, additional settable parameters on the card can be reconfigured to be compatible with the Dante network addressing and other parameters as necessary. When the unit is rebooted on the Dante network, the card will be seen by the Dante Controller used to manage the overall network.

If the Dante Controller **Device Info** tab detects the card but does not allow modification and full presentation of card internals, the **Card ID** will be shown in red, e.g. Wohler-xxxxxx where xxxxxx is the last 6 hex digits of the card MAC address as shown in B-1. This usually indicates that the IP address of the card is not in the same subnet as the Dante Controller host. By double clicking the ID, a **Device View** screen will appear as also shown in Figure B-1 with further details about the two incompatible addresses. Change the address of the host or move the unit to another host with an address compatible with the Dante card.

Figure B-1 – Dante Controller Device Info Tab

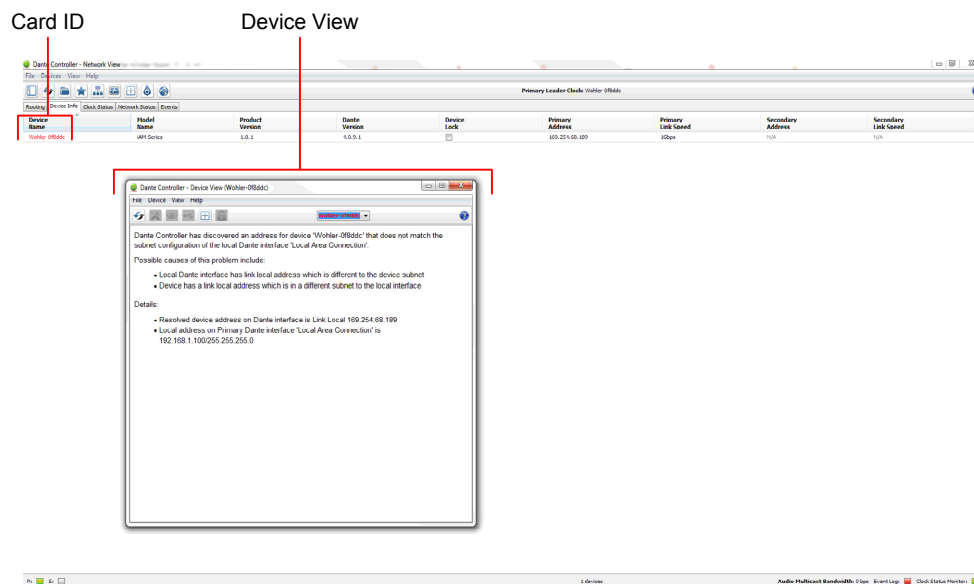

Up to 8 of the 64 AoIP receive channels can be monitored at once in the iVAM1-SUM16-G. The iVAM1-SUM16-G transmits up to 8 channels. 1 to 8 are the monitored channel in prefade mode. The remaining four are reserved for future use. Currently they are mapped to channels being monitored on meter 1 to 4 in post-fade mode. The eight iVAM1-SUM16-G monitored channels are transmitted to the Dante network.

The iVAM1-SUM16-G Dante™ AoIP is configured by the iVAM1-SUM16-G to receive up to 64 channels and transmit 8 channels of Dante AoIP at 48 kHz or 44.1 kHz audio sample rates. 48 kHz is the iAM default rate.


Sample rate selection is left up to the Dante™ Controller device or software. *All devices connected to each other through a Dante network must be set to the same sample rate.* Slight ticking may be heard in the iVAM1-SUM16-G monitor when monitoring different input types at different sample rates or if sources are asynchronous.

Dante™ Device Setup

The iAM1-SUM16-G default **Dante Device Name** is “Wohler- ...” followed by the last 6 digits of the Dante port MAC address, as shown in Figure B-2. This name can be changed by the Dante Controller to appear that way on the network, but that will not change the iVAM1-SUM16-G unit name appearing on GUI pages and iVAM1-SUM16-G **Remote Metering** or **Discovery** pages.

Figure B-2: iVAM1-SUM16-G Name

Dante
Device Name

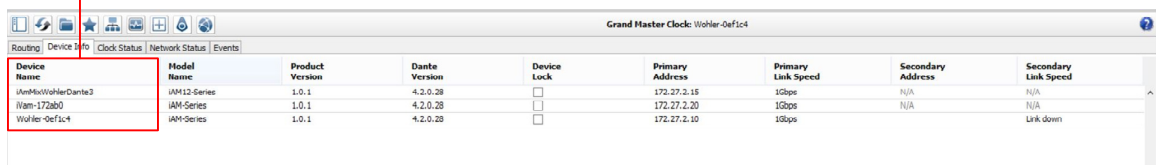


Device Name	Model Name	Product Version	Dante Version	Device Lock	Primary Address	Primary Link Speed	Secondary Address	Secondary Link Speed
iVAM1-SUM16-G Dante2	iVAM12-Series	1.0.1	4.2.0.28	☐	172.27.2.15	10Gbps	N/A	N/A
iVAM1-SUM16-G Dante3	iVAM1-Series	1.0.1	4.2.0.28	☐	172.27.2.20	10Gbps	N/A	N/A
Wohler-Def1c4	iVAM1-Series	1.0.1	4.2.0.28	☐	172.27.2.10	10Gbps		Link down

During initial setup, you may want to manually change the iAM unit **Name** in the [System Setup](#) page to match the reassigned **Dante Device Name** for consistency. Refer to Figure B-3.

Figure B-3: Rename iAM

*Change the iAM
AoIP Name*

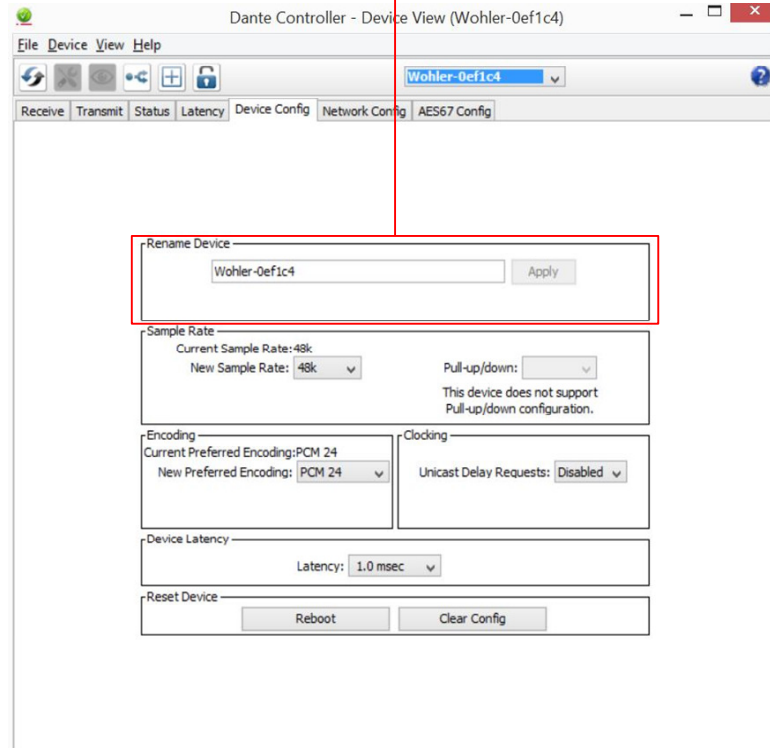

Other changes such as **Latency** settings can be made by the Dante Controller through the **Device View** menus. Some changes may require remote rebooting of the Brooklyn II card to take effect, temporarily interrupting audio and publishing the new information to the network.

Important:


Only 44.1 kHz and 48 kHz audio sample rates are currently supported by the iVAM-SUM16-G. The Brooklyn II card would accept a Dante Controller command to operate at other rates, without giving an indication it will not be implemented.

Dante Clock Selection

While the Brooklyn’s internal clock is highly accurate, the /VAM1-SUM16-G does not have provisions for external sync clocks, such as those that are GPS or media reference (video genlock or audio word clock) based. So it is generally not the best candidate to be the PTP Master Clock (commonly called the “grandfather clock”) for the network. It can be set as the preferred master if no better clock source exists. Refer to Figure B-4.

The iAM Brooklyn Dante card will serve as a temporary fallback clock source if preferred masters are interrupted. It functions as an accurate slave clock synchronized to the master clock on the network when not operating as the master.

Figure B-4: Clock Selection

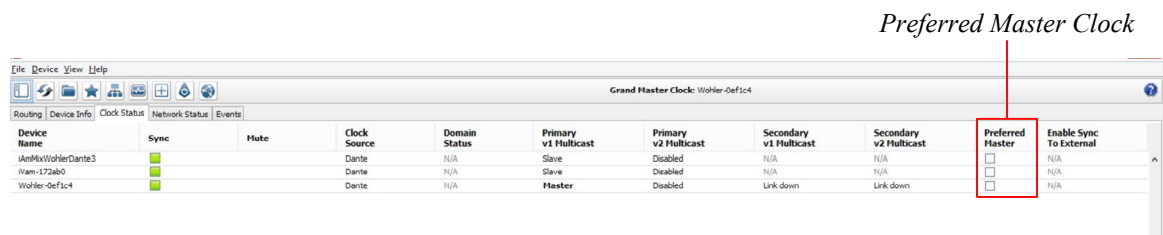

Channel Names

The factory default channel names are set to "01 to 64" for 64 received channels and "Monitor Ch 1" to "Monitor Ch 8" for first 8 transmitted channels. The next 4 transmitted channels are set to "Mix Ch 1" to "Mix Ch 4".

Note: To change channel names please refer Dante controller user manual.

AES67


The /VAM1-SUM16-G Brooklyn II can be configured for AES67 operation. Refer to Figure B-5. AES67 operation with Dante is limited to eight or less receive and transmit channels at 48 kHz sample rates.

24 bit linear (L24) encoding and 1 msec packet time are fixed default transmit parameters.

16 bit (L16) or 24 bit (L24) encoding and 125/250/333/100 µsec packet times can be received.

The **Device View - AES67 Config** menu enables/disables AES67.

Figure B-5: AES67 Enable/Disable

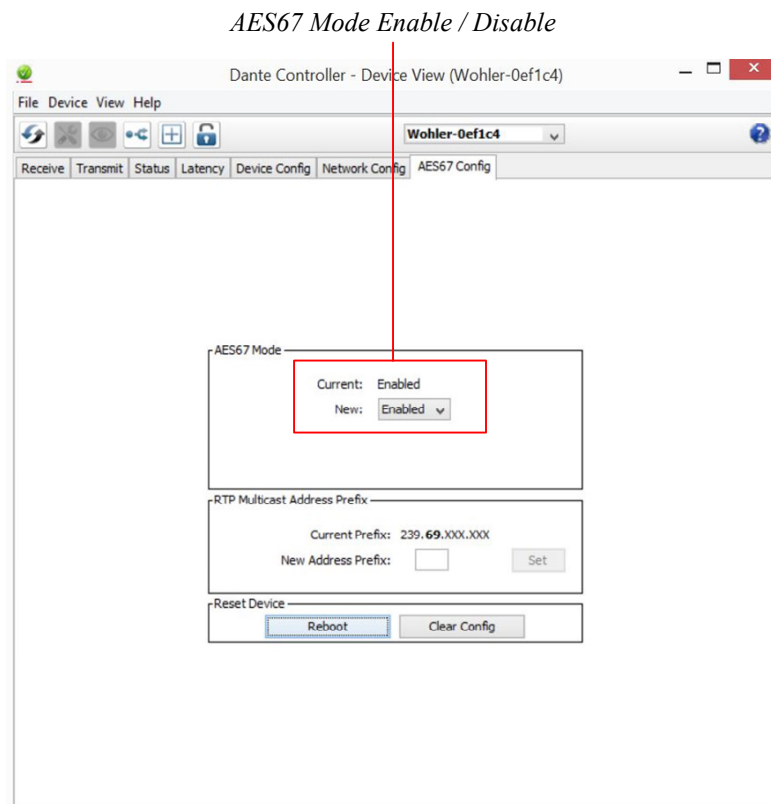

Further, Dante AES67 discovery and operational protocol requires manual assignments for static multicast transmit and receive IP addresses per Dante protocols for discovery and IGMP network operation. Destination addresses in range 239.nnn.0.0 – 239.nnn.255.255, port 5004 o nnn can be configured using the Dante Controller. The default is 69. The destination and receive address range must match. Provisions for this are in **Dante Controller Device View - Network Config**. Refer to Figure B-6.

Figure B-6: Device View - Network Config

Dante Controller - Device View (Wohler-0ef1c4)

File Device View Help

Wohler-0ef1c4

Receive Transmit Status Latency Device Config Network Config AES67 Config

Switch Configuration

Current: WohlerAoip

New: WohlerAoip

Addresses

Primary

Obtain an IP Address Automatically (default)

Manually configure an IP Address

IP Address: . . .

Netmask: . . .

DNS Server: . . .

Gateway: . . .

Secondary

Obtain an IP Address Automatically (default)

Manually configure an IP Address

IP Address: . . .

Netmask: . . .

DNS Server: . . .

Gateway: . . .

Apply Revert

Reset Device

Reboot Clear Config

The channels to be multicast are selected in the File menu-**Create Multicast Flows** window shown in Figure B-7.

Figure B-7: Multicast

Create Multicast Flow

Wohler-0ef1c4 supports up to 64 channels per flow.

RTP flows for AES67 have a maximum of 8 channels per flow.

Select one or more transmit channels to be placed in multicast flows.

Flow Config (Optional)

☒ Dante ☐ AES67

Maximum number of channels in the flow: 16

Channel Name	Add to New Flow
Monitor Ch 1	☐
Monitor Ch 2	☐
Monitor Ch 3	☐
Monitor Ch 4	☐
Monitor Ch 5	☐
Monitor Ch 6	☐
Monitor Ch 7	☐
Monitor Ch 8	☐
Monitor Ch 9	☐
Monitor Ch 10	☐
Monitor Ch 11	☐
Monitor Ch 12	☐
Monitor Ch 13	☐
Monitor Ch 14	☐
Monitor Ch 15	☐
Monitor Ch 16	☐
Mix Ch 1	☐

Create Cancel

Device Lock

Audinate recently added a feature whereby a remote controller can send a command to lock Dante network device configurations. The /VAM1-SUM16-G does not implement the Device Lock command at this time.

Dante Firmware Upgrades

Wohler /VAM1-SUM16-G monitors ship with current Brooklyn II firmware as of the option installation date. The version information is found in the **Dante Controller Device View-Status** page. iAM software/firmware is tested with the latest Dante code release. Therefore it is strongly recommended that /VAM1-SUM16-G and Dante software/ firmware be updated at the same time to ensure compatibility and support of the latest features.

Use the Audinate **Dante Firmware Update Manager** Windows or OS X application to update the Dante firmware over the Dante network. Follow the application's installation and usage guide plus any applicable technical notes available.

Additional Information

The following links are provided for those who need more information about the Dante controller or the Dante Firmware update manager.

<https://my.audinate.com/products/firmware-update-manager>

<https://www.audinate.com/products/software/dante-controller>

<https://dev.audinate.com/GA/dante-controller/userguide/pdf/latest>

Dante™ Legal Disclosures

TRADEMARK ATTRIBUTION: Products covered in the manual include licence from Audinate Pty Ltd under US Patents 7747725, 8005939, 7978696, 8171152, European Patent 2255541, Chinese Patent ZL200780026677.0 and other patents pending or issued, see www.audinate.com/patents or such other legend as Audinate may stipulate from time to time to the Manufactured Product and any packaging and marketing materials therefor.

APPENDIX D: Ravenna (ZMAN) Setup

Introduction

Installing the iAM or iVAM product into an existing and functioning Ravenna network using the Merging ZMAN Card is virtually plug and play. The iAM or iVAM rear panel AoIP jack supports 1Gb/s and 100Mb/s Ethernet devices in Ravenna Audio over IP network configurations.

iAM or iVAM channel source selections are made by choosing **Input Type 'AoIP'** in the [Configuration-Configure Presets](#) page regardless of which AoIP option is installed.

Note: In addition to the iAM or iVAM configuration, the Merging ZMAN Card needs to be configured using its own configuration tool. The menus in this configuration tool are shown in this Appendix.

What is in the iAM or iVAM for Ravenna?

The AES67 (SMPTE ST-2110-30) enabled Merging ZMAN Card supports the following features:

RAVENNA-Compatible Talker/Listener

- 1) RFC 3551 – RTP Profile for Audio and Video Conferences
 - a) L16 16-bit linear format defined in RFC 3551 clause 4.5.11
 - b) L24 24-bit linear format defined in RFC 3190 clause 4
 - c) AM824 24-bit Audio as defined in IEC61883-6
 - d) Multicast and unicast session support
 - e) 48 kHz and 96 kHz audio sampling rates
 - f) 1 to 8 audio channels per stream
 - g) Up to 64 streams
- 2) Media clock support
 - a) 48 kHz and 96 kHz
- 3) Hitless Stream Redundancy
- 4) IGMP v3 support
- 5) Session Announcement Protocol (SAP) support

AVB Ethernet Features

AVB uses the concept of streams and channels. A stream is a connection from one talker to one or more listeners. One stream can be made up of 1-60 audio channels. The Ravenna option supports the following AVB features:

- 1) AVB 1722 AVTP with multiple subtypes:
 - a) IEC 61883-6 MBLA
 - b) AM824, 24-bit Audio Encapsulation

- c) Support up to 64 streams
- d) Up to 8 channels per stream
- e) 512+512 Channels of audio
- f) 48kHz and 96kHz sampling rates
- 2) IEEE 802.1Q/SRP
- 3) IEEE 1722.1/AVDECC control
- 4) IEEE 802.1AS/gPTP
- 5) Compatible with Apple OS X devices, such as MacBooks and MacMini computers
- 6) Media clock per the AVnu specification
- 7) Hitless stream redundancy

Configuring the AOIP Merging Option Card

This appendix provides basic information about configuring the Merging ZMAN card by invoking the card's internal configuration application. The Merging card can be configured through a connection to the Ethernet AOIP Port using a browser on the Ravenna network and by using the Merging Aneman Windows application. Aneman is available for free download at:

<https://www.merging.com/support/downloads#aneman>

The iAM or iVAM can be configured using its Front Panel controls or its web interface through its Management port. Details specific to the iAM or iVAM can be found in Chapters 2 and 4 of this manual.

For a Quick Start, set the Source Select menu item on the Front Panel to AOIP to configure iAM or iVAM to receive/source a Ravenna Stream over its AOIP port. The Source Select Menu control also allows selection of a range of channels in groups of 8 channels 1-8 ... 57-64. More details including definition of Presets and individual channel parameters are available by reference to other chapters of this manual.

The Merging Ravenna card runs specific firmware from Merging and augmented by Wohler for use within the iAM or iVAM. The card will not function correctly if the user downloads and installs firmware from any source besides Wohler. The Wohler augmentation includes the ability to support 64 channels.

The Merging card is pre-configured to DHCP mode to obtain its IP address automatically from the Ravenna network. The Ravenna network should be a separate address space from the iAM or iVAM Management port. For example, the iAM or iVAM might be connected to a 10.11.11 subnet and the Ravenna network devices connected together on a 10.15.15 subnet. Aneman and a suitable browser must be resident on a host workstation on the same Ravenna subnet to access the Merging card. For this Appendix, the Ravenna network address will be referred to as <Ravenna subnet>. The Merging card address will then be <Ravenna subnet>.x where x is the specific address of the card on the subnet.

Power the iAM or iVAM and verify the Ethernet connector LEDs are lit and/or blinking. It may take a few minutes for the card to be fully recognized on the Ravenna network after powering the iAM or iVAM.

For Aneman access, the card parameters including its IP address should appear in a

panel at the bottom of the screen. In Aneman, make sure Devices under Menu item View is enabled. Do not proceed until the card shows on Aneman. Right click on that line and select Web Services: Advanced (or Ravenna) to bring up the Merging Ravenna configuration page. Also, the ICON of the card will appear in the main part of the Aneman screen. Double Clicking on the ICON also will load the Configuration screen.

For browser access, the URL is <Ravenna subnet>.x/advanced/index.html. This brings up the Merging Ravenna configuration page. Each tab is explained in the following sections.

Getting Started | General Settings

This tab is shown in the following figure.

Figure D-1: Getting Started | General Settings


The elements of this tab are as follows:

1. **Device Name:** Enter a useful Device Name for the card, which will show up on other Ravenna devices on the subnet.
2. **Sample Rate:** (44100-48000- 88200-96000-176400-192000-352800-384000)
3. **Frame size (@1Fs):** current frame size (64 - AES67/48 - 32 -16 - 12 -6).
4. **Safety Playout Delay (@1Fs):** The value is described at 1Fs (44.1-48 kHz) in samples. For example, if the value is 10, the additional playout delay will be 20 at 2Fs (88.2-96 kHz), 40 at 4Fs (176.4-192 kHz)
5. **SSM Source-Specific Multicast:** If needed, configure the network switch for IGMP V3.
6. **Network Interface:** Note the address of the card and its type (Zeroconf, DHCP, Static). (If necessary, the address can be changed to another type such as a Static address which must include a Network Mask and Gateway.)

Getting Started | Out-Of-Band NMOS for ST-2110-30 & Ravenna

The Out-Of-Band Control for the Ravenna module is available using the SFP port. Out-Of-Band NMOS is more relevant in 2110 networks, and often Ravenna cards are used to monitor 2110-30 (the Audio essence of 2110). Customers can use any off-the-shelf network SFP's to connect into the ports shown in the following figure.

Figure D-2: AOIP Ports

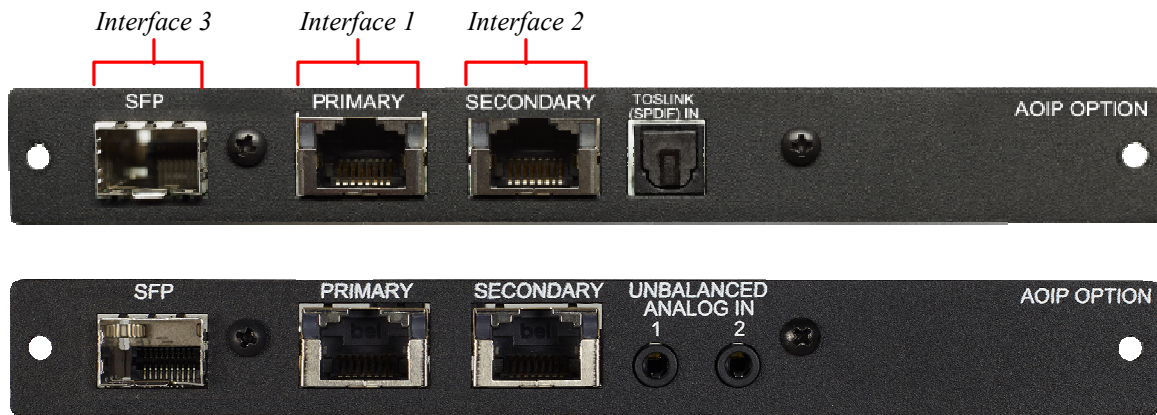

The SFP interface on the Ravenna module can be discovered using ANEMAN as with the Primary and Secondary port.

To use the SFP Interface, make sure the Multi-Interface mode checkbox is enabled. Refer to Figure D-3. The IP address configuration for SFP can be made using the "Interface 3" section as shown in Figure D-3. Note that the IP address settings shown in this Figure are for reference only; you should configure each interface per your network.

On the Ravenna web interface, the following nomenclature is used. "Interface 1" for PRIMARY RJ-45 Port, "Interface 2" for SECONDARY RJ-45 Port, "Interface 3" for SFP port. Refer to Figure D-2. Once the network settings for SFP port are configured, the web interface for Ravenna module can be accessed from any of the three interfaces. The default port numbers used to access the web interface are as follows:

- **"Interface 1" (PRIMARY):** Uses port 80. The web page for Ravenna can be accessed using `http://<zman IP>`
- **"Interface 2" (SECONDARY):** Uses port 81. The web page for Ravenna can be accessed using `http://<zman IP>:81`
- **"Interface 3" (SFP):** Uses port 82. The web page for Ravenna can be accessed using `http://<zman IP>:82`

Figure D-3: SFP Interface Setup

Multi-Interface Mode Checkbox

Multi-Interface mode ☒
Note: must be checked for ST2022-7 support.

Interface 1

Link Up
Name Primary

Type Zeroconf
Address 169.254.27.148
Netmask 255.255.0.0
Gateway 0.0.0.0 ☐ Use as Primary Gateway
DNS

Apply

Interface 2

Link Up
Name Secondary

Type Static
Address 192.168.1.11
Netmask 255.255.0.0
Gateway 0.0.0.0 ☐ Use as Primary Gateway
DNS 8.8.8.8

Apply

Interface 3

Link Up
Name Control
Mode Control only

Type DHCP
Address 10.11.11.14
Netmask 255.255.0.0
Gateway 10.11.1.1 ☒ Use as Primary Gateway
DNS 10.10.10.20

Apply

The Ravenna "Interface 1" and "Interface 2" act as Media as well as control ports. In-band NMOS will still continue to work for customers who have control interface on the same network as the media. SFP or "Interface 3" is a Control Only port and should not be connected to Media Network.

The NMOS settings on the Ravenna module can be enabled using the NMOS tab of the Ravenna Web Interface. The registration server can be configured using a Static address, an mDNS, or a search domain. The settings shown in the following Figure are for reference only.


Figure D-4: NMOS Settings

General settings	PTP	ASIO Clock	Session sources	Session sinks	Ins/Outs	I/O Router	Statistics	NMOS	System
NMOS									
General Settings									
Enable	☒								
Port	1936								
Flush streamer address on disable	☐								
Set UUID from Names (needs a device restart when changing node name)	☐								
Configure Registration Server									
Mode	Disable NMOS to change settings Static address								
Address	10.11.11.241:80								
Search domain	wohler.hq								
IS-04 version	v1.3								
Registration Server									
Server Name									
Host	10.11.11.241								
Address	10.11.11.241								
Port	80								
Registered	false								
Supported versions									
IS-04:	v1.2,v1.3								
IS-05:	v1.0,v1.1								

Getting Started | PTP

This tab is shown in the following figure. This configuration page refers to how your Ravenna network is synchronized to clocks.

Figure D-5: Getting Started | PTP

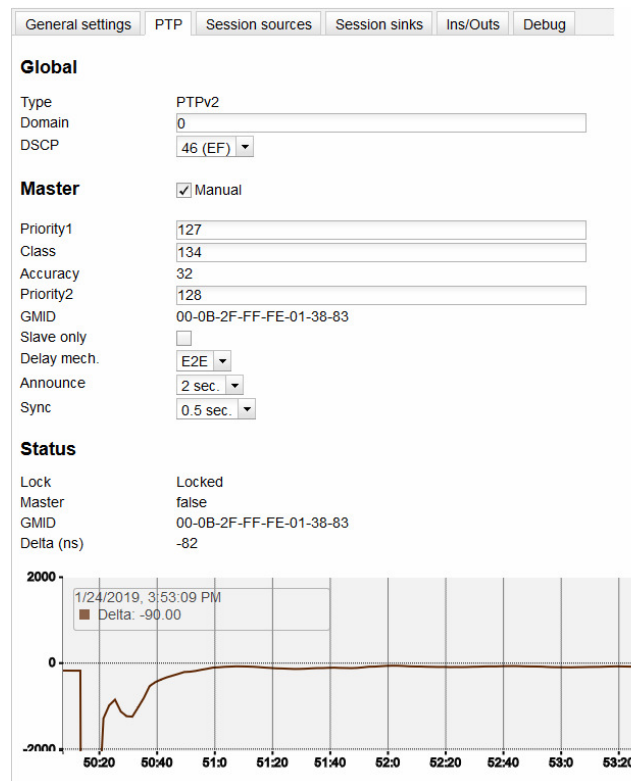

The elements of this tab are as follows:

1. **Global Settings:** The default value for PTP
 - a. **Domain:** For the Merging Ravenna card this value is 0.
 - b. **DSCP:** 46 for PTP AES67 or 48 for PTP Ravenna.
2. **Master:** To modify the PTP setting, you must first check the "Manual" checkbox.
 - a. **Priority:** 1 is the main priority value.
 - b. **Class:** This is the Device class. This value should not be modified.
 - c. **Accuracy:** This field cannot be modified.
 - d. **Priority 2:** This is only used if the other parameters do not allow electing a PTP master.
 - e. **GMID:** This is the current GrandMasterID (PTP Master)
 - f. **Slave only:** This forces the Merging device to always be PTP slave.
 - g. **Delay Mech.:** This is PTP Profile related - E2E or P2P
 - h. **Announce:** This is PTP Profile related - PTP announcement interval (1 - 2 - 4 - 8 -16 seconds)
 - i. **Sync:** This is PTP Profile related (0.0625 - 0.125 - 0.25 - 0.5 seconds)

3. Status:

- a. **Lock:** This shows if the device is locked to PTP (Locked -Locking - Unlocked)
 - b. **Master:** This is true or false for the current device.
 - c. **GMID:** This is the current GrandMasterID (PTP Master)
 - d. **Delta (ns):** This is the time delta between the device and the PTP master.
4. **Graph:** The graph is only active for slave devices and shows the device delta against Master PTP clock.
5. **PTP Priority Value:**
- a. 1 is the highest priority, 255 the lowest one.
 - b. Merging card is by default using Priority 127 when set as PTP Master and 255 when PTP slave.

Getting Started | Session Sources

This tab defines which Streams are to be Sourced from this card. It is shown in the following figure.

Figure D-6: Getting Started | Session Sources

The screenshot shows a web interface for configuring session sources. On the left, a list of sessions (12, 13, 14, 15) is shown, each with a green arrow icon and a session ID. Session 12 is selected. The right pane displays the configuration for session 12. The configuration includes fields for IO (set to 12), Name (set to 12), Advertise (checked), Auto-unicast (unchecked), Address (set to 239.1.66.25), TTL (set to 15), Payload Type (set to 98), Codec (set to L24), Frame size (set to 64), DSCP (set to 34 (AF41)), RefClk PTP traceable (unchecked), Channel count (set to 8), and Channels (set to 1 - 8). A checkbox for 'user defined' is also present. At the bottom, the URL of the SDP session is displayed as <http://.../by-id/12>.

The elements of this tab are as follows:


1. **Create session button:** Create a new session sources by clicking on left ICON.
2. **IO:** Select the physical input (when applicable).
3. **Name:** This is the Source name.
4. **Advertise:** Check to enable source advertising on the network.
5. **Auto-unicast - (RTSP):** Check to automatically retrieve the sink (listener) IP address:port for unicast connection.
6. **Address:** This the stream's multicast address. Note that the user defined checkbox is activated automatically when entering a multicast address manually.
7. **TTL:** Time to Live (also called Hop Limit) - This value should not be modified.

8. **Payload type:** RTP Payload type - This value should not be modified.
9. **Codec:** The possible bit rate values are L24, L16, DSD64, DSD64_32, DSD128, DSD128_32, and DSD256. Note that these values are sampling rate dependent.
10. **Frame size (samples):** This the frame size of the current source.
11. **DSCP:** The audio DSCP should be set to 34 for RTP AES67 or 46 for RTP Ravenna.
12. **RefClk PTP traceable:** This feature is useful when you want to connect a stream through Internet (for example with two PTP Masters (GPS) at each location). This allows making connections with devices locked to different traceable PTP Masters. Refer also to Ignore RefClk GMID - accept source locked to any PTP master, on the Session Sinks tab.
13. **Channels:** This is the number of channels in the stream. The drop-down menu allows selection of specific channel range if the number of channels is less than 8.
14. **The URL of the SDP of this session:** This allows saving of the Session Description into a file, which is useful for specific third party devices if a manual SDP has to be provided.

Getting Started | Session Sinks

This tab defines streams which are sinked in this card. It is shown in the following figure.

Figure D-7: Getting Started | Session Sinks

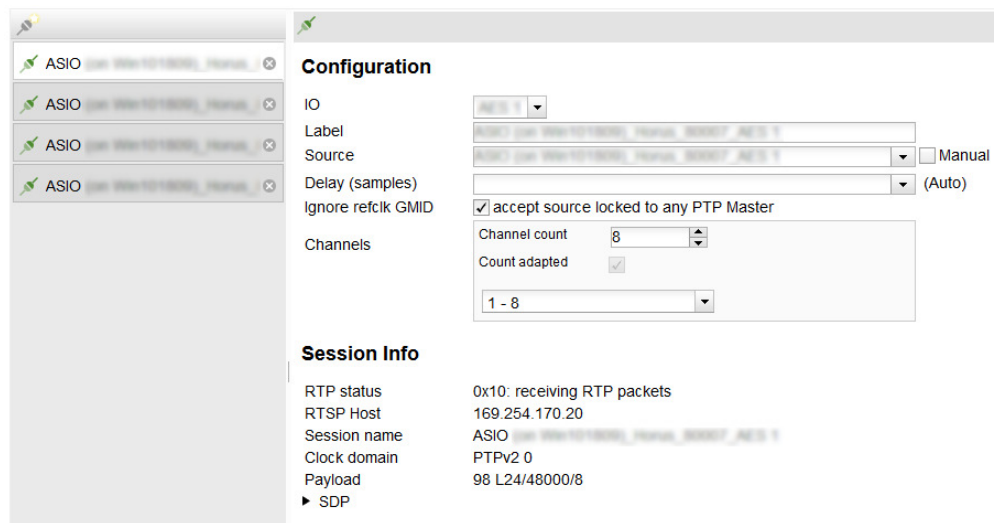

The elements of this tab are as follows:

1. **Create session button:** Create new session sinks by clicking on left ICON.
2. **IO:** Select the physical output (when applicable).
3. **Label:** This is the Sink name.
4. **Source:** This is a drop down menu to select a source (both sap and bonjour advertised sources are automatically listed).

5. **Manual:** This allows manual entry of an SDP.
6. **Delay (samples):** This sets the playback delay. 0 is automatic delay.
7. **Ignore RefClk GMID - accept source locked to any PTP master:** This feature is useful when you want to connect a stream through Internet (for example with two PTP Masters (GPS) at each location. This allows making of connections with devices locked to different traceable PTP Masters. See RefClk PTP traceable on the Session Sources tab.
8. **Channels:** Channel count: The drop-down menu allows selection of specific channel range if the number of channels is smaller than 8.

Getting Started | Session Info

1. **RTP Status:** The following bit positions indicate the connection status:

0x10: receiving RTP packets (OK)

0x01: wrong RTP sequence id

0x02: wrong RTP SSRC

0x04: wrong RTP payload type

0x08: wrong RTP SAC

0x20 stream has been muted

0x40: Horus implementation - an incoming stream is muted


Important Note: The above error numbers are summed. For example, Stream Muted and Wrong Payload together are indicated by 0x24.

2. **Playout Delay:** This is the current playout delay on the selected sink in samples and ms.
3. **RTSP Host:** This is the connected source IP Session name: defined in SDP (usually the same as the source name)
4. **Clock Domain:** This is the PTP clock type and domain
5. **Payload:** Selections are Payload / Codec / Sampling Rate / Number of Channels
6. **SDP:** This displays detailed SDP information on the current stream.

Getting Started | Ins/Outs

This tab allows you to change the name of the specific Inputs and/or Outputs.


Figure D-8: Getting Started | Ins/Outs

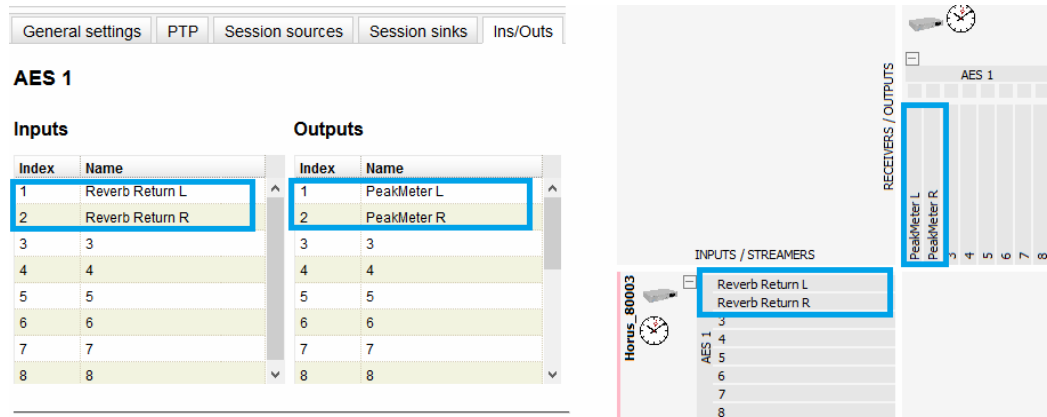

Getting Started | I/O Router

This page allows remapping of incoming channels to different internal channel assignments. For example, Stream channel 1 can be remapped to Merging card Channel 0, and so on.

Figure D-9: Getting Started | I/O Router

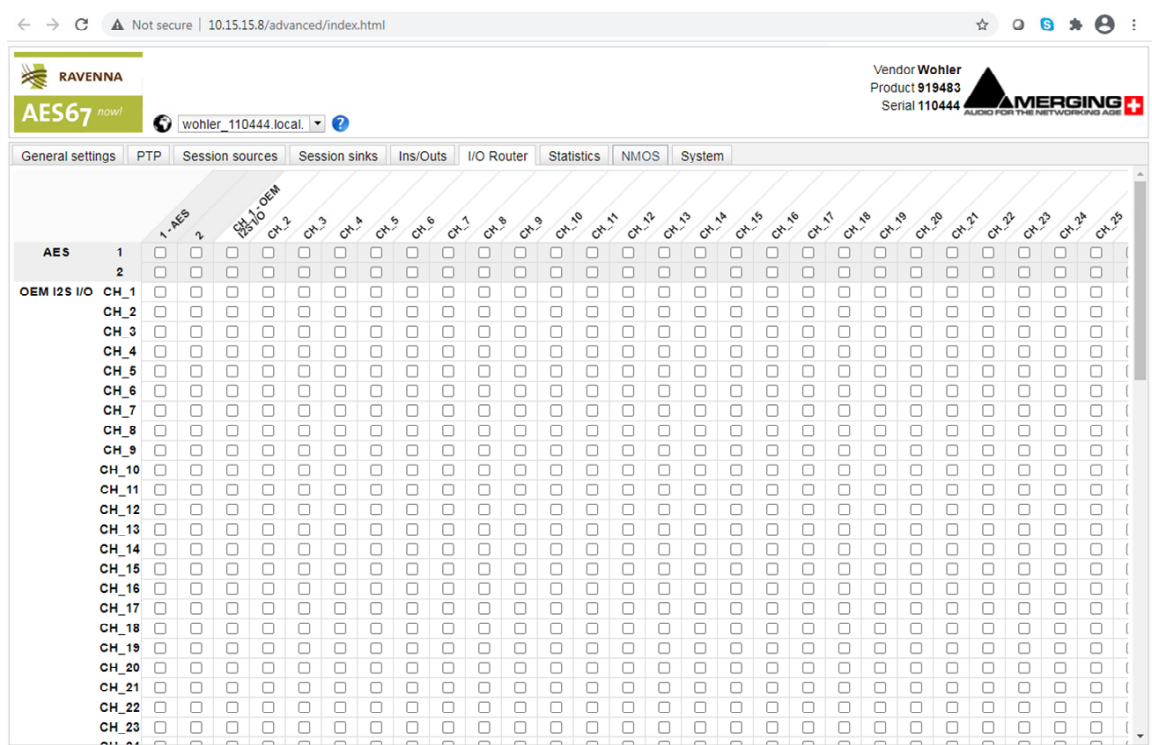

Operation:

Connecting Remote Source to Local Sink

This instruction assumes another Ravenna device is active on the network and sourcing a multicast stream. The Merging Configuration section for Session Sink controls how to configure the card to receive the stream and provide it to the iAM interface for display on meters and speakers, etc. The iAM or iVAM must be set to receive AOIP from the Source Select Front Panel menu or from a browser iAM or iVAM GUI.

Ravenna Streams can contain up to 8 channels of information. The collections of channels in a specific Stream are termed Flows. For example, to source an SDI 16 channel signal might be accomplished by two Flows, each consisting of 8 channels. A stereo AES Flow consists of one Flow of two channels.

ZMAN Session Sinks

This assumes that 1 or more sources are present on the AOIP Ravenna network. Right Select Advanced on the entry for the Merging ZMAN device in Aneman. This brings up the browser page with tab set to General configuration GUI for the ZMAN card. This is shown in Figure D-1.

Use the following procedure:


1. Select the **Session Sinks** tab and use the **Create Session Sinks** icon (in the upper left corner) to see the available source Flows.
2. Create an entry on the left panel for each source Flow to be configured.
3. Select the desired Flow and set the number of channels in the Flow. Select the desired range to direct the Flow to the internal channels of the iAM or iVAM.
4. Click the matrix, as shown in Figure D-10, to direct the incoming channels to the desired iAM or iVAM channels.

For example, a 16 channel SDI source consists of two 8 channel Flows. One could be mapped to channels 1-8 and the other could be mapped to 9-16.

Notice that the Tab I/O Router duplicates the Session Sinks matrix and can be used to map channels from input source assignments to iAM or iVAM channels also.

Input channels can be mapped to more than one iAM or iVAM channel by selecting additional matrix elements to map input channels 1-8 to both 1-3 and 5-8.

Figure D-10: Session Sinks Tab

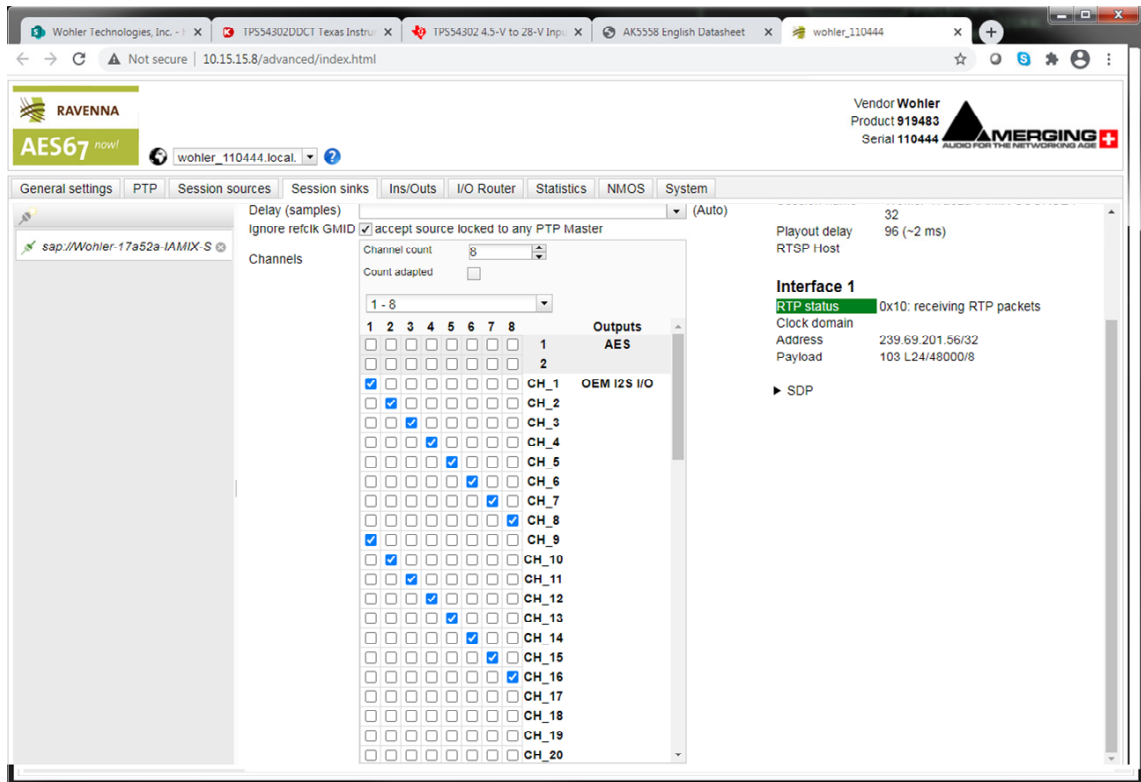

To avoid confusion if monitoring more than one Flow, especially if the various source Flows have overlapping channel numbers, use the matrix to direct Flows to higher channel ranges. For example, for monitoring 2 SDI sources (four 8 channel Flows), assign two flows to 1-8 and 9-16 and the next SDI signal to 17-24 and 25-32. Touch the iAM or iVAM AOIP selection menu to select the proper range to monitor, up to 57-64.

Select **Apply** to enable the Sink process, which results in the meters and audio becoming available on the iAM or iVAM.

ZMAN Session Sources

If the ZMAN card is to Source Flows, use the **Session Sources** tab. Refer to Figure D-11. The procedure is similar to defining Sinks with the additional step to provide the Flow a name to appear on other units in the network. Select the channel range with a maximum of 8 channels per Flow.

Figure D-11: Session Sources Tab

Vendor Wohler
Product 919483
Serial 110444

General settings PTP Session sources Session sinks Ins/Outs I/O Router Statistics NMOS System

Configuration

Enabled ☒

IO Stream

Name wohler_110444_2

Output Interface(s) Interface 1

Auto-unicast ☐ retrieve unicast address+port from sink (RTSP)

Address 239.1.15.8 ☐ user defined

Address sec ☐ user defined

TTL 15

Payload Type 98

Codec L24

Frame size (samples) 48

DSCP 34 (AF41)

RefCik PTP traceable ☐

Channels

Channel count 8


Inputs	1	2	3	4	5	6	7	8
AES 1	☐	☐	☐	☐	☐	☐	☐	☐
AES 2	☐	☐	☐	☐	☐	☐	☐	☐
OEM I2S I/O CH_1	☐	☐	☐	☐	☐	☐	☐	☐
CH_2	☐	☐	☐	☐	☐	☐	☐	☐
CH_3	☐	☐	☐	☐	☐	☐	☐	☐
CH_4	☐	☐	☐	☐	☐	☐	☐	☐
CH_5	☐	☐	☐	☐	☐	☐	☐	☐

ZMAN Updating

The ZMAN card is pre-initialized with the correct Wohler firmware load. In case of future upgrades, use the following steps:

1. The ZMAN module update manager is accessible using the ZMAN web interface. The default page displayed is as below.

Figure D-12: Default Screen

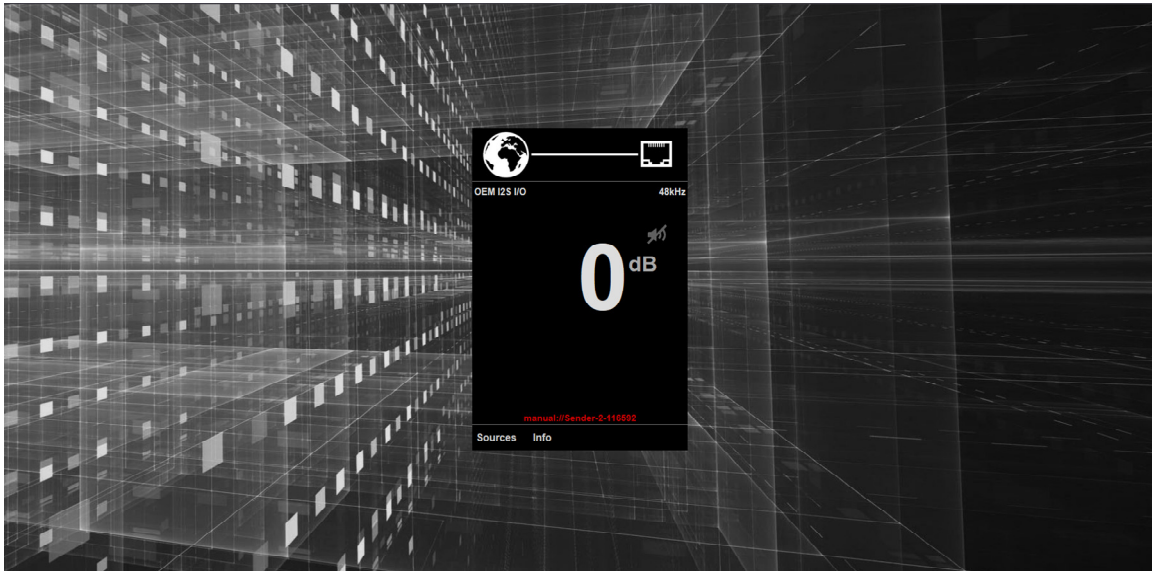

2. When this web page has loaded, select **Info** to navigate to the firmware update screen which appears as follows.

Figure D-13: Firmware Update Screen



3. Click the Firmware Update **Open** button.
4. When **Open** is selected, a new webpage allows you to select the firmware file. ZMAN firmware consists of custom firmware packages created by Wohler. Make sure that only firmware packages provided by Wohler are used

for updating the Wohler supplied ZMAN modules. Press the **Select File** as shown in the following figure.

Figure D-14: Firmware Selection Screen



5. Once **Select File** is pressed, the screen shown in the following figure is displayed. This brings up a web page which prompts for the location of the Wohler provided upgrade file. The file should resemble the following:

firmware_1.9.0_iVAM_wohler.oem

Select **Update** to begin the update process.

Figure D-15: Update File Selection Screen



6. The update takes 15-20 minutes to complete.

Please make sure the unit is not rebooted or shut down while the ZMAN update is in process.


While the update is taking place, the screen in the following figure is displayed. It will provide a running estimate of the percentage of the update that has been completed so far.

Figure D-16: Updating in Process Screen



7. When the update has been completed, the following screen is displayed. Click the **Reboot Device** button to reboot the ZMAN module after the successful update.

Figure D-17: Update Successful Screen

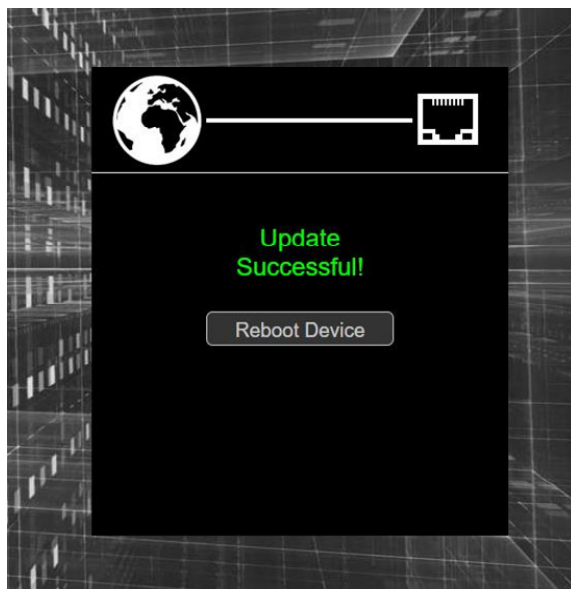

8. Close the web pages and return to Aneman to set up Sources and Sinks.

APPENDIX E: API Documentation

Introduction

This appendix discusses ways to use the Application Program Interface (API) to allow third party equipment to remotely access options and settings of the iVAM1-SUM16-G. It includes specific code examples for commonly used requests. The API uses JavaScript Object Notation (JSON) as its communication language.

Follow the instructions in the **First Time IP Assignments** section of Chapter 4 to achieve the required network connection.

API: Presets

1. GET Active Presets

Method: GET

/api/cf/presets/current

Example Response:

```
{
  "serial_number": "123456",
  "model": "SUM",
  "version": 1.3,
  "name": "",
  "result": {
    "group": {
      "Id": 1,
      "Name": "G1"
    },
    "preset": {
      "Data": null,
      "Favorite": 0,
      "Id": 2,
      "Name": "SDI_Manual"
    }
  }
}
```

2. GET Preset Configuration

Method: GET

/api/cf/presets/<int:preset ID>

Example Response:

```
{
  "error": null,
  "params": {
    "PresetId": 2
  },
  "result": {
    "GroupId": 1,
    "Favorite": 0,
    "Data": {
      "Name": {
        "Preset": "SDI_Autofill",
        "Program": "",
        "Group": "newGrpNameSdi"
      },
      "MeterSet": {
        "6": {
          "Speaker": "Right",
          "DelayMs": 0,
          "Source": {
            "Slot": 0,
            "Cage": 2,
            "Type": "SDI",
            "ConnectorType": "BNC",
            "Channel": 6,
            "InputNo": 1,
            "InputIndex": 1
          },
          "VolumeDb": 0
        },
        "8": {
          "Speaker": "Right",
          "DelayMs": 0,
          "Source": {
            "Slot": 0,
            "Cage": 2,
            "Type": "SDI",
            "ConnectorType": "BNC",
            "Channel": 8,
            "InputNo": 1,
            "InputIndex": 1
          }
        }
      }
    }
  }
}
```

```

    },
    "VolumeDb": 0
  },
  "13": {
    "Speaker": "Left",
    "DelayMs": 0,
    "Source": {
      "Slot": 0,
      "Cage": 0,
      "Type": "None",
      "ConnectorType": "None",
      "Channel": 0,
      "InputNo": 0,
      "InputIndex": 0
    },
    "VolumeDb": 0
  },
  "14": {
    "Speaker": "Right",
    "DelayMs": 0,
    "Source": {
      "Slot": 0,
      "Cage": 0,
      "Type": "None",
      "ConnectorType": "None",
      "Channel": 0,
      "InputNo": 0,
      "InputIndex": 0
    },
    "VolumeDb": 0
  },
  "3": {
    "Speaker": "Left",
    "DelayMs": 0,
    "Source": {
      "Slot": 0,
      "Cage": 2,
      "Type": "SDI",
      "ConnectorType": "BNC",
      "Channel": 3,
      "InputNo": 1,
      "InputIndex": 1
    },
    "VolumeDb": 0
  },
  "9": {
    "Speaker": "Left",
    "DelayMs": 0,
    "Source": {
      "Slot": 0,
      "Cage": 0,

```

```

        "Type": "None",
        "ConnectorType": "None",
        "Channel": 0,
        "InputNo": 0,
        "InputIndex": 0
    },
    "VolumeDb": 0
},
"10": {
    "Speaker": "Right",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 0,
        "Type": "None",
        "ConnectorType": "None",
        "Channel": 0,
        "InputNo": 0,
        "InputIndex": 0
    },
    "VolumeDb": 0
},
"5": {
    "Speaker": "Left",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 2,
        "Type": "SDI",
        "ConnectorType": "BNC",
        "Channel": 5,
        "InputNo": 1,
        "InputIndex": 1
    },
    "VolumeDb": 0
},
"4": {
    "Speaker": "Right",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 2,
        "Type": "SDI",
        "ConnectorType": "BNC",
        "Channel": 4,
        "InputNo": 1,
        "InputIndex": 1
    },
    "VolumeDb": 0
},
"12": {

```

```

        "Speaker": "Right",
        "DelayMs": 0,
        "Source": {
            "Slot": 0,
            "Cage": 0,
            "Type": "None",
            "ConnectorType": "None",
            "Channel": 0,
            "InputNo": 0,
            "InputIndex": 0
        },
        "VolumeDb": 0
    },
    "11": {
        "Speaker": "Left",
        "DelayMs": 0,
        "Source": {
            "Slot": 0,
            "Cage": 0,
            "Type": "None",
            "ConnectorType": "None",
            "Channel": 0,
            "InputNo": 0,
            "InputIndex": 0
        },
        "VolumeDb": 0
    },
    "7": {
        "Speaker": "Left",
        "DelayMs": 0,
        "Source": {
            "Slot": 0,
            "Cage": 2,
            "Type": "SDI",
            "ConnectorType": "BNC",
            "Channel": 7,
            "InputNo": 1,
            "InputIndex": 1
        },
        "VolumeDb": 0
    },
    "2": {
        "Speaker": "Right",
        "DelayMs": 0,
        "Source": {
            "Slot": 0,
            "Cage": 2,
            "Type": "SDI",
            "ConnectorType": "BNC",
            "Channel": 2,
            "InputNo": 1,

```

```

        "InputIndex": 1
    },
    "VolumeDb": 0
},
"15": {
    "Speaker": "Left",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 0,
        "Type": "None",
        "ConnectorType": "None",
        "Channel": 0,
        "InputNo": 0,
        "InputIndex": 0
    },
    "VolumeDb": 0
},
"1": {
    "Speaker": "Left",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 2,
        "Type": "SDI",
        "ConnectorType": "BNC",
        "Channel": 1,
        "InputNo": 1,
        "InputIndex": 1
    },
    "VolumeDb": 0
},
"16": {
    "Speaker": "Right",
    "DelayMs": 0,
    "Source": {
        "Slot": 0,
        "Cage": 0,
        "Type": "None",
        "ConnectorType": "None",
        "Channel": 0,
        "InputNo": 0,
        "InputIndex": 0
    },
    "VolumeDb": 0
}
},
"DolbyDecoderConf": null,
"Clusters": [
    {
        "Name": "Stereo 2.0 #1",

```



```

        "NumberOfMeters": 2,
        "FirstMeter": 1,
        "Type": "Stereo",
        "MuteOnPresetRecall": true
    },
    {
        "Name": "Stereo 2.0 #2",
        "NumberOfMeters": 2,
        "FirstMeter": 3,
        "Type": "Stereo",
        "MuteOnPresetRecall": true
    },
    {
        "Name": "Stereo 2.0 #3",
        "NumberOfMeters": 2,
        "FirstMeter": 5,
        "Type": "Stereo",
        "MuteOnPresetRecall": true
    },
    {
        "Name": "Stereo 2.0 #4",
        "NumberOfMeters": 2,
        "FirstMeter": 7,
        "Type": "Stereo",
        "MuteOnPresetRecall": true
    },
    {
        "Name": "Stereo 2.0 #5",
        "NumberOfMeters": 2,
        "FirstMeter": 9,
        "Type": "Stereo",
        "MuteOnPresetRecall": true
    },
    {
        "Name": "Stereo 2.0 #6",
        "NumberOfMeters": 2,
        "FirstMeter": 11,
        "Type": "Stereo",
        "MuteOnPresetRecall": true
    },
    {
        "Name": "Stereo 2.0 #7",
        "NumberOfMeters": 2,
        "FirstMeter": 13,
        "Type": "Stereo",
        "MuteOnPresetRecall": true
    },
    {
        "Name": "Stereo 2.0 #8",
        "NumberOfMeters": 2,
        "FirstMeter": 15,

```

```

        "Type": "Stereo",
        "MuteOnPresetRecall": true
    }
},
"DolbyInputSource": {
    "Slot": 0,
    "Cage": 0,
    "Type": "None",
    "ConnectorType": "None",
    "InputNo": 0,
    "Pair": 0
},
"VideoSource": {
    "Slot": 0,
    "Type": "None",
    "InputNo": 0
},
"ConnectorTypeOptions": {
    "0": {
        "MADI": {
            "1": {
                "MADI": {
                    "ConnectorTypeOption": "BNC"
                }
            }
        }
    }
},
"ApplyCdlb": true,
"ApplyCor": true,
"SpeakerDelayMs": 0,
"AudioOutputRouting": null,
"SystemClockSource": {
    "Slot": 0,
    "Cage": 2,
    "Type": "SDI",
    "ConnectorType": "BNC",
    "InputNo": 1,
    "Pair": 1
},
"PhasePairs": 254,
"ApplyCpi": true,
"DolbyDetection": {
    "NonAudio": "Enabled",
    "PaHeader": "Enabled"
},
"ApplyDZMeterScreen": false
},
"PresetId": 2,
"PresetName": "SDI_Autofill",
"GroupName": "newGrpNameSdi"

```

```
}
}
```

3. GET list of groups/presets

Method: GET

/api/cf/groups

Example Response:

```
{
  "params": null,
  "error": null,
  "result": [
    {
      "Presets": [
        {
          "Favorite": 0,
          "Id": 3,
          "Name": "SDI_Autofill"
        },
        {
          "Favorite": 0,
          "Id": 2,
          "Name": "SDI_Manual"
        }
      ],
      "Id": 1,
      "Name": "G1"
    }
  ]
}
```

4. GET to recall the preset

Method: GET

api/op/presets/<int:presetID>/activate

Example Response:

```
{
  "params": {
    "PresetId": 2
  },
  "error": null,
  "result": {
    "GroupId": 1,
    "PresetName": "SDI_Manual",
    "GroupName": "G1",
  }
}
```

```
        "PresetId": 2
      }
    }
  }
```

5. POST to delete the group

Method: POST

api/op/group/<int:groupID>/delete

Example Response:

```
{
  "params": {
    "GroupId": 2
  },
  "error": null,
  "result": {
    "GroupId": 2
  }
}
```

6. POST to delete the preset

Method: POST

api/op/preset/<int:presetID>/delete

Example Response:

```
{
  "params": {
    "PresetId": 1
  },
  "error": null,
  "result": {
    "PresetId": 1
  }
}
```

7. POST to rename group

Method: POST

/api/op/group/<int:groupID>/newGrpNameSdi/rename

Example Response:

```
{
  "params": {
    "GroupId": 1,
    "GroupName": "newGrpNameSdi"
  },
  "error": null,
  "result": {
    "GroupId": 1,
    "GroupName": "newGrpNameSdi"
  }
}
```

```

    "error": null,
    "result": {
      "GroupId": 1,
      "GroupName": "newGrpNameSdi"
    }
  }
}

```

8. POST to rename preset

Method: POST

/api/op/preset/<int:presetID>/newPresetNameTest/rename

Example Response:

```

{
  "error": null,
  "params": {
    "PresetId": 1,
    "PresetName": "newPresetNameTest"
  },
  "result": {
    "PresetId": 1,
    "PresetName": "newPresetNameTest"
  }
}

```

9. POST to set preset as Favorite

Method: POST

/api/op/preset/<int:presetID>/<favoriteVal>/favorite

Example Response:

```

{
  "error": null,
  "params": {
    "PresetId": 4,
    "Favorite": 1
  },
  "result": {
    "PresetId": 4,
    "Favorite": 1
  }
}

```

10. Source Select

Method: POST

/api/op/sourceselect

1. Body content for SDI/SMPTE-2022-6/ SMPTE-2110

```
{
  "SourceType": "<String: SDI Input Source>",
  "ChannelGroup": <Int: 1-2>
}
```

Note: Allowed SDI input sources are:

```
"Bnc-1.Sdi",
"Bnc-2.Sdi",
"Bnc-3.Sdi",
```

```
"Sfp-1.Sdi",
"Sfp-1.Smpte2022",
"Sfp-1.Smpte2110",
```

```
"Sfp-2.Sdi",
"Sfp-2.Smpte2022",
"Sfp-2.Smpte2110",
```

```
"Sfp-3.Sdi",
"Sfp-3.Smpte2022",
"Sfp-3.Smpte2110",
```

e.g.

```
{
  "SourceType": "Sfp-1.Smpte2022",
  "ChannelGroup": 2
}
```

2. Body content for MADI

```
{
  "SourceType": <String: MADI Input Source>,
  "ChannelGroup": <Int: 1-8>
}
```

Note: Allowed MADI input sources are

```
"Madi.Coax" and
"Madi.Optical"
```

ChannelGroup 1 => Channels 1-8 and

ChannelGroup 2 => Channels 9-16 and so on

e.g.

```
{
  "SourceType": "Madi.Coax",
  "ChannelGroup": 6
}
```

```
}
```

3. Body content for Analog

```
{  
  "SourceType": "Analog.XLR"  
}  
{  
  "SourceType": "Analog.DB25"  
}  
{  
  "SourceType": "Unbal-Analog-1"  
}  
{  
  "SourceType": "Unbal-Analog-2"  
}
```

4. Body content for Aes

```
{  
  "SourceType": "Aes"  
}
```

5. Body content for Aoip

```
{  
  "SourceType": "Aoip",  
  "ChannelGroup": <Int: 1-8>  
}
```

Note: ChannelGroup 1 => Channels 1-8 and
ChannelGroup 2 => Channels 9-16 and so on

6. Body content for TOSLINK

```
{  
  "SourceType": "Toslink"  
}
```

Example Response:

```
{  
  "unit_name": "",  
  "model": "iVAM1-SUM",  
  "api_version": 1,  
  "message": "Input Source Toslink has been applied successfully",  
  "serial_number": "123456",  
}
```

```
}      "status": 200
```


APPENDIX F: Out of Band Control

Introduction

This appendix describes how exert Out of Band control over the optional SFP-2110 module furnished by Wohler Technologies and manufactured by Embrionix.

It supports following features:

SFP IP Address Configuration

You may change the IP address of a 2110 or 2022-6 SFP. This can be done using the **System Setup | Sfp Information | Network** tab of the Wohler Web Server, as shown in Figure F-1.


Figure F-1: SFP IP Address Configuration

The screenshot displays the 'System Setup' interface of the Wohler Web Server. On the left is a dark sidebar menu with options: Preset Management, System Setup, Audio Meters, Configuration (expanded), Mgmt IP Address, System Preferences, Global Output Routing, SFP 2110 Global Setup, Import/Export Presets, System (expanded), System Update, Remote System Update, Preset Replication, Factory Reset, and Reboot System. The main content area is titled 'System Setup' and has tabs for 'System Information', 'SFP Information', and 'Licenses'. Under 'SFP Information', there's a dropdown for 'SFP Slot 1' and a label 'SMPTE-2110'. Below this is a 'Network Configuration' section with a 'Use DHCP?' checkbox (unchecked). It contains input fields for 'IP Address' (10.161.93.37), 'IP Mask' (255.0.0.0), and 'Gateway Address' (10.160.1.2). To the right, there are fields for 'Name' (emstp-a1-5d-24) and 'MAC' (40:a3:6b:a1:5d:24). 'Apply' and 'Reset' buttons are at the bottom of the network configuration box. Below the first slot, there's a dropdown for 'SFP Slot 2'.

SFP System Configuration

You may change the Personality of an SFP using the **System Setup | SFP Information | Personality** tab of the Wohler Web Server. If the Embrionix SFP is a combo SFP module, you may also switch from 2110 to 2022 using this feature. All the personalities loaded on a SFP are displayed on the tab, as shown in Figure F-2.


Figure F-2: SFP Personality Configuration

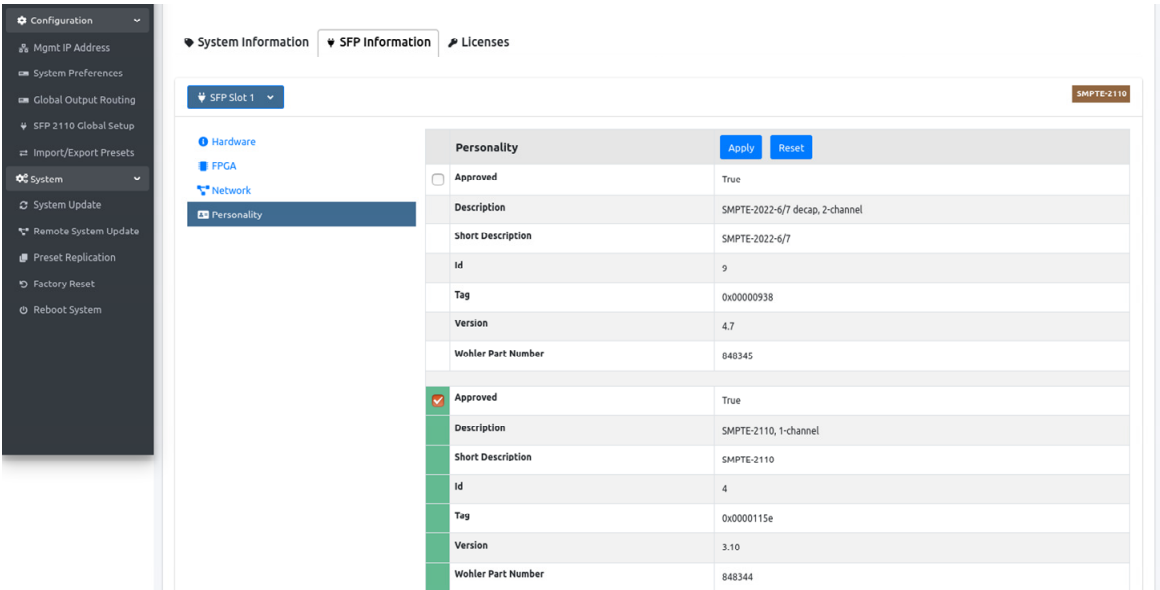

SFP 2110 Configuration

If a 2110 firmware is loaded, the Wohler Web-GUI can be used to configure Audio/Video Flows of the SFP. The **Out of Band On/Off Switch** at the top of the **SFP 2110 Global Setup** page controls whether the out of band settings will be applied to the SFP or not. If the SFP is controlled through an In Band mechanism either using NMOS/Ember+ or MNSET, this setting should be kept **Off**. This is shown in Figure F-3.

Figure F-3: Out of Band Switch: **Off** Position

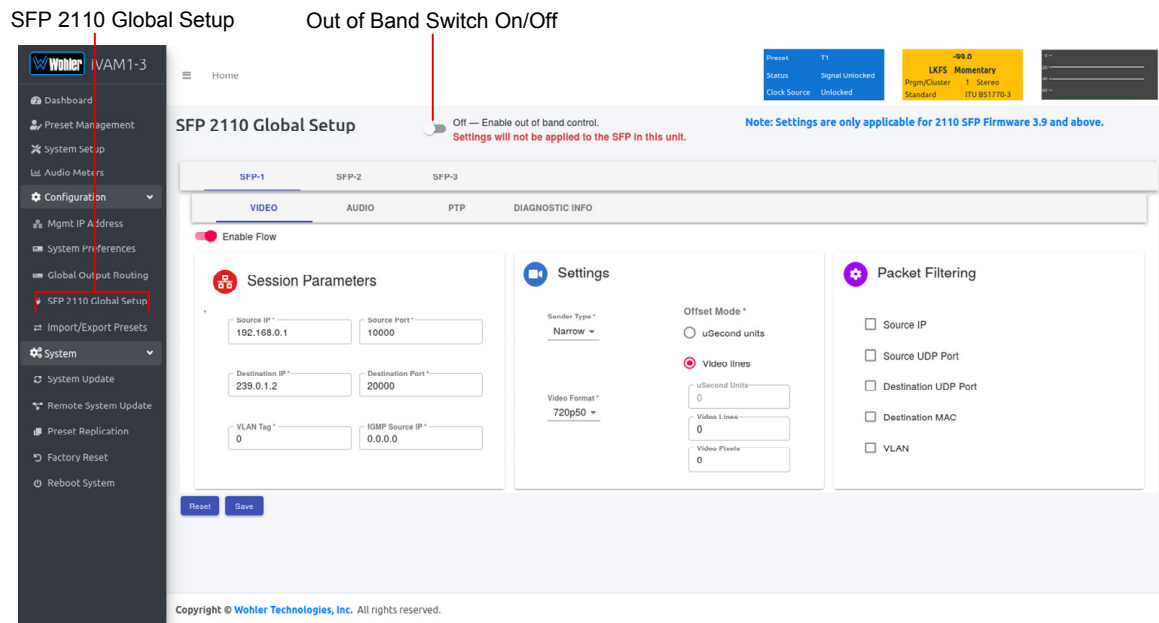

When the **Out of Band On/Off Switch** is turned **On**, as shown in Figure F-4, the Wohler monitor will internally communicate with the SFP to configure the flow information.

Figure F-4: Out of Band Switch: On Position

SFP 2110 Global Setup Out of Band Switch On/Off

The screenshot shows the 'SFP 2110 Global Setup' page. On the left is a navigation menu with 'SFP 2110 Global Setup' highlighted. The main content area has a toggle switch for 'Out of Band Switch' set to 'On'. Below this, there are tabs for 'VIDEO', 'AUDIO', 'PTP', and 'DIAGNOSTIC INFO'. The 'VIDEO' tab is active, showing 'Session Parameters' (Source IP: 192.168.0.1, Source Port: 10000, Destination IP: 239.0.1.2, Destination Port: 20002, VLAN Tag: 0, IGMP Source IP: 0.0.0.0), 'Settings' (Sender Type: Narrow, Video Format: 720p30), and 'Packet Filtering' (Source IP, Source UDP Port, Destination UDP Port, Destination MAC, and VLAN are checked). A note at the top right states: 'Note: Settings are only applicable for 2110 SFP Firmware 3.9 and above.'

You may define a global configuration using the “SFP 2110 Global Setup” or define it on per Preset basis. Refer to the **SFP 2110 Preset Setup** section later in this Appendix. The global configuration will be used for Source Select. Refer Figures F-3 and F-4 for Video parameters. Refer to Figures F-5 and F-6 for Audio parameters. Refer to Figure F-7 for PTP parameters.

Figure F-5: Audio Parameters

The screenshot shows the 'SFP 2110 Global Setup' page with the 'AUDIO' tab selected. The 'AUDIO 1' sub-tab is active. The 'Session Parameters' section shows Source IP: 192.168.0.1, Source Port: 10000, Destination IP: 239.0.1.4, Destination Port: 20000, VLAN Tag: 10, and IGMP Source IP: 2.2.2.2. The 'Settings' section shows Number of Channels: 2, Audio Format: Uncompressed, and Package Time: 1 ms. The 'Packet Filtering' section shows Source IP, Source UDP Port, Destination UDP Port, Destination MAC, and VLAN are checked. A note at the top right states: 'Note: Settings are only applicable for 2110 SFP Firmware 3.9 and above.'

Figure F-6: Audio Parameters

The screenshot shows the 'SFP 2110 Global Setup' page for the 'AUDIO 2' tab. The interface includes a left sidebar with navigation options like Dashboard, Preset Management, System Setup, Audio Meters, Configuration, and System. The main content area is titled 'SFP 2110 Global Setup' and features a toggle for 'Enable out of band control'. Below this, there are tabs for SFP-1, SFP-2, and SFP-3, with sub-tabs for VIDEO, AUDIO, PTP, and DIAGNOSTIC INFO. The 'AUDIO 2' sub-tab is selected, showing 'Session Parameters' (Source IP: 192.168.0.1, Source Port: 10000, Destination IP: 239.0.1.0, Destination Port: 20000, VLAN Tag: 0, IGMP Source IP: 1.1.1.1), 'Settings' (Number of Channels: 2, Audio Format: Uncompressed, Package Time: 1 ms), and 'Packet Filtering' (Destination UDP Port checked). A 'Reset' button and an 'Apply' button are at the bottom. A copyright notice for Wohler Technologies, Inc. is at the very bottom.


Figure F-7: PTP Parameters

The screenshot shows the 'SFP 2110 Global Setup' page for the 'PTP' tab. The interface is similar to the previous one, but the 'PTP' sub-tab is selected. It displays 'PTP Mode' set to 'Multicast', 'PTP Master' set to 'Auto', 'Domain Number' as 127, 'VLAN ID' as 0, and 'DSCP' as 46. There are 'Reset' and 'Apply' buttons at the bottom. The copyright notice for Wohler Technologies, Inc. is also present.

SFP 2110 Preset Config

SFP 2110 Configuration may be performed by Preset. Click the **SFP Config** button on the Preset Management screen, as shown in Figure F-8.

Figure F-8: SFP 2110 Preset SFP Configuration Enable

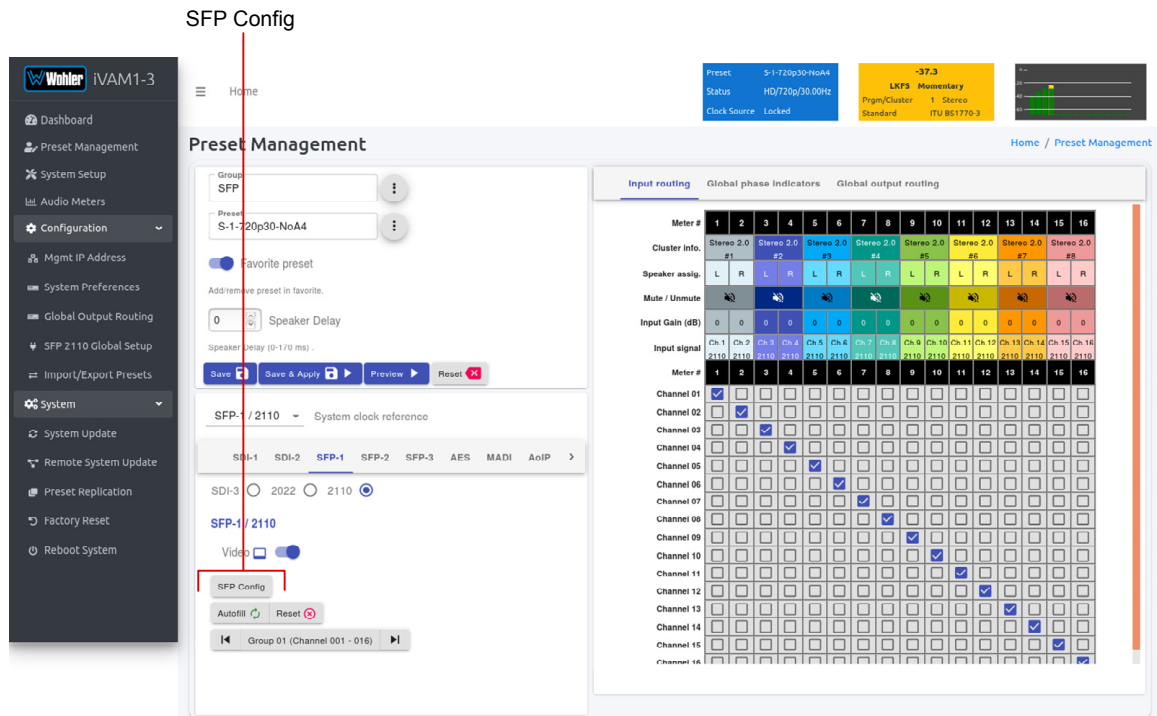

After clicking the **SFP Config** button, the **SFP 2110 Setup Screen** will appear, as shown in Figure F-9. Make the settings you need for this Preset and then click **Close**.

Figure F-9: SFP 2110 Setup Screen

SFP 2110 Setup

☐ Use global 2110 SFP Config ☒ Customize specific settings for this preset

VIDEO AUDIO PTP

☒ Enable Flow

Session Parameters

Source IP: 192.168.0.1 Source Port: 10000

Destination IP: 239.0.1.2 Destination Port: 20000

VLAN Tag: 0 IGMP Source IP: 0.0.0.0

Settings

Sender Type: Narrow

Offset Mode: ☐ uSecond units ☒ Video lines

Video Format: 720p30

uSecond Units: 0

Video Lines: 0

Video Pixels: 0

Packet Filtering

☒ Source IP

☐ Source UDP Port

☒ Destination UDP Port

☒ Destination MAC

☐ VLAN

Close

Diagnostic Information

In addition to the configuration parameters, a Diagnostic Info pages exist to show the current flow information for a 2110 or 2022 SFP. This page is auto refreshed every 10 seconds to fetch the latest information from the SFP. The diagnostic information is always available even when the "Out of band" control is turned off. Refer to Figures F-10, F-11, and F-12 for descriptions of the information available.

Figure F-10: Diagnostic Information

SFP 2110 Global Setup

☒ On — Enable out of band control. Settings will be applied to the SFP in this unit. Note: Settings are only applicable for 2110 SFP Firmware 3.9 and above.

SFP-1 SFP-2 SFP-3

VIDEO AUDIO PTP **DIAGNOSTIC INFO**

Status will be refreshed in 9 secs

Personality

Description: SMPTE-2110 v3.9

Network

Address: 10.161.93.37

Net Mask: 255.0.0.0

MAC: 40:83:00:a1:5d:24

DHCP: No

PTP

Status: **Fine Locked**

GMID: 30-u6-09-f1e-01-af-df

Domain: 46

DECP: 0

VLAN ID: 0

Video

Sender Type: Narrow

Sequence Error: 256

Destination IP: 239.0.1.2

Destination Port: 20000

Packet Count: 116036611

Video Format: 720p30

VLAN ID: 0

Reference

Offset Mode: 0

Video Pixels: 0

Video Lines: 0

Audio Delay: 0

Audio 1

Destination IP: 239.0.1.4

Destination Port: 20000

Packet Count: 1797728

Packet Time: 1ms

Sampling Rate: 48000

VLAN ID: 0

Audio 2

Destination IP: 239.0.1.6

Destination Port: 20000

Packet Count: 1804628

Packet Time: 1ms

Sampling Rate: 48000

VLAN ID: 0

Audio 3

Destination IP: 239.0.1.8

Destination Port: 20000

Packet Count: 0

Packet Time: 1ms

Sampling Rate: 48000

VLAN ID: 0

Audio 4

Enable Flow: No

Figure F-11: Diagnostic Information

SFP 2110 Global Setup

On — Enable out of band control.
Settings will be applied to the SFP in this unit.

Note: Settings are only applicable for 2110 SFP Firmware 3.6 and above.

DIAGNOSTIC INFO

Status will be refreshed in 6 secs

Category	Item	Value
Personality	Description	SMPTE-2110 v3.10
	Network	
Network	Address	10.161.111.235
	Net Mask	255.0.0.0
	MAC	40:a0:0b:a1:6f:ea
	DHCP	No
	DHCP	No
PTP	Status	UnLocked
	GMII	00-90-56-5f-10-04-40
	Domain	0
	DSCP	46
	VLAN ID	0
Video	Sender Type	Narrow
	Sequence Error	286
	Destination IP	239.0.1.2
	Destination Port	20000
	Packet Count	0
Reference	Video Lines	0
	Audio Delay	0
Audio 1	Destination IP	239.0.1.4
	Destination Port	20000
	Packet Count	0
	Packet Time	1ms
	Sampling Rate	48000
Audio 2	Destination IP	239.0.1.6
	Destination Port	20000
	Packet Count	0
	Packet Time	1ms
	Sampling Rate	48000
Audio 3	Destination IP	239.0.1.8
	Destination Port	20000
	Packet Count	0
	Packet Time	1ms
	Sampling Rate	48000
Audio 4	Destination IP	239.0.1.10
	Destination Port	20000
	Packet Count	0
	Packet Time	1ms
	Sampling Rate	48000

Reset Apply

Figure F-12: Diagnostic Information

SFP 2110 Global Setup

On — Enable out of band control.
Settings will be applied to the SFP in this unit.

Note: Settings are only applicable for 2110 SFP Firmware 3.9 and above.

DIAGNOSTIC INFO

Status will be refreshed in 7 secs

Category	Item	Value
Personality	Description	SMPTE-2022-67 v4.7
	Network	
Network	Address	10.161.111.235
	Net Mask	255.0.0.0
	MAC	40:a0:0b:a1:6f:ea
	DHCP	No
	DHCP	No
2022 Flow	Alive	No
	Diagram Rate	0
	Destination IP	239.0.1.2
	Destination Port	20000
	Packet Count	0
Reference	Video Lines	0
	Audio Delay	0

Reset Apply

Copyright © Wohler Technologies, Inc. All rights reserved.

APPENDIX G: 2110 SFP Personalities

Introduction

Wohler currently offers two variants of the 2110 SFPs:

1. 2110 with NMOS or Ember+
2. 2110+2022-6 with NMOS or Ember+


The primary distinction between these options lies in the firmware, or "Personality," loaded onto the SFP. Both the firmware and the SFPs are supplied by Embrionix. For the Combo-SFP, the Embrionix SFP is loaded with both NMOS and Ember+ firmware, with NMOS firmware set as the default.

If it becomes necessary to switch to the Ember+ personality, this can be done changing the SFP Firmware Configuration. This Appendix describes the method to make this change.

Personality Change

Locate the Combo SFP IP Address on the SFP Information Tab of the System page. Refer to Figure G-1, which shows the System page of a typical Wohler iAM or iVAM product.

Figure G-1: Combo SFP Address Location

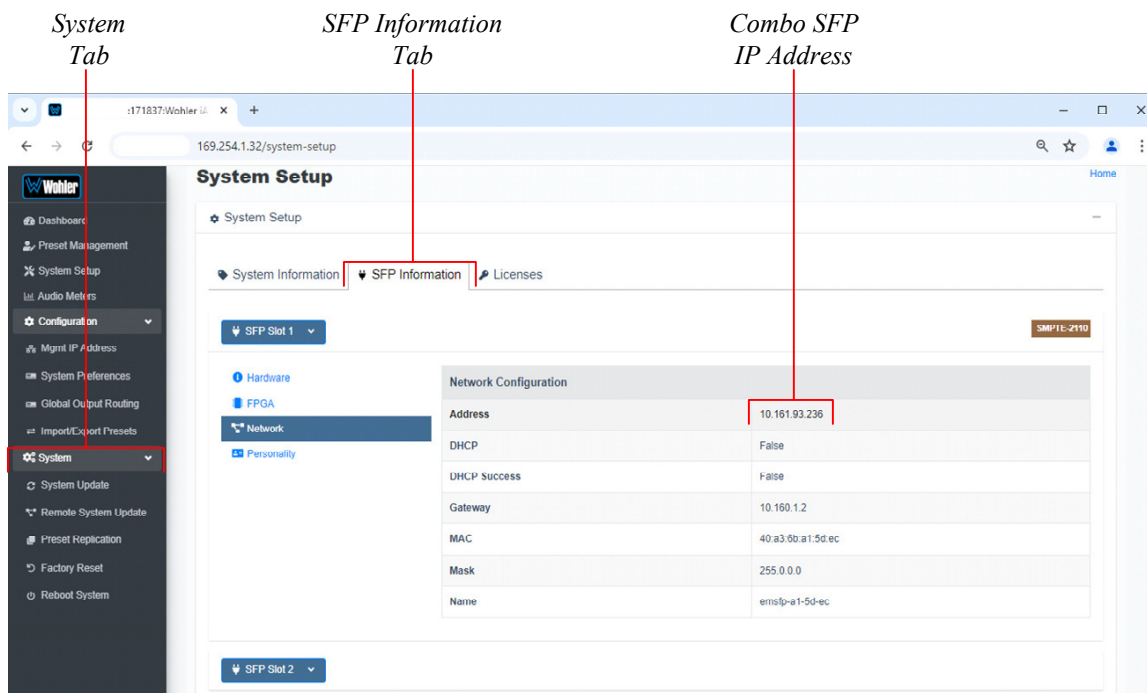

The following example will illustrate the steps to take in order to change from **2110 NMOS** to **2022-6**.

First open a new web page in a pc using Google Chrome, and type in the Combo SFP IP Address you located in Figure G-1. That address was 10.161.93.236. The Embrionix Support screen will appear as in Figure G-2 showing the configuration of the Combo SFP:

Figure G-2: Embrionix Support Screen

Element *Description* *Action Buttons*

Element	Product	Description	Version	Tag	Size	CRC	Default	Action
0	4	DEC_2110_1ch_-31-E+_SFP	3.9	4417	4173824	2937EAB9	No	Load Now Clear
1	9	DEC_2022-6_1ch_NoOut_SFP_470	4.7	2360	4173824	27C43BD5	No	Load Now Clear
2	4	DEC_2110_1ch_-31-ISO4_SFP	3.12	4497	4173824	4730CCF5	Yes	Load Now Set As Default
3								Clear Upload Choose File No file chosen

There are four Personality locations in the SFP, as listed in the Elements column:

- Element 0: 2110 **EMBER+** (Note that the Description contains **E+**.)
- Element 1: **2022-6** (Note that the Description contains **2022-6**.)
- Element 2: **2110 NMOS** (Note that the Description contains **ISO4**.)
- Element 4: (empty)

Note that Element 2 is back lighted in green to show that it is the currently selected Default Personality. This is the Personality that is automatically selected when the product powers on.

To change from the **2110 NMOS** Personality to the **2022-6** Personality, perform the following two steps which follow this important caution:

Caution: In performing these steps, **Do Not click on the Clear button**. Doing this would permanently delete the Personality from the SFP module.

1. Click the **Load Now** button in the **Action** column of the **Element 1** row. Wait 5 seconds until the **Set As Default** button appears in the Action column of the **Element 1** row.
2. Click on the **Set As Default** button which has now appeared in the **Element 1** row. **2022-6** is now the Default Personality, and the screen should appear as shown in Figure G-3.

Figure G-3 – New Personality Selected

Element 1
Selected

Load Now
Button

Do Not Press the
Clear Buttons

Embrionix Configuration

Not secure 10.161.93.236/config

Embrionix Support

Email : support@embrionix.com

Phone Number : +1.450.688.8171 ext 0

Loaded Firmware

Version 4.7 (Nov 4 2019 09:48:44)

Tag 00000938 (Element 1)

Firmware Configuration

Element	Product	Description	Version	Tag	Size	CRC	Default	Action
0	4	DEC_2110_1ch_-31-E+_SFP	3.9	00001141	4173824	2937EAB9	No	Load Now Clear
1	9	DEC_2022-6_1ch_NoOut_SFP_470	4.7	00000938	4173824	27C43BD5	Yes	Load Now Set As Default
2	4	DEC_2110_1ch_-31-IS04_SFP	3.12	00001191	4173824	4730CCF5	No	Load Now Clear
3								Upload Choose File No file chosen

This completes the procedure.